

**DE DATA  
EAST**



**DATA EAST PINBALL®**

1990 Janice Avenue  
Melrose Park, IL 60160  
708-345-7700  
FAX 708-345-7718  
**1-800-KICKERS**

Copyright © Data East Pinball, Inc. 1993

780-5020-00

## CPU JUMPER TABLE

Game	CPU* Version	ROM Location	Jumpers	
			Installed	Removed
Playboy	Ver 2	5B,5C	J1b,J3,J4,J5b,J6b,J7b,&J8	J1a,J2,J5,J5a,J6a,&J7a
ABC M.N. Football	Ver 2	5B,5C	J1b,J3,J4,J5b,J6b,J7b,&J8	J1a,J2,J5,J5a,J6a,&J7a
Robocop	Ver 2	5B,5C	J1b,J3,J4,J5b,J6b,J7b,&J8	J1a,J2,J5,J5a,J6a,&J7a
Phantom of the Opera	Ver 2	5B,5C	J1b,J3,J4,J5b,J6b,J7b,&J8	J1a,J2,J5,J5a,J6a,&J7a
Back to the Future	Ver 3	5B,5C	J1b,J3,J4,J5b,J6b,J7b,&J8	J1a,J2,J5,J5a,J6a,&J7a
The Simpsons	Ver 3	5B,5C	J1b,J3,J4,J5b,J6b,J7b,&J8	J1a,J2,J5,J5a,J6a,&J7a
Checkpoint	Ver 3	5B,5C	J1b,J3,J4,J5b,J6b,J7b,&J8	J1a,J2,J5,J5a,J6a,&J7a
Teen. Mut. Ninja Turtles	Ver 3	5B,5C	J1b,J3,J4,J5b,J6b,J7b,&J8	J1a,J2,J5,J5a,J6a,&J7a
Batman	Ver 3	5B,5C	J1b,J3,J4,J5b,J6b,J7b,&J8	J1a,J2,J5,J5a,J6a,&J7a
Star Trek	Ver 3	5C	J1b,J3,J5,J5b,J6b,J7b,&J8	J1a,J2,J4,J5a,J6a,&J7a
Hook	Ver 3	5C	J1b,J3,J5,J5b,J6b,J7b,&J8	J1a,J2,J4,J5a,J6a,&J7a
Lethal Weapon 3	Ver 3	5C	J1b,J3,J5,J5b,J6b,J7b,&J8	J1a,J2,J4,J5a,J6a,&J7a
Star Wars	Ver 3	5C	J1b,J3,J5,J5b,J6b,J7b,&J8	J1a,J2,J4,J5a,J6a,&J7a
Rocky & Bullwinkle	Ver 3	5C	J1b,J3,J5,J5b,J6b,J7b,&J8	J1a,J2,J4,J5a,J6a,&J7a
Jurassic Park	Ver 3	5C	J1b,J3,J5,J5b,J6b,J7b,&J8	J1a,J2,J4,J5a,J6a,&J7a

\*Version 1 has a 2K RAM which is a 24-pin IC at location 5D.

\*Version 2 has an 8K RAM which is a 28-pin IC at location 5D.

## Power-up CPU Self Tests

Upon power-up, the CPU board performs a series of self tests of major components. Turn the game on while observing the LEDs on the CPU board. Tests of the PIAs, RAM, and EPROMs are performed automatically and results of the test are indicated by the PIA LED.

With all tests passed, the LEDs illuminate in the following sequence at power turn-on. The PIA and +5V LEDs illuminate immediately. Approximately 1/2-second later the PIA LED goes out and the Blanking LED illuminates; the +5V and Blanking LEDs remain illuminated until the game is turned off. Test failures are indicated with the PIA LED:

### PIA LED

Stays On  
Flashes 1 Time  
Flashes 2 Times  
Flashes 3 Times

### SUSPECT COMPONENT

One of the 6821 PIAs  
6064 RAM at location D5.  
EPROM at location B5.  
EPROM at location C5.

## QUICK REFERENCE FUSE CHART

### PPB BOARD

F1 5A Slo-Blo G.I. 6.3VAC  
F2 5A Slo-Blo G.I. 6.3VAC  
F3 5A Slo-Blo G.I. 6.3VAC  
F4 5A Slo-Blo G.I. 6.3VAC  
F5 5A Slo-Blo Flipper Power & 50VOLT coils  
F6 5A Slo-Blo Flash Lamps (34VDC)

### POWER SUPPLY BOARD

F1 7A Slo-Blo +5VDC Regulator Input (9VAC)  
F2 7A Slo-Blo +5VDC Regulator Input (9VAC)  
F3 Not Used  
F4 8A Slo-Blo Switched Illumination Buss (18VDC)  
F5 5A Slo-Blo Solenoid (34VDC) Bumpers Slingshots etc.  
F6 5A Slo-Blo Solenoid Buss (34VDC)  
F7 0.5A Slo-Blo Display Reg. Input (90VAC)

### Motor Control Board

F1=2.5 A  
F2=2.5 A  
F3=2.5 A

# Jurassic Park

## TABLE OF CONTENTS

<b>GAME SPECIFICATIONS .....</b>	<b>1</b>
Power Requirements .....	1
Major Assembly and Fuse Locations .....	1
Circuit Board PROM Locations .....	1
Transportation .....	1
<b>ASSEMBLY PROCEDURES .....</b>	<b>1</b>
<b>GAME OPERATION .....</b>	<b>3</b>
Standard Features .....	3
Manual Percentaging .....	3
Game Specific Features .....	4
<b>AUDIT FUNCTIONS .....</b>	<b>9</b>
General .....	9
'Quick Look' Functions .....	9
Expanded Functions .....	11
Game Specific Functions .....	12
<b>GAME ADJUSTMENTS .....</b>	<b>15</b>
General .....	15
Replay and Generic Features .....	15
Single-Function Difficulty Adjustments .....	17
Novelty/5-Ball/Add-A-Ball Rules .....	17
Game Pricing .....	18
Additional Generic Features .....	20
Game Specific Features .....	21
<b>DIAGNOSTIC PROCEDURES .....</b>	<b>23</b>
Entering Diagnostics .....	23
Service Credits .....	23
Tech Alert .....	23
Burn In Minutes .....	23
Sound Tests .....	24
Digital Display Tests .....	25
T-Rex Test .....	25
Laser Kick Test .....	25
Switch Tests .....	26
Lamp Tests .....	28
Coil/Flash Lamp Tests .....	30
Return to Game Over .....	30
<b>PARTS IDENTIFICATION .....</b>	<b>32</b>
Cabinet Parts .....	32
Playfield - Major Assemblies .....	33
Playfield Rubbers .....	34
Backbox Parts .....	34
Playfield Top Parts .....	35
Lamp Bulb Part Numbers .....	36
<b>UNIQUE PARTS .....</b>	<b>37</b>
Ball Eject Assembly (Saucer) .....	37
Super Vertical Up Kicker .....	37
Flipper Assembly .....	38
Slingshot Assembly .....	39
Ball Eject Assembly (DINO) .....	39
Shaker Motor Assembly .....	40
Turbo Bumper .....	40
Knocker \ Kickback Assembly .....	41
Ball Launch Assembly .....	41
Ball Diverter .....	42
<i>Continued on next page</i>	

Double Scoop Assembly .....	43
Dino Collar .....	43
Ramp Assembly .....	68
Under Chute Assembly .....	69
Dino Assembly .....	70
6 Ball Outhole-Trough Assembly .....	71
Gun Assembly .....	72
<b>SERVICING DIAGRAMS .....</b>	<b>44</b>
Cabinet Wiring Diagram .....	44
Combined Display Connections .....	45
Power Wiring Diagram .....	46
Backbox Wiring Diagram .....	47
Playfield Coil/Flash Lamp Wiring Diagram .....	48
Playfield Special Coil Diagram .....	49
Playfield Switch Wiring Diagram .....	50
Playfield Lamp Wiring Diagram .....	51
CPU Board .....	52
Power Supply Board .....	57
Digital Stereo Sound Board .....	58
Display Board .....	60
PPB Board .....	65
Solid State Flipper .....	66



# GAME SPECIFICATIONS

## POWER REQUIREMENTS

This game is provided with a 3-prong plug and **must be connected to a properly grounded outlet to reduce shock hazard** and insure proper game operation. Refer to AC Power Wiring Diagram for transformer connections required for normal, high, and low line conditions.

**Normal Line:** 109 to 129 Vac (211 to 225 Vac)

**High Line:** (226 to 235 Vac)

**Low Line:** 95 to 108 Vac (200 to 210 Vac)

## MAJOR ASSEMBLY AND FUSE LOCATIONS

Refer to the Game Illustration (page 2) to identify locations of the major assemblies, and fuse values and locations.

## PROM SUMMARY

CPU Board: Location 5C

Sound Board: Locations U17 (Voice ROM 1), U21 (Voice ROM 2), and U7 (Sound ROM)


Display Controller Board: Locations U12 & U14

## TRANSPORTATION

To reduce the possibility of damage, observe the following precautions whenever transporting the game. Lower the backbox and secure it to the cabinet. Remove the legs and secure the game within the transporting vehicle.

## GAME ASSEMBLY PROCEDURES (Refer to the Game Illustration on page 2)

1. Open the top of the carton and lay it on its side with the bottom of the cabinet down. Using the plastic banding strip as a handle, slide the game out of the carton.
2. Remove all packing material. Locate cabinet legs in filler packing inserts and assembly parts package in the cashbox. There should be four leg levelers, eight leg bolts, three pinballs and a large Allen Wrench used for securing the backbox.
3. Attach leg leveler from the parts package to each leg, make sure that each leveler is threaded through a hex nut before threading it into the leg.
4. Support rear of cabinet and attach rear legs using two leg bolts for each leg.
5. Support front of cabinet and attach front legs using two leg bolts for each leg.
6. While assuring that no cables are being pinched, carefully raise the backbox and secure it in its upright position by inserting the Allen Wrench in the hole in the back of the cabinet and rotating the wrench 270 degrees(3/4 turn).

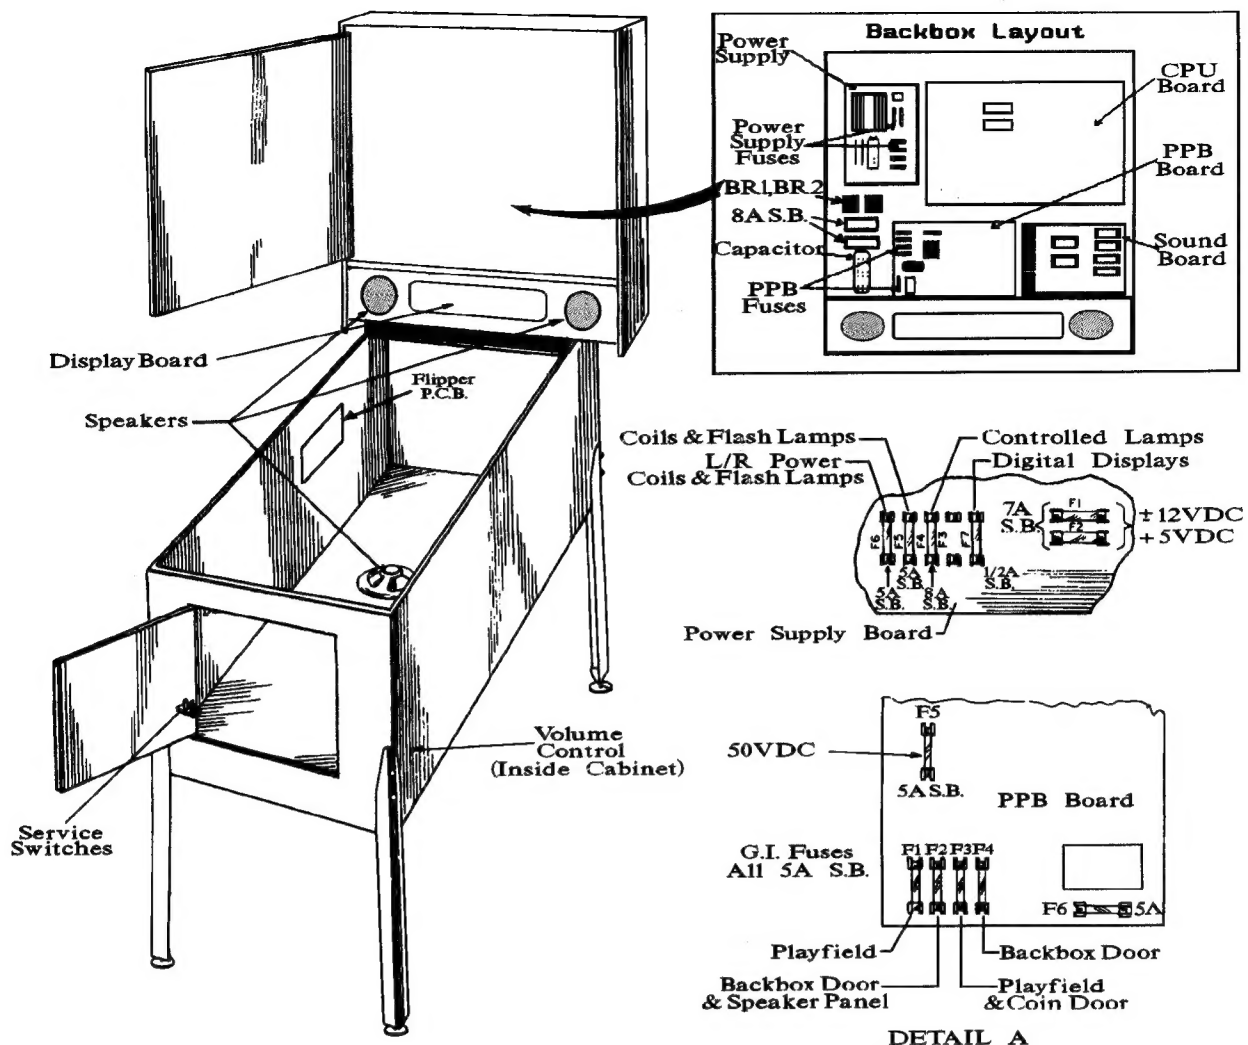

## GAME ILLUSTRATION

7. Remove the backbox keys from the clip on the inside of the coin door and unlock and carefully remove the backglass. Set the backglass aside.
8. Carefully remove the playfield glass and set it aside.
9. Check all connectors in the backbox for loose wire terminations. Reseat any loose wire by pushing in on the terminal.
10. Push on all connectors plugged into the CPU board, Sound Board, Power Supply Boards, and (on insert board) Display board to check that they are properly seated.
11. Check that the fuses on the Power Supply board, PPB board and fuse panel are seated properly.
12. Raise the playfield and support it, by connecting the strap located in the left rear of the cabinet, to the eyebolt on the playfield. (Use the instruction sheet provided in the game to see alternative methods of accessing the playfield bottom.)
13. Check all cabinet cable and playfield lamp board connector terminations.

14. Remove the Plumb tilt from the parts package and install on the panel on the inside left of the cabinet. Note that this game is not equipped with a ball roll tilt.

15. Lower the playfield and level the playfield side-to-side by adjusting leg levelers and using the 2 Way Level located beneath the pricing card on the bottom arch.

16. Using the 2 Way Level below the pricing card, adjust the pitch of the playfield to approximately 6.5 degrees.

### **NOTE**

The playfield incline affects difficulty of play. Use the recommended incline; game difficulty is best varied using game adjustments.

17. Check the plumb tilt and adjust as required.

18. If desired, perform any self tests at this time. With the insert door closed, carefully reinstall and lock the backglass.

19. Place the three pinballs on the playfield near the outhole and carefully reinstall the playfield glass.

20. If desired, make game pricing and Add-A-Ball, Novelty, or 5-Ball Play adjustments at this time.

## **GAME OPERATION**

### **STANDARD FEATURES**

Insert coin(s), the game makes a sound for the first credit and generates sounds for each subsequent coin and the Player 4 display indicates the number of credits posted. Depress the credit button and a start-up sound is produced, the posted credits are reduced by one, Player 1 display flashes, Player 4 display indicates BALL 1, and a ball is served to the plunger trough. Additional players may be added by depressing the Credit button before the end of ball 1.

The second closure (adjustable) of the plumb bob tilt switch tilts the ball in play. Closure of the slam tilt switch in the coin door ends the current game(s).

At the end of each ball, earned bonuses are collected. At the end of the last ball for the last player and after bonuses are collected, the system produces a random 2-digit number (a multiple of 10; 00 to 90) for a Match feature (adjustable). Matching the last two digits of a player score with this number awards a credit. Players exceeding high score levels receive free credits (adjustable) and are able to enter their initials with the new High Score achieved. The game then proceeds into the game-over mode and then to the attract mode. A custom message (adjustable) can be displayed during the attract mode.

### **MANUAL PERCENTAGING**

This game is equipped with Manual Percentage Adjustment.

As previously with our games, you can either set operator adjustments for a replay percent or you can set a fixed replay score.

If you set operator adjustments for a particular replay percent, the game will compute a recommended score to keep the game at that replay percentage. If a change is recommended and the game coin door is opened, the displays will indicate a recommended replay score to beat and make a sound to alert the operator. By pressing the start button, the score to beat will be changed to the recommended level. If you close the coin door or go into audit or adjustment mode, no score change will be made.

You may choose to ignore the recommended change; for example, you may not think last week's players were the usual crowd. Just close the door and the message will disappear without altering the existing level. Or you may choose to make a different score to beat adjustment; this is done by utilizing adjustment AD02.

## GAME SPECIFIC FEATURES

### 1) SKILL SHOT

Use the fire button on the tazer gun to stun the dinosaur running across the display. The awards are 2 Million ( ball 1 ), 3 Million ( ball 2 ) & 4 Million ( ball 3 ).

### 2) SMARTMISSILE

The smart missile can only be used once per game and will collect everything flashing when used. For example if extra ball is flashing the smart missile will collect it for the player instead of the player having to make the shot on the playfield. In various features on the computer it will score the next available value.

### 3) TRI-BALL

Collect all six target species to complete the map and enable tri-ball lit. In tri-ball lit either feed T-REX or taunt the raptors ( 3 times 1st tri-ball. 5 times 2nd tri-ball 7 times 3rd tri-ball ) then tri-ball can only be started by feeding T-REX. You are now ready for dual jackpot action.

### 4) DUAL JACKPOTS


Once in TRI-BALL both the helicopter loop and ramp are lit for Jackpot. All switches on the game add their normal score to the progressive Jackpot in the display. To score each of the Jackpots the player must shoot the ramp and loop. When one is collected it is scored and the other Jackpot continues to increase in value until collected. You are now ready for CHAOS lit with both Jackpots collected.

### CHAOS LETTERS LIT


After scoring dual jackpots the five CHAOS letters are flashing for five million points each. If all letters are completed then the game goes into CHAOS mode.  
( SCORE AN ADDITIONAL 10 MILLION FOR COMPLETING CHAOS )

### 5) CHAOS MODE / CHAOS FEED T-REX JACKPOT

In CHAOS mode the game will play 6 balls. The CHAOS letter will again be flashing to be completed for 10 million points per letter. When the player collects CHAOS then T-REX will light for 50 million points.

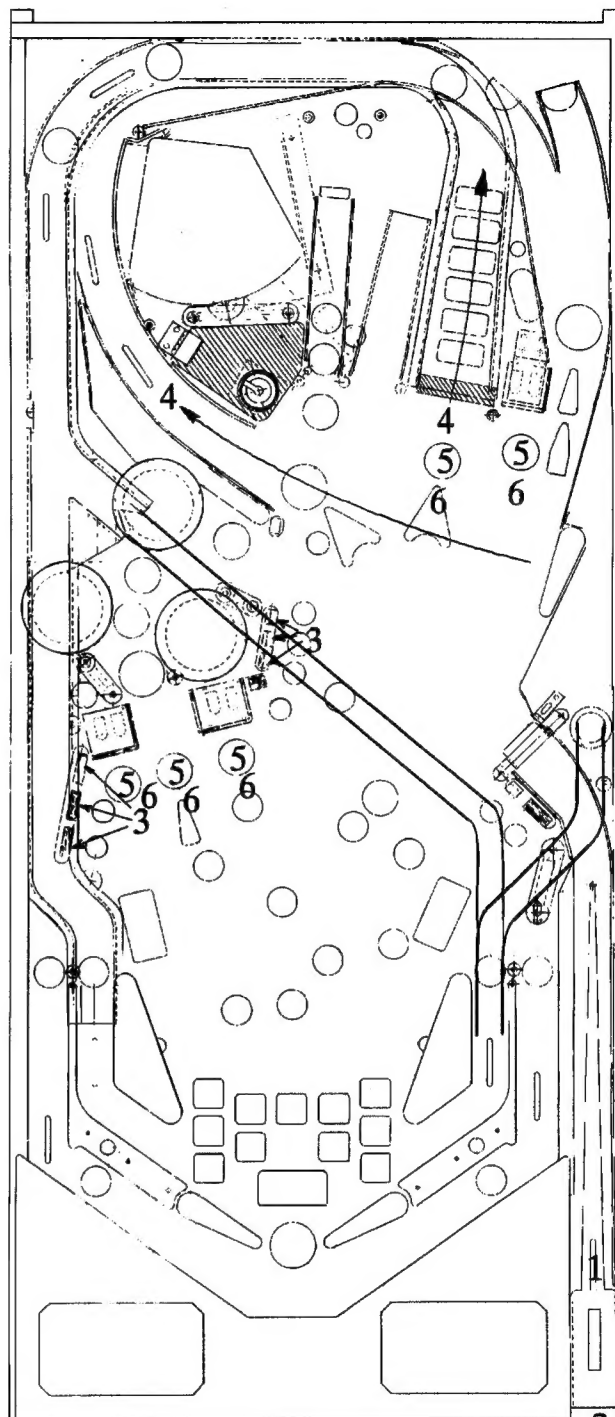



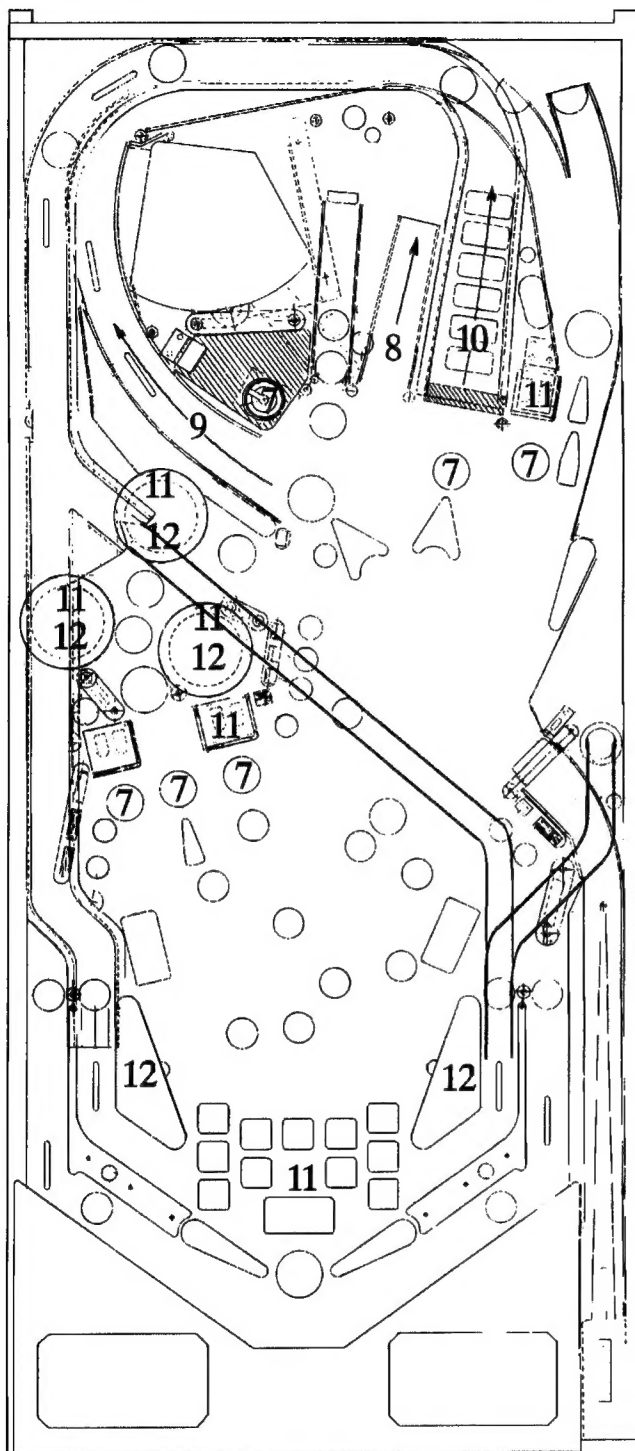

## **7) SUPER JACKPOTS**

While still in six ball play and after T-REX has been fed for 50 million points the playfield jackpots relight for twin SUPER JACKPOTS. TWIN SUPER JACKPOTS score 100 Million points times the number of balls on the playfield, for up to 600 million points. If the player scores SUPER JACKPOTS then the CHAOS letters light again for ten million and repeats feed T-REX and SUPER JACKPOTS until all but one ball drains.

## **8) RAPTOR PIT/ WILD RAPTORS**

The RAPTOR PIT starts with a set value of 3 million and increases by 250k with every shot into the raptor pit. If the player shoots in and out of the RAPTORS rapidly before the danger light stops blinking, then, his raptor score will add it's initial value on to itself until the chain is broken and return to the last raptor score prior to wild raptor mode. When the danger light is on there is a ball freeze protector coming out of the raptor pit.

## **9) RAPTOR PIT HELD**

You can holdover the RAPTOR pit value from ball to ball simply by shooting the Helicopter loop twice in a row with out missing. Two loops also qualifies T-REX to eat the next time a ball is in the paddock in single ball play.

## **10) GENERAL BONUS HELD**

Shooting the ramp twice in a row collects and hold bonus over for the next ball.

## **11) COMPUTER VALUES**

The computer has a total of twelve mini games for the player to explore and challenge. At the start of each ball the control room light above the center scoop will light. Entering the control room will award one of the lit features. After a feature is scored the turbo bumpers will randomly advance the next value. Shooting the power shed ( top right scoop ) will lock in the next value to be scored. If no value is lit going down the right return it will light the control room for a few seconds and temporarily lock the flashing value in place. If the player scores all eleven features then SYSTEM FAILURE IS READY. (see system failure)

## **12) ELECTRIC FENCES:**

In this game the player has 20 seconds to make 20 switch closures in the turbo bumpers and sling shots to score 30 Million points, and save Timmy. If you don't collect the points Timmy will be electrocuted..

### **13) SPITTER ATTACK**

In this game the player has to shoot any of the 3 lit spitter targets on the lower left side of the playfield. Each shot to the lit spitter target makes the spitter attack Nedry. The first spit is 5 Mil, the second spit is 10 mil and the third spit is 15 mil. Three shots prior to the timer expiring collects a total of 30 million.

### **14) 2 BALL PLAY**

In this round the top right eject is lit ( boat dock ) for 2 ball play. When the player makes the shot into the eject the 2nd ball is issued into play. The players objective is to shoot the Raptor pit frequently in two ball play for Raptor Jackpots. Raptor Jackpots start at 3 million and add an additional 1 million for each subsequent shot.

### **15) SYSTEM BOOT**

In this round the Bunker, Control Room and Power shed scoops are lit. The player has 20 seconds to score 5 million for the first , 10 million for the second and 15 million for the third completed. This round can score a maximum of 30 million points.

### **16) RAPTORS RAMPAGE**

In this round the Raptors are loose in the kitchen and are roaming back and forth. The player scores the Raptor value is every time he shoots the Raptor pit in this mode. The player can extend the time of this feature by shooting the raptor pit before the counter expires.

### **17) LIGHTING EXTRA BALL**

This feature LIGHT extra ball on the top right eject ( boat dock ). The player collects extra ball by shooting the eject.

### **18) MOSQUITO MILLIONS**


In this round the captive ball lights for 20 seconds and starts with a total value of 5 million. Each and every subsequent shot scores an additional 1 million points.


### **19) FEED T-REX**

In this round the player has 30 seconds to shoot the ball into the T-REX paddock and feed T-REX for 25 million points.

### **20) BONE BUSTING**

In this round the player has to shoot the ramp 3 times helping the raptor bust the T-REX skeleton in 20 seconds to score 20 million points.

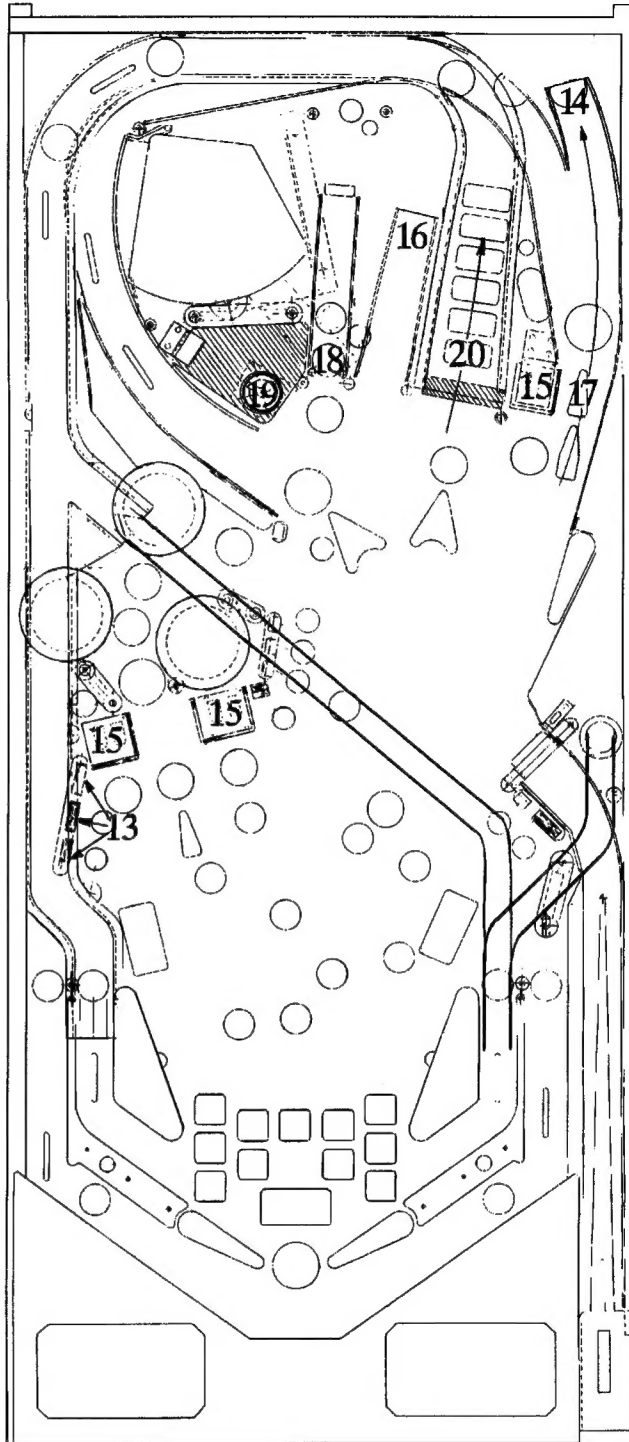

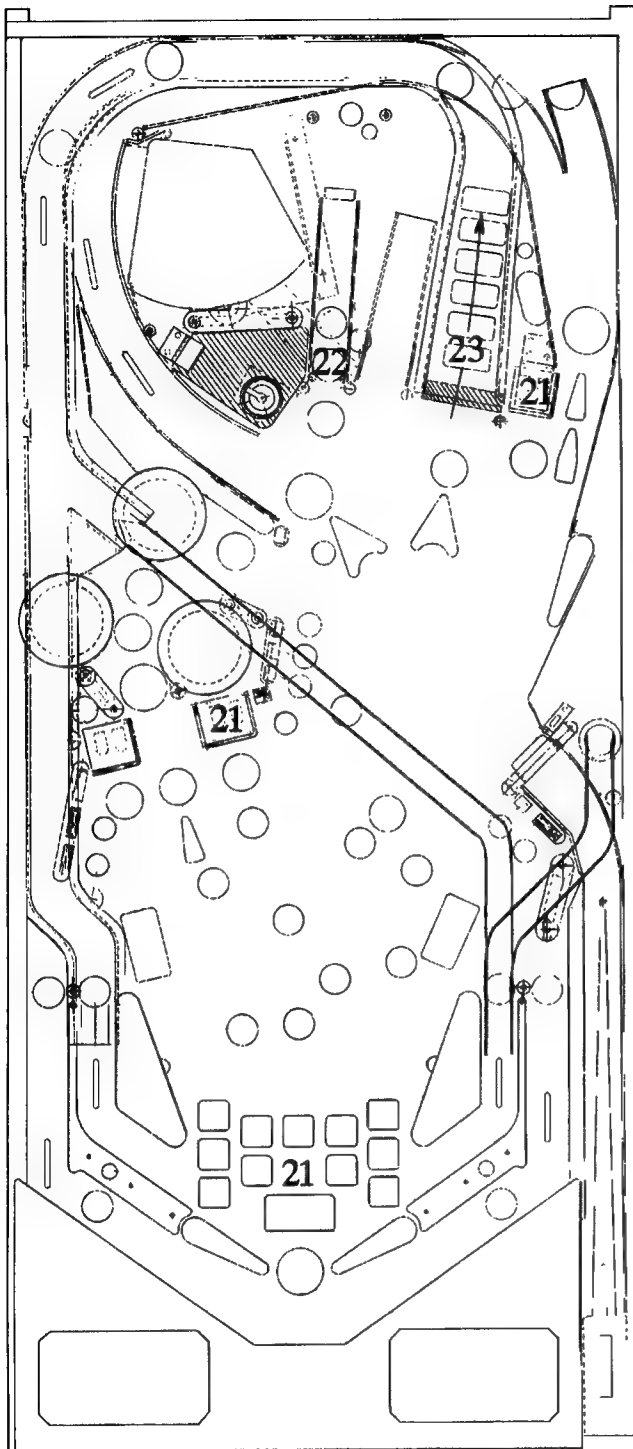

## **21) SYSTEM FAILURE**

After all computer features are collected the control room and power shed lights will be flashing. If the player shoots either scoop the game will start a 45 second mini round keeping all six balls on the playfield. In this round the player scores one million points per switch closure. After the timer has expired, the flippers are disabled and all six balls are returned to the trough. The players System Failure score is added to his existing score and a new ball is issued to the playfield and the player continues his ball in play.

## **22) CAPTIVE BALL EGG.**

Shooting the captive ball cracks the dinosaur egg. The first egg takes 3 cracks and scores 5 million. The second egg takes 4 cracks and scores 10 million. The third egg takes 5 cracks and scores 15 million. The fourth egg takes 6 cracks and scores extra ball. The fifth egg takes 6 cracks and scores 20 million and the sixth egg scores a mystery of either special lit, extra ball lit, or points. Every seventh egg scores power egg mania.

## **23) RAMP MOLECULES.**

Ramp molecules are collected with every ramp shot. The first three DNA strands take seven shots to collect. DNA strands 4,5, & 6 take 8 ramps to collect. All DNA strands after 6 take 9 ramps to collect. When a DNA strand is complete MR. DNA on the bunker scoop is lit for a select pick. 50 ramps lit extra ball at the boat dock. Every ramp adds to the T-REX paddock Jackpot.

### **DNA SELECT VALUES**

5 MILLION  
10 MILLION  
15 MILLION  
SUPER POPS  
MIL POPS  
COMPLETE EGG  
LIGHT SPECIAL  
HURRY EXTRA BALL  
HURRY SCORE 15-5 MIL  
HURRY 2 BALL 10-5 MIL  
TRIBALL READY  
SPITTERS DOUBLE ROUND  
ADVANCE BUNKER 5 MIL  
RAPTOR HOLD  
BONUS HOLD

## **24) ESCAPE ISLA NUBLAR**

In this round the player has to try to escape the island by going to the visitors center, heliport and boat dock in any order. The timer begins to count down points from 20 million. Once the player collects this value, an additional 10 million is added to this timer.

The timer again starts to count down the added 10 Million points if the timer is collected before the added 10 million points are subtracted, this step may be repeated an additional time. The maximum score a player can accumulate in this round is 66 million.

## **25) STAMPEDE**

In this round all switches start scoring 250k and add an additional score of 10k to every subsequent switch closure. If the player shoots the T-REX paddock or the Galimimus target in this round he is awarded an additional 5 million points. In the display the T-REX will eat a Galimimus.

## **26) T-REX PADDOCK JACKPOT**

The T-REX jackpot starts at 5 million points each ramp shot adds 100k to the jackpot value. To collect this jackpot you must spell T-REX by shooting the T-REX paddock and the feed T-REX. This value build ball to ball, player to player game to game.

## **27) VICTORY LAP**

After a replay is achieved the ramp will light for 30 seconds. During that time the player has to shoot the ramp a total of 6 times. The first 5 ramps are worth 5 million points and the sixth ramp is worth 25 million. The total points a player can get from victory lap is 50 million.

## **28) ADVANCE X**

Right return lane through the pops to the upper left loop adds 3x value to the bonus multiplier. The bonus multiplier tops out at 9x.

## **29) HAMMONDS BUNKER**


Right return lane to Hammonds Bunker collect hammonds bunker value. Hammonds bunker value is increased from the turbo bumpers.

## **30) SHOOT OUT**

When shoot out is available shoot the trigger rapidly to stun various dinosaurs and collect that dinosaur on the island map.

## **31) DEATH SAVE**

If the player loses his ball but it comes back into play instead of draining without tilting awards 5 million points.

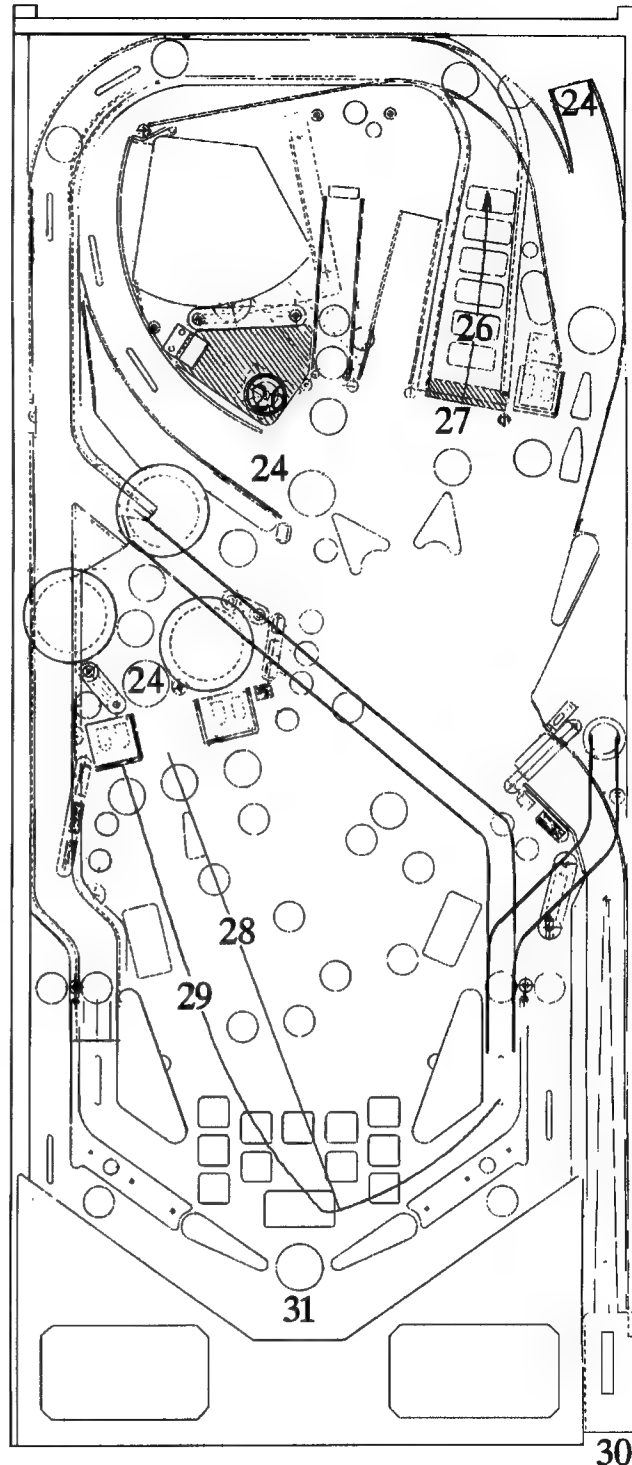

# AUDIT FUNCTIONS

## GENERAL

There are 70 audit functions provided for accounting purposes and for evaluation of game difficulty adjustments. Audit functions are split into two groups. There are 11 most-used audits (1 through 11) in a 'quick look' group and 58 less-used audits (13 through 70), in an 'expanded' group. The various auditing functions are summarized in the **AUDITING FEATURES TABLE** and, when accessed, are shown on the player score displays. The *Audit Number* is shown in the top of the display, the *Description* is shown next and the *Audit Total* in the display. bottom Access and control is provided from switches located on the inside of the coin door.

To access audit functions, open the coin door and make sure that the FORWARD/REVERSE switch is in the FORWARD (up) position. Depress the STEP switch and the display indicates AUDITS & ADJUSTMENTS. This indicates access to audit functions.

With the FORWARD/REVERSE push-button switch still in the FORWARD (up) position, depressing the STEP push-button switch advances through the audit functions one at a time. To review lower-numbered functions, set the forward/reverse push-button switch to the REVERSE (down) position and operate the STEP push-button switch.

To access expanded audits, operate the step push-button until AUDIT 10, EXPAND AUDITS is displayed. Set the choice to YES as indicated in the lower display by depressing the Game Start push-button and then depress the step push-button. The request is installed and Audit 11 is displayed. When you exit audits and adjustments, the Audit 10 setting is returned to off for the next time that a review of audits are required.

Audit totals may be reset to zero using Game Adjustment **ADJUSTMENT 11**, AUDITS RESET. Game adjustments (1 to 13 and 14 to 48) begin after the last audit function (12 or 70). Once audits functions have been recorded, and if no adjustments are required, you may return the game to the attract mode. If adjustments are required, continue pressing the STEP button until the game adjustments are reached. See Game Adjustments for details.

## 'QUICK LOOK' FUNCTIONS

**Total Paid Credits** (AUDIT 1) - the total number of paid credits is displayed.

**Free Percent** (AUDIT 2) is Free Total (E AUDIT 24) divided by Plays Total (E AUDIT 25).

**Ball Time Average** (in seconds) (AUDIT 3) is Total Play Time divided by Total Balls Played (AUDIT 13) .

**Average Game Time** (AUDIT 4) is the Average Game Time expressed in minutes and seconds.

**Coins** (AUDIT 5, 6, 7 and 8) - These four audit totals are provided to show the amount of coins registered for the left, right, center, and 4th coin chutes, respectively.

**Total Coins** (AUDIT 9) is the total number of coins dropped through all 4 coin chutes.

**Total Earnings** (AUDIT 10) is the total cash value accumulated since the last Factory Restore occurred.

**Last Earnings** (AUDIT 11) is the total cash value accumulated since the last Coins Reset occurred.

**Expand Audits** (AUDIT 12) permits viewing of expanded audits.



## Jurassic Park Audit Table

Audit Number	Audit Description	Audit Number	Audit Description
	Jurassic Park PROM ID		
1	Total Paid Credits	36	Proprietary
2	Free Game Percentage	37	Total Buyin Games
3	Average Ball Time	38	Drains Left
4	Av Game Time	39	Drains Center
5	Coins Left	40	Drains Right
6	Coins Right	41	Extraball Lit From Ramp
7	Coins Center	42	Extraball Lit From Grid
8	Coins 4th Chute	43	Extraball Lit From Egg
9	Total Coins	44	Advance Multiplier
10	Total Earnings	45	Extraball Lit From DNA
11	Last Earnings	46	Freeze Used-Skill
12	Expand Audits (ON/OFF)	47	Freeze Used-Raptor
13	Balls Total	48	TRIBALL lit
14	Extra Balls Total	49	TRIBALL Award
15	Extra Ball Percent	50	2nd TRIBALL Award
16	Replay 1 Awards	51	3+TRIBALL Award
17	Replay 2+ Awards	52	Twoball Award
18	Total Replays	53	Restart Award
19	Replay Percent	54	Chaos Award
20	Total Specials	55	T.REX Chaos Lit
21	Special Percent	56	T.REX Chaos Award
22	Total Matches	57	Loop Jackpot
23	Hi Score Wins	58	Ramp Jackpot
24	Total Free Plays	59	Raptor Jackpot
25	Total Plays	60	T.REX Shots
26	0.0 - 49.9 Million	61	T.REX Completed
27	50.0 - 99.9 Million	62	Right Ramp
28	100.0 - 199.9 Million	63	Molecules Complete
29	200.0 - 299.9 Million	64	Raptor Pit Shots
30	300.0 - 399.9 Million	65	Grid Award
31	Over 400 Million	66	Grid Lit
32	Average Scores	67	Eggs Completed
33	Service Credits	68	Smart Missile Used
34	Proprietary	69	"System Failure"
35	Proprietary	70	Total Number of Clicks

## EXPANDED FUNCTIONS

**Balls Total** (Audit 13) is the total of regular and extra balls.

**Extra Balls Total** (Audit14) is the total number of extra balls awarded.

**Extra Ball Percentage** (Audit15) is Audit14 divided by Plays Total (Audit 25).

**Replay Awards** (Audit 16& 17) provide the total awards (credit, extra ball, or audit) for replay level 1 or 2 through 4, respectively.

**Total Replays** (Audit 18) is the total awards (credits, extra balls, or audit only) for exceeding replay score levels.

**Replay Percentage** (Audit 19) is the Replay Total awards for exceeding replay score levels (Audit 18) divided by Plays Total (Audit 25).

**Total Specials** (Audit 20) is the total awards (credits, extra balls, or scores) for making specials.

**Special Percentage** (Audit 21) is Special Total (Audit20) divided by Plays total (Audit 25).

**Total Matches** (Audit 22) is the total credits awarded for matching the last two digits of the score with the system-generated Match Number at the end of the game. Percentage of match credits will be adjustable from 0% to 10%, by **Adj. 13** if enabled.

**High Score Wins** (Audit 23) is the total credits awarded for exceeding the high-score-to-date scores.

**Total Free Plays** (Audit 24) is the total free credits for replays, high-score-to-date, specials, and match.

**Total Games** (Audit 25) is the sum of Total Paid Credits (Audit 1) and Free Total (Audit 25). Note that free credits are not recorded in the Audit until they are actually used.

**0.0- 49.9 Million** (Audit 26) provides the total number of games the Player's final score was between 0 and 49,999,990 points.

**50.0 - 99.9 Million** (Audit 27) provides the total number of games the Player's final score was between 50,000,000 and 99,999,990 points.

**100.0 - 199.9 Million** (Audit 28) provides the total number of games the Player's final score was between 100,000,000 and 199,999,990 points.

**200.0 - 299.9 Million** (Audit 29) provides the total number of games the Player's final score was between 200,000,000 and 299,999,990 points.

**300.0 - 399.9 Million** (Audit 30) provides the total number of games the Player's final score was between 300,000,000 and 399,999,990 points.

**Over 400 Million** (Audit 31) provides the total number of games the Player's final score was over 400,000,000 points.

**Average Scores** (Audit 32) provides the Average Score by adding the Final Score of each game to a table and dividing this sum by the Total Plays .

**Service Credits** (Audit 33) provides the total number of Service credits added to the game. *See Game Diagnostics on page 21 for instructions regarding entry of Service Credits.*

**Proprietary** (Audit 34 - Audit 36) provide information to the game designer to aid in design development. (Factory use only.)

**Total BuyIn Games** (Audit 37) provides the number of times a player utilized the Buy In Feature. (See E Ad 40)

**Drains Left** (Audit 38) provides the number of times the ball drained out the left drain.

**Drains Center** (Audit 39) provides the number of times the ball drained out the center drain.

**Drains Right** (Audit 40) provides the number of times the ball drained out the right drain.

## **GAME SPECIFIC FUNCTIONS**

**Extra Ball Lit From Ramp** (Audit 41) provides the total number of times Extra Ball light was enabled by completing the Ramp Shot.

**Extra Ball Lit From Grid** (Audit 42) provides the total number of times Extra Ball light was enabled by completing the Grid.

**Extra Ball Lit From Egg** (Audit 43) provides the total number of times Extra Ball light was enabled by completing the Egg Shot.

**Advance Multiplier** (Audit 44) provides the total number of times the Bonus Multiplier was advanced.

**Extra Ball Lit From DNA** (Audit 45) provides the total number of times Extra Ball light was enabled by completing the DNA Shot.

**Freeze Used -Skill** (Audit 46) provides the number of times the Freeze Feature saved the ball at the start of the ball..

**Freeze Used -Raptor** (Audit 47) provides the number of times the Freeze Feature saved the ball after entering the Raptor pit.

**TRI-BALL Lit** (Audit 48) provides the number of times the TRI-BALL Feature was lit.

**TRI-BALL Award** (Audit 49) provides the number of games the TRI-BALL Feature was awarded once.

**2nd TRI-BALL Award** (Audit 50) provides the number of games the TRI-BALL Feature was awarded twice.

**3+ TRI-BALL Award** (Audit 51) provides the number of games the TRI-BALL Feature was awarded 3 or more times.

**TWOBALL Award** (Audit 22) provides the number of times the TWOBALL Feature was awarded

**Restart Award** (Audit 53) provides the number of times the Restart Feature was awarded.

**CHAOS Award** (Audit 54) provides the number of times the CHAOS Feature was awarded.

**T.Rex CHAOS Lit** (Audit 55) provides the number of times the Tyrannosaurus Rex CHAOS Feature was Lit.

**T.Rex CHAOS Award** (Audit 56) provides the number of times the Tyrannosaurus Rex CHAOS Feature was awarded.

**Loop Jackpot** (Audit 57) provides the number of times the Loop Jackpot was awarded.

**Ramp Jackpot** (Audit 58) provides the number of times the Ramp Jackpot was awarded.

**Raptor Jackpot** (Audit 59) provides the number of times the Raptor Jackpot was awarded.

**T.Rex Shots** (Audit 60) provides the number of times a shot was made to the T.Rex saucer.

**T.Rex Completed** (Audit 61) provides the number of times the letters spelling TREX were completed.

**Right Ramp** (Audit 62) provides the number of times the right ramp was completed.

**Molecules Complete** (Audit 63) provides the number of times the right ramp was used to complete the molecules.

**Raptor Pit Shot** (Audit 64) provides the number of times the Raptor Pit Shot was completed.

**Grid Award** (Audit 65) provides the number of times a Grid feature was awarded.

**Grid Lit** (Audit 66) provides the number of times a Grid feature was enabled.

**Eggs Complete** (Audit 67) provides the number of times the Eggs were completed by striking the

**Smart Missile** (Audit 68) provides the number of times the Smart Missile button was used.

**"System Failure"** (Audit 69) provides the number of times the System Failure occurred by completing all the grids.

**Meter Clicks** (Audit 70) provides the number of total meter clicks.





# GAME ADJUSTMENTS

## GENERAL

There are 48 adjustable functions provided to vary difficulty of play and to periodically reset audits and the high score levels. The various game adjustments are summarized in the **Game Adjustments Table** and, when accessed, are shown on the player score displays. The *Adjustment Number* is shown in the top of the display, the *Description* is shown next, and the setting, in the bottom of the display. Access and control is provided from switches located on the inside of the coin door.

Game adjustments are accessed from the audit mode. With the audits displaying AUDIT 1 and the FORWARD/REVERSE switch in the REVERSE (down) position, depress the STEP switch and ADJUSTMENT 48 is shown at the top of the display, FACTORY RESTORE is shown in the middle of the display, and NO is shown in the bottom of the display. With the audits displaying AUDIT 12 or 70 and the FORWARD/REVERSE switch in the FORWARD (up) position, depress the STEP switch and ADJUSTMENT 1 is shown in the top of the display, REPLAY/MANUAL is shown in the middle of the display, and the setting is shown in the bottom of the display.

With the FORWARD/REVERSE switch in the FORWARD (up) position, depressing the STEP switch advances through the game adjustments one at a time. With it in the REVERSE (down) position, the STEP switch selects lower-numbered adjustments. To rapidly scroll through adjustments, hold the STEP switch depressed. Adjustment values are changed by operating the GAME START push-button. The FORWARD/REVERSE switch setting determines whether the values are increased or decreased. (With the FORWARD/REVERSE switch up, the value increases, with it down, the value decreases). When the STEP switch is depressed the display indicates REQUEST INSTALLED.

## REPLAY AND GENERIC FEATURES

Replays may be adjusted either for fixed levels or for a system-adjusted manual percentage of replay awards. Four levels may be selected. Adjustments allow awarding of a credit or an extra ball as each level is exceeded. With the manual percentage feature, if the actual replay percentage is higher or lower than that desired, the game computes new recommended manual percentage score(s). When the coin door is subsequently opened the player displays indicate the recommended level and a sound is made to alert the operator of a potential change. This new level is entered into adjustments simply by pressing the game start push-button. (If the coin door is closed or you enter audits/adjustments or diagnostics, the replay level is not changed.)

## REPLAYS (Adjustment 1 through 6)

### ADJ.1 Replay Manual/Fixed

- **Manual:** Adjust for percentage of awards for replay levels (1% through 50%). Proceed to ADJ.02 and 03 for starting replay levels.
- **Fixed:** Lower the automatic value below 1% and Player 1 display indicates FIXED. Proceed to ADJ. 2 and 3 for fixed replay levels.

### ADJ. 2 Start Replay

- **Manual:** Adjust the starting Replay 1 setting to between 20,000,000 and 9,999,000,000.

### ADJ. 3 Levels Replay/Level 1,2,3 & 4 Replay

- Adjust the number of replay levels to be active (1 to 4). Any additional starting replay levels are automatically set to values higher than Replay 1
- Adjust Replay 1 level to between 20,000,000 and 9,999,000,000. (Same as Start Replay)  
If ADJ. 3 is set for 2, adjust Replay 2 level to between 20,000,000 and 9,999,000,000.  
If ADJ. 3 is set for 3, adjust Replay 3 level to between 20,000,000 and 9,999,000,000.  
If ADJ. 3 is set for 4, adjust Replay 4 level to between 20,000,000 and 9,999,000,000.

# Jurassic Park

## Game Adjustment Table

Adjustment Number	Description	Factory Setting
1	Replay/Manual	10%
2	Start Replay	300,000,000
3	Levels Replay*	01
4	Game Awards	CREDIT
5	Limit Freegame	03
6	Limit Extraball	03
7	Game Rules	FACTORY
8	Game Price*	USA2
9	Coin Reset	NO
10	Audits Reset	NO
11	Restore Hi Scores	NO
12	Expand Adjustments	NO
13	Match Percent	08
14	Balls Per Game	03
15	Tilt Warnings	01
16	Replay Boost	NO
17	Credits Limit	30
18	High Scores Allowed	YES
19	Hiscore 1 Awards	03
20	Hiscore 2 Awards	01
21	Hiscore 3 Awards	00
22	Hiscore 4 Awards	00
23	Backup World Record	300,000,000
24	Backup Hiscore 2	275,000,000
25	Backup Hiscore 3	250,000,000
26	Backup Hiscore 4	225,000,000
27	Backup Hiscore 5	125,000,000
28	Backup Hiscore 6	150,000,000
29	Reset H.S.T.D. Every	700
30	Free Play	NO
31	Custom Mesage	ON
32	Flash Lamps	NORMAL
33	Coils Pulse	NORMAL
34	Level Adjust By	ANY
35	Next Game Promo	ON
36	Buy In Allowed	NO
37	Restart Game	NO
38	Extra Ball Percentage	25
39	Background Volume	100
40	Bill Validator	NO
41	Raptor Freeze	YES
42	Shaker Motor	ON
43	T.Rex In Memory	YES
44	T.Rex Move Left-Right	YES
45	T.Rex Eat Balls	YES
46	Special In Memory	YES
47	Extra Ball in Memory	YES
48	Factory Restore	NO

\* Some settings result in Drop-Down Tables- See Text

**Adj. 4 Game Awards** Set for replays to award: **CREDIT, EXTRA BALL, NONE** or **SPECIAL** (when score threshold is achieved a playfield special is lit).

**Adj. 5 Limit FreeGame** - Adjust for the maximum number of free games that may be accumulated per game; 0 to 9 .

**Adj. 6 Limit Extra Balls** - Adjust for the maximum number of extra balls that may be accumulated per game; 1 to 9 or OFF.

## SINGLE-FUNCTION DIFFICULTY ADJUSTMENT (Adj. 7)

Any one of five INSTALL settings for this adjustment may be activated to automatically select settings for multiple adjustments affecting game difficulty. Use the Start button to choose the difficulty level you require and press the step button to activate the setting. After activation, the individual adjustments may be readjusted if desired. Refer to Install Adjustment Table for details.

**Adj. 07 Game Rules** - Set to **EXTRA EASY, EASY, FACTORY, HARD** or **EXTRA HARD**.

(Note - Additional game features not variable by the Expanded Adjustments may also change using this setting.)

Install Adjustment	Adj. 7 Extra Easy	Adj. 7 Easy	Adj. 7 Factory	Adj. 7 Hard	Adj. 7 Extra Hard
Adj. 43. Raptor Freeze	YES	YES	YES	YES	YES
Adj. 44. T-Rex in Memory	YES	YES	YES	NO	NO
Adj. 47.Extra Ball in Memory	YES	YES	YES	NO	NO

## NOVELTY / 5-BALL/ADD-A-BALL SETTINGS

The following three combinations are recommended for situations where local laws restrict certain game features regarding the use of replays or the number of balls per game:

**Novelty Play Rules** - Set to establish recommended settings for no free play or extra balls:

Adj. 1 Manual Replay = Fixed  
 Adj. 2 Start Replay = 00  
 Adj. 3 Levels Replay = None  
 Adj. 4 Game Awards = None  
 Adj. 5 Limit Freegame = 0

Adj. 6 Limit Extra Balls = 0  
 Adj. 14 Match Percent = Off  
 Adj. 20 World Record Awards=0  
 Adj. 21-23 Todays 1-3 Awards= 0

**5-Ball Play Rules** - Set to establish recommended settings for 5-ball play:

Adj. 1 Manual Replay =07%  
 Adj. 2 Replay Start = 375,000,000  
 Adj. 3 Replay Levels = 01  
 Adj. 4 Game Awards = Credit  
 Adj. 5 Limit Freegame =3  
 Adj. 6 Limit Extra Balls = 3

Adj. 14 Match Percent = 04  
 Adj. 15 Balls/Game =5  
 Adj. 20 World Record Awards = 3  
 Adj. 21 Todays 1 Award= 1  
 Adj. 43 Raptor Freeze = Yes  
 Adj. 44 T-Rex in Memory = Yes

Extra Ball in memory = No

**Extra Ball Settings**-To disable awarding of credits and provide awards with an extra ball make the following adjustments:

Adj. 4 Game Awards = Extra Ball  
 Adj. 5 Limit Freegame = 0  
 Adj. 14 Match Percent = OFF

Adj. 19 Scores Highest = No  
 Adj. 20 to 23 World Record & Todays High Awards= 0

## GAME PRICING (Adj. 8)

There are two methods available for coin switch programming; Standard and Custom. Standard pricing uses a single adjustment (Adj. 8) to select a pricing scheme shown in the **Standard /Custom Pricing Table**. Custom pricing is used to select additional pricing schemes defined by a Drop Down menu .

With Adj. 8 set to **CUSTOM** operating the step button again initiates a drop down menu representing coin switch pulses for the left, right, and center coin slots. The prescribes the number of pulses required for one credit. For example, if *Left Coin Pulses*, was set to 02 and *Coin Switch Pulses Required for 1 Credit*, to 01 a coin in the left slot would produce two credits. Further, if *Left Coin Pulses*, was set to 01 and *Coin Switch Pulses Required for 1 Credit*, to 02, two coins in the left slot would be required for one credit.

*Coin Switch Pulses Required for Bonus Credit* may be set to post bonus credits when a minimum amount of coins are inserted at one time. For example, if *Left Coin Pulses* was set to 01, *Coin Switch Pulses Required for 1 Credit* to 01 and *Coin Switch Pulses Required for Bonus Credit* to 04, one credit would be posted for each of the first three coins in the left slot and two credits for the fourth coin.

**Standard/Custom Pricing** - Set for the desired pricing scheme from the Standard Pricing Table as indicated in the Player 1 and 2 displays. For Custom Pricing, set to **CUSTOM**. When set to CUSTOM, the following adjustments are utilized to tailor each individual coin chute.

**Left Coin Switch Pulses** - Set the number of pulses registered for closure of the left coin switch; 00 to 99.

**Right Coin Switch Pulses** - Set the number of pulses registered for closure of the right coin switch; 00 to 99.

**Center Coin Switch Pulses** - Set the number of pulses registered for closure of the center coin switch; 00 to 99.

**Coin Switch Pulses Required for 1 Credit** - Set the number of coin switch pulses required to post one credit; 00 to 99.

**Coin Switch Pulses Required for Bonus Credit** - Set the number of coin switch pulses required to award the 1st bonus credit(s); 00 to 99.

**Coin Switch Pulses Required for 2nd Bonus Credit** - Set the number of coin switch pulses required to award the 2nd bonus credit; 00 to 99.

**Credits awarded for 1st Bonus** - Set the number of credits awarded for achieving the first Bonus level; 00 to 99.

## CUSTOM PRICING TABLE

Coin Mechs				Plays/Coins	Adjustments							
Left	Right	Center	4th		Left Pulses	Right Pulses	Mid Pulses	4th Pulses	Pulses /Credit	Pulses /bonus	Pulses/ 2nd Bon	Credit/ 1st Bonus
25¢	25¢	\$1.00	n/u	1/25¢ 3/50¢ 1/25¢ 5/\$1.00 1/25¢/ 6/\$1.00	01 01 05	01 01 05	04 04 20	00 00 00	01 01 04	02 04 20	00 00 00	01 01 01
5SCH	10SCH	10SCH	n/u	1/10 SCH 1/10 SCH 4/30SCH	01 04	02 08	02 08	00 00	02 06	00 00	00 00	00 00
10P	£1	50P	20P	1/30P 2/50P 5/£1 1/50P 3/£1 1/30P 4/£1	01 01 01	15 15 12	06 05 05	02 02 02	03 05 03	00 00 00	00 00 00	00 00 00
20¢	\$1.00	n/u	n/u	1/60¢ 2/\$1.00	01	05	00	00	03	05	00	01

# STANDARD PRICING TABLE

Adj. 8 Standard Pricing Select	Coin Mechs				Plays Per Coin			
	Left 1st	Center 2nd	Right 3rd	4th	1st	2nd	3rd	4th
USA 1-1 Coin 1 Play	25¢	\$1.00	25¢		1PLAY/1COIN	4PLAY/1COIN	1PLAY/1COIN	
USA 2-4 Coin 3 Play *	25¢	\$1.00	25¢		1PLAY/2COIN 2PLAY/3COIN 3PLAY/4COIN	3PLAY/1COIN 6PLAY/2COIN 9PLAY/3COIN	1PLAY/2COIN 2PLAY/3COIN 3PLAY/4COIN	
USA 3-2 Coin 1 Play	25¢	\$1.00	25¢		1PLAY/2COIN	2PLAY/1COIN	1PLAY/2COIN	
USA 4-2 Coin 1 Play	25¢		25¢			1PLAY/2COIN For the 1st Play 1PLAY/1COIN during BUY-IN		
USA 5-\$2.00 5 Plays	25¢	\$1.00	25¢		1PLAY/2COIN 5PLAY/8COIN	2PLAY/1COIN 5PLAY/2COIN	1PLAY/2COIN 5PLAY/8COIN	
USA 6- 50¢ - 3/\$1Bill	25¢	\$1.00	25¢		1PLAY/2COIN 2PLAY/4COIN	3PLAY/1COIN 6PLAY/2COIN	1PLAY/2COIN 2PLAY/4COIN	
USA 7-\$2.00 6 Plays	25¢	\$1.00	25¢		1PLAY/2COIN 2PLAY/4COIN	2PLAY/1COIN 6PLAY/2COIN	1PLAY/2COIN 2PLAY/4COIN	
Austria	5 SCH	10 SCH	10 SCH		1PLAY/2COIN 2PLAY/3COIN 3PLAY/4COIN	1PLAY/1COIN 3PLAY/2COIN	1PLAY/1COIN 3PLAY/2COIN	
Australia	20¢	\$1.00	\$2.00		1PLAY/5COIN	1PLAY/1COIN	3PLAY/1COIN	
Belgium	5f	20f	50f		1PLAY/4COIN	1PLAY/1COIN	3PLAY/1COIN	
Canada	25¢	25¢	\$1.00		1PLAY/2COIN 2PLAY/3COIN 3PLAY/4COIN	1PLAY/2COIN 2PLAY/3COIN 3PLAY/4COIN		
Denmark	1Kr	5Kr	10Kr	20Kr	1PLAY/3COIN	2PLAY/1COIN	4PLAY/1COIN	8PLAY/1COIN
French 1 *	1f	5f	10f	20f	1PLAY/3COIN 2PLAY/5COIN 5PLAY/10COIN	2PLAY/1COIN 5PLAY/2COIN 11PLAY/4COIN	5PLAY/1COIN 11PLAY/2COIN	11PLAY/1COIN
French 2	1f	5f	10f	20f	1PLAY/5COIN 3PLAY/10COIN 7PLAY/20COIN	1PLAY/1COIN 3PLAY/2COIN 7PLAY/4COIN	3PLAY/1COIN 7PLAY/2COIN	7PLAY/1COIN
French 3	1f	5f	10f	20f	1PLAY/3COIN 2PLAY/5COIN 4PLAY/10COIN	2PLAY/1COIN 4PLAY/2COIN 9PLAY/4COIN	4PLAY/1COIN 9PLAY/2COIN	9PLAY/1COIN
German 1	1 DM	2 DM	5 DM		1PLAY/1COIN 2PLAY/2COIN 3PLAY/3COIN	2PLAY/1COIN 4PLAY/2COIN 6PLAY/3COIN	6PLAY/1COIN	
German 2	1 DM	2 DM	5 DM		1PLAY/1COIN 2PLAY/2COIN 3PLAY/3COIN	2PLAY/1COIN 4PLAY/2COIN 6PLAY/3COIN	7PLAY/1COIN 21PLAY/3COIN	
German 3 *	1 DM	2 DM	5 DM		1PLAY/2COIN 2PLAY/3COIN 3PLAY/4COIN	1PLAY/1COIN 3PLAY/2COIN 5PLAY/3COIN	5PLAY/1COIN 10PLAY/2COIN 15PLAY/3COIN	
Italy 1	500L		500L		1PLAY/1COIN		1PLAY/1COIN	
Italy 2	500L		500L		1PLAY/2COIN 3PLAY/4COIN		1PLAY/2COIN 3PLAY/4COIN	
Japan			100¥				1PLAY/1COIN 3PLAY/2COIN	
Korea	100 Won		100 Won		1PLAY/1COIN		1PLAY/1COIN	
Netherland 1	1 Guilder	1 Guilder	2.5Guilder		1PLAY/1COIN	1PLAY/1COIN	3PLAY/1COIN	
Netherland 2	1 Guilder	2.5Guilder	5 Guilder		1PLAY/1COIN	3PLAY/1COIN	6PLAY/1COIN	
New Zealand 1	\$1.00		\$2.00		1PLAY/1COIN		2PLAY/1COIN	
New Zealand 2	\$1.00		\$2.00		1PLAY/1COIN		3PLAY/1COIN	
Spain	100Pts		500Pts		1PLAY/1COIN		6PLAY/1COIN	
Sweden	1 Skr	5 Skr	10 Skr		1PLAY/3COIN	2PLAY/1COIN	4PLAY/1COIN	
Swiss 1	1 SFR	2 SFR	5 SFR		1PLAY/1COIN	2PLAY/1COIN	6PLAY/1COIN	
Swiss 2	1 SFR	2 SFR	5 SFR		1PLAY/1COIN	3PLAY/1COIN	9PLAY/1COIN	
UK 1	10P	50P	£1	20P	1PLAY/5COIN 3PLAY/10COIN	1PLAY/1COIN 3PLAY/2COIN	3PLAY/1COIN	3PLAY/5COIN
UK 2	10P	50P	£1	20P	1PLAY/4COIN 2PLAY/8COIN 3PLAY/10COIN	1PLAY/1COIN 3PLAY/2COIN	3PLAY/1COIN	1PLAY/2COIN 2PLAY/4COIN 3PLAY/5COIN
UK 3	10P	50P	£1	20P	1PLAY/5COIN 2PLAY/10COIN	1PLAY/1COIN 2PLAY/2COIN	2PLAY/1COIN	2PLAY/5COIN
Yugoslavia	5 Dur		5 Dur		1PLAY/1COIN		1PLAY/1COIN	



## ADDITIONAL GENERIC FEATURES

**Adj. 9 Coin Reset** - When enabled (set to **YES**) all coin and paid credit totals will be reset to zero when STEP is depressed.

**Adj. 10 Audits Reset** - When enabled (set to **YES**) all audit totals except for coins and paid credits will be reset to zero when STEP is depressed.

**Adj. 11 Restore High Score** - When enabled (set to **YES**) the High Score Levels and associated initials will be restored to backup settings when STEP is depressed .

**Adj. 12 Expand Adjustments** - When set to **NO**, depressing the STEP push-button advances directly to Adj. 46, FACTORY RESTORE. When set to **YES**, depressing the STEP push-button sequences through the expanded adjustments. When exiting from expanded adjustments, this function is reset to **OFF** for the next time that adjustments are required.

**Adj. 13 Match Percent**- Set Match percent from **00%** to **10%** or **OFF**. At 00% the match display occurs at the end of the game but never awards a credit.

**Adj. 14 Balls Per Game** - Adjust the number of balls per game; **2** to **5**.

**Adj. 15 Tilt Warnings** - Adjust the number of plumb bob tilt switch closures before the ball in play is tilted; **1** to **3** or **OFF**.

**Adj. 16 Replay Boost** - Set to **YES** or **NO**. When set to **YES**, exceeding a replay will set a temporary replay level for each time a replay level is surpassed. This new level will equal the player's final score (when the replay was awarded) for each following game, until the replays have all been played. At this time the previous level is resumed.

**Adj. 17 Credits Limit** - Adjust the maximum number of credits that may be posted; **4** to **50**.

## HIGH SCORE LEVELS (Adj. 18 through 29)

There are four of the six high score levels with associated player initials that are displayed during the attract mode. This provides a high-score-to-date feature. When players exceed these levels, the player initials may be entered to replace the previous ones. These levels may be adjusted to award credits and to be reset to backup values after a selected number of games.

**Adj. 18 Hiscores Allowed** - Set to enable or disable the four high score levels; **YES** or **NO**.

**Adj. 19 World Record** - Adjust the number of credits awarded for exceeding level 1 (the highest of the four levels); **0** to **5**.

**Adj. 20 Highscore 2 Award**- Adjust the number of credits awarded for exceeding level 1; **0** to **3**.

**Adj. 21 Highscore 3 Award** - Adjust the number of credits awarded for exceeding level 2; **0** to **2**.

**Adj. 22 Highscore 4 Award** - Adjust the number of credits awarded for exceeding level 3; **0** to **1**.

**Adj. 23 Backup World Record** - Adjust the score level to which the world record (the highest of the four levels) may be altered. This adjustment is not affected by Adj.30 (Factory Reset defaults to 7,500,000).

**Adj. 24 Backup Highscore 2** - Adjust the backup score level to which level 1 may be reset.

**Adj. 25 Backup Highscore 3**- Adjust the backup score level to which level 2 may be reset.

**Adj. 26 Backup Highscore 4**- Adjust the backup score level to which level 3 may be reset.

**Adj. 27 Backup Highscore 5**- Adjust the backup score level to which level 4 may be reset.

**Adj. 28 Backup Highscore 6-** Adjust the backup score level to which level 5 may be reset.

**Adj. 29 High Score Reset Every** - Adjust the number of games between automatic resets of high score levels to backup settings and ball time averager adjustments; 100 to 900 or OFF (no reset or adjustment).

**Adj. 30 Free Play** - When set to **YES**, no coins are required for games.

**Adj. 31 Custom Message** - When desired, this function is used to establish a custom message periodically displayed during the attract mode. Set the feature to **CHANGE** using the Credit button and depress STEP. The letter **A** is indicated in the first position of the Player 1 display. Vary the letter by operating the left and right flippers. With the desired letter indicated, depress the CREDIT button to lock in the letter and advance to the next display character. Repeat this procedure until the desired message is indicated in the Player 1 and 2 displays. At this time, depress the STEP push-button switch to advance to Adj. 34.

**Adj. 32 Flash Lamps-** Set to **NORMAL**, **DIM** or **OFF**. When set to **NORMAL** the Flash Lamps are active, when **DIM** the Flash Lamps impulse power is reduced by 25% and when **OFF** the Flash Lamps do not flash.

**Adj. 33 Coils Pulse-** Set To **NORMAL**, **HARD** or **SOFT**. When **HARD** the coil pulse power is increased by 12.5% of the normal pulse rate. When set to **SOFT** the coil pulse power is reduced by 12.5% of the normal pulse rate. These adjustments are provided to compensate for Low Line or High Line voltage conditions where the solenoids appear to kicking too weak or too hard.

**Adj. 34 Level Adjust by** - When set to **INT. OPERATOR**, the Manual Percentage Replay Adjustment can only be altered with the front door open (see manual page 3). When set to **EXT.OPERATOR**, the Manual Percentage Replay Adjustment will display the message "PRESS START TO CHANGE REPLAY LEVEL" on power up if a change is recommended, and immediately operating the replay button will initiate the change to the replay score.

**Adj. 48 Factory Restore-**Depressing STEP without changing the value shown in the Player 4 Display locks in any custom message set with Adj.33 and returns the game to GameOver.Set the value to **ON** and depress STEP switch to revert all game adjustments to factory settings, clear the Custom Message and return to Game Over.

### **GAME SPECIFIC FEATURES (Adj. 35 TO Adj. 47)**

**Adj. 35 Next Game Promo-** Set to **ON** or **OFF**. When set to **ON**, the game, in attract mode will randomly display a short promotion for our next game. When set to **OFF**, the game in attract mode will not generate any sounds or graphics refering to the next game.

**Adj. 36 Buy in Allowed** - Set to **YES** or **NO**. When set to **YES**, the game will display a countdown timer at the end of each game allowing the player to "Buy in" most of the features accumulated during the previous game.When set to **NO**, none of the previous game features will be retained and no countdown timer will appear.

**Adj. 37 Game Restart** -Set to **YES** or **NO**. When set to **YES**, a new game may be started during any ball after the first ball is completed. (Note-Pressing start during the first ball will add additional players.) When set to **NO**, The game disables the start button after the first ball until the final ball is in play.

**Adj. 38 Extra Ball Percentage** -Set from 0 to 50. Allows the operator to adjust how frequently the Extra Ball feature is made available to the player.

**Adj. 39 Background Volume** - Set to **0**, **25**, **50**, **75** or **100** percent. Allows the operator to adjust the background music volume independantly from the normal game sounds.

**Adj. 40 Bill Validator** - Set to **YES** or **NO**. When set to **YES** , the display, in game attract mode, will show an "Insert Bill Animation". When set to **NO**, the display, in game attract mode will show "Insert Coin Animation".

**Adj. 41 Tournament Style** - Set to **NONE**, **PINBALL EXPO**, **IFPA-PAPA** or **HOME**. This function determines the default conditions to quickly prepare a game for tournament play. When this setting is changed all audits will be reset and all adjustments will be initiated to the particular style selected. The game will then return to game over attract mode, as if a Factory Restore had been performed.

**NONE** - Same as a Factory Reset conditions.

**IFPA-PAPA** - Straight 50¢ play, no replay, no Extra Ball, no High Scores , 2 Tilt Warnings and No Match.

**PINBALL EXPO**- Same as IFPA-PAPA settings except Free Play is enabled.

**HOME**-Sets game for Free Play, extra ball play, no replay, 10% Match and Extra Ball percentage = 30%.

**Adj. 42 Shaker Motor**- Set to **ON** or **OFF**. Allows operation of the vibrating Shaker motor during certain events in game play.

**Adj. 43 Raptor Freeze**- Set to **YES** or **NO**. When set to **YES** , all balls shot directly into the outhole from the Raptor pit shot will be kicked back into play for the same player.

**Adj.44 T-Rex in Memory**- Set to **YES** or **NO**. When set to **YES** , all letters lit in **TREX** on the bottom arch will be retained in memory from ball to ball for the same player in a game. When set to **NO**, all letters lit in **TREX** will go out at the end of each ball.

**Adj.45 T-Rex move Left-Right** - Set to **YES** or **NO**. Used to disable the left and right movement of the T-Rex mechanism during game play so the game will still operate even if there is a problem with the motor circuit.

**Adj.46 T-Rex Eat Balls** - Set to **YES** or **NO**. Used to disable the up and down movement of the T-Rex mechanism during game play so the game will still operate even if there is a problem with the motor circuit.

**Adj.47 Extra ball in Memory** - Set to **YES** or **NO**. When set to **YES** , the lit shoot for extra ball saucer will be retained in memory from ball to ball for the same player. When set to **NO**, the lit shoot for extra ball saucer will go out at the end of each ball.

## GAME DIAGNOSTICS

The Data East Pinball system provides tests for sounds, digital displays, lamps, switches, and solenoids. Each feature may be tested manually or automatically using the STEP and FORWARD/REVERSE push-button switches inside the coin door and the Game Start push-button switch on the front of the cabinet. The automatic tests may be used for a quick verification of automatic test functions and the manual tests, for troubleshooting.

During game play, activation of switches and operation of coils with associated switches are monitored. If a switch is not made for 50 games it is considered bad. When operation of a coil should close or open a switch and does not, the coil is considered bad. In Game over attract mode, bad switches and coils (if any) are reported (See Tech Alert Description below). Note that reporting of an unused switch does not constitute a problem and that a bad coil could mean that the associated switch requires adjustment.

Wiring to switches, solenoids and controlled lamps uses color-coded wires that basically follows a resistor color-code scheme for the eight rows and eight columns. During the switch tests and during the discrete lamp test, identification of the color of the row and column wires are indicated in the Player 3 & 4 Displays. For example, making the right coin switch during the Switch Test results in the switch functional name (RIGHT COIN) shown in the Player 1 and 2 Displays, the row (WHT-YEL) and column (GRN-BRN) wire color codes shown in the Player 3 display, and the switch number shown in the Player 4 display.

**BLK=Black**  
**BRN=Brown**  
**RED=Red**  
**ORN=Orange**  
**YEL=Yellow**

**GRN=Green**  
**BLU=Blue**  
**VIO=Violet**  
**GRY=Grey**  
**WHT=White**

## ENTERING DIAGNOSTICS

With the game in the game-over mode, open the coin door and make sure that the FORWARD/REVERSE push-button switch is set to REVERSE (down) and depress the STEP push-button switch. The Player displays will show the tollfree Customer Service number 1-800-KICKERS, that is 1-800-542-5377 ( U.S. including Illinois) and the toll number (708) 345-7700 (Outside the United States). this indicates entry into game diagnostics.

### Service Credits

With the phone number displayed depress the STEP push-button switch. The game now gives the technician the option of adding 1 to 5 service credits. These credits allow the technician to test-play the game without adding any counts to the coin audits (AU 01 & AU 05-AU 08). When the message appears, press and hold the Game Start pushbutton until the desired number of credits are shown on the display. Then press the step button again to add these credits to the game and enter Tech Alert. If no Service Credits are desired, press the step button with the initial message displayed.

### Tech Alert

The player displays will now indicate if there are any Bad Switches (Switches that are closed, that should not be or switches that have not been activated in 50 games) it also indicates if the game requires cleaning, based on the number set in E Ad 31.

### Burn-In Minutes

Pressing the step button while in Tech Alert mode will step game into Burn-in Mode(Factory use). At this stage pressing the game start button will cause the game to exercise all CPU I/O functions. This is provided to constantly exercise sounds, solenoids, etc...

To stop the test press the start button again. Cumulative Burn-In minutes will be displayed. To reset Burn-In minutes to 00, you must perform a Audit Reset Adj. 11 or a Factory Restore Adj. 99.

## SOUND TESTS

The Data East Pinball sound system produces true digital stereo sound on left and right speakers and mono on a center speaker. During Sound tests, the bottom display shows the sound board circuit under test and the corresponding sounds are selected by operating the left and right flipper buttons to choose the circuit to be tested. Now press the start button to initiate the sound. Refer to the Sound Test Chart for the sound circuits displayed and the sounds produced.

The sound functions allow verification that all channels are functioning properly and that the speaker connections are correct. Speaker Phase Testing procedures follow for checking speaker connections.

### SOUND TEST CHART

Auto/Manual Tests (Player 1 & 2)	Sounds Produced
LEFT SPEAKER CENTER SPEAKER RIGHT SPEAKER VOICE ROM1 (Loc U17) VOICE ROM2 (Loc U21) MUSIC TEST (Sound ROM Loc U7)	Left Sine (Left Speaker Only) Center Sine (All speakers) Right Sine (Right Speaker Only) "Oh no!....No no!....." "Shoot again" Level 1 Through Level 3 Music

## Speaker Phase Testing

Connections to each of the three speakers are polarized and each must be connected appropriately for the best quality sound. If one speaker has the positive and negative connections reversed with respect to the other two, bass frequencies will not be produced properly and the overall sound quality will be poor.

To test for proper speaker phasing, use the sound test to cycle through the Left, Center, and Right Sine functions. If the Center Sine produces more volume and bass than the Left and Right Sines, the speakers are connected properly. If it produces the same or less, one speaker is connected improperly. To isolate and correct reversed speaker connections, one of two methods may be used.

1. Check each speaker for polarity markings. If the speakers have polarity markings, verify that the single-color wire (BLK, YEL or RED) is connected to the negative (-) terminal.
2. Disconnect the speaker output connector from the Sound Board and connect a 1.5-volt battery across each speaker pair one at a time while observing the speakers. Make sure that the positive battery terminal is connected to the positive lead (CN1-pin 1, 3, or 6) each time. As the connection is made, check speaker cone movement; proper connections are indicated by outward movement.



## DIGITAL DISPLAY TEST

The Digital display utilizes a Dot Matrix Display Control board mounted in piggyback fashion to the display driver Board. The purpose behind this board is to provide more information (32 X 128 Dots) to the operator as well as displaying graphics to the player.

The board is controlled by a 68B09E microprocessor and it's personality ROMs (Unique to the Game) . It receives Data, Reset & Clock information from the CPU Board via the ribbon cable and sends back multiple Status and Busy signals to the CPU . This is to insure synchronized communication between the CPU and the Display Controller board.

The Drivers for the rows and columns are provided on 4 surface mounted integrated circuits on the Display driver board.

### Automatic Test

To enter Display tests, operate the STEP push-button switch from the Sound Manual test. The displays will first illuminate one vertical column of dots in the Display. After a slight delay it will cycle one column from left to right. After a period of time, it will begin the Row test by lighting the top row of the display, then turning it off and illuminating the next row, until each row has been individually lit, while the other rows are off. The test will then turn all the dots in the display on except for one column. It will then cycle this blank column from left to right. After a period of time, it will begin the second Row test by blanking the top row of the display, then turning it on and blanking the next row, until each row has been individually blanked, while the other rows are on. The next test begins with every other dot lit, in both the rows and columns. These dots then go out, and the unlit dots light, resulting in an alternating checkerboard pattern. The test will then repeat these cycles again until advanced to the next test or until the power is removed. ( Please Note- these tests may be interrupted at any time by operating the STEP push-button switch to advance to the next test.)

### T-REX Test

This test shows the status of all the switches on the T-Rex mechanism, and provides motor control when the appropriate switches are properly adjusted. To move the creature left and right, use the left and right flipper buttons. **Note:** *The T-REX Top Switch must indicate ON to allow left and right movement.* To move the creature up and down, use the start button. **Note:** *The T-REX Center Switch must indicate ON to allow up and down movement.* When adjusting the center switch **Do not bend the actuator**, loosen the mounting screws and re-position the entire switch.

Operating the trigger switch should pulse the Jaw coil.

### Laser Kick Test

This test provided to insure proper interaction between certain switches and their associated solenoids without entering game play. For example, by rolling the ball over the left outlane switch the Laser Kick should fire. If it kicks too early or too late, the switch actuator should be adjusted to compensate for this error. If it fails to fire, use the switch test or coil test to help determine the the cause of failure. Note: During this function, similar tests may be performed on Vertical Up Kickers or Saucers in the game.

## Switches

Switches are configured in an 8 x 8 matrix of columns (switch drives) and rows (switch returns) with up to 64 switches possible. The switch tests include three parts; switch test, active switches, and bad switches. Row and column wire colors are indicated in each test using corresponding resistor color code numbers.

### Switch Test

From the Laser Kick test, operate STEP push-button switch. Player 1 and 2 displays indicate SWITCH TEST. Close each switch and observe the displays. The Player 1 and 2 displays will indicate the switch name, the Player 3 display indicates the row and column wire colors, and the Player 4 display indicates the switch number. When a switch is released, the name and number disappear until another switch is closed or the test is exited.

### Active Switches


Operate the STEP push-button switch from the Switch Test. Player 1 and 2 Displays indicate ACTIVE SWITCHES. If any switches are stuck closed (or made from the presence of a ball), the Player 1 and 2 displays sequence through switch names, the Player 3 display indicates the row and column wire colors, and the switch numbers are indicated in the Player 4 display. This cycle continues until all switches are cleared or until the STEP push-button switch is depressed.

## SWITCH MATRIX CHART

COLUMN \ ROW	1 GRN-BRN CN8-1 Q55	2 GRN-RED CN8-2 Q54	3 GRN-ORN CN8-3 Q53	4 GRN-YEL CN8-4 Q52	5 GRN-BLK CN8-5 Q51	6 GRN-BLU CN8-7 Q50	7 GRN-VIO CN8-8 Q49	8 GRN-GRY CN8-9 Q48
1 WHT-BRN CN10-9	Plumb Tilt 1	Trough #1 Left 9	Outer Loop Low 17	Spitter Target #1 Bottom 25	Right Ramp Enter 33	Launch Trigger 41	Baryonyx Target 49	T.Rex Top (Up) 57
2 WHT-RED CN10-8	4th Coin 2	Trough #2 10	Outer Loop Top 18	Spitter Target #2 Middle 26	Right Ramp Exit 34	Smart Bomb Button 42	Gallimimus Target 50	T.Rex Bottom (Down) 58
3 WHT-ORN CN10-7	Credit Button 3	Trough #3 11	Inner Loop Low 19	Spitter Target #3 Top 27	Left Scoop 35	Left Slingshot 43	Not Used 51	T.Rex Trough 59
4 WHT-YEL CN10-6	Right Coin 4	Trough #4 12	Inner Loop Top 20	Not Used 28	T.Rex Center 36	Right Slingshot 44	Triceritop Target 52	Right Scoop Trough 60
5 WHT-GRN CN10-5	Center Coin 5	Trough #5 13	Right Outlane 21	Raptor Pit 29	Center Scoop 37	Top Turbo Bumper 45	Brachia- saurus Top 53	Right VUK 61
6 WHT-BLU CN10-3	Left Coin 6	Trough #6 14	Right Return 22	Not Used 30	Herrera saurus - Low 38	Left Turbo Bumper 46	Not Used 54	Not Used 62
7 WHT-VIO CN10-2	Slam Tilt 7	Trough #7 Right 15	Left Return 23	T.Rex Right 31	Herrera saurus - Top 39	Right Turbo Bumper 47	T.Rex Saucer Eject 55	Left Flipper 63
8 WHT-GRY CN10-1	Not Used 8	Shooter Lane 16	Left Outlane 24	T.Rex Left 32	Brachia- saurus Low 40	Mosquito Captive Ball 48	Right Saucer Eject 56	Right Flipper 64

# Jurassic Park - Switch Part Numbers

Switch Number	Description	Part No.
01*	Plumb Tilt	See Cabinet
02*	4th Coin	-
03*	Credit Button	500-5097-02
04*	Right Coin	180-5024-00
05*	Center Coin	180-5024-00
06*	Left Coin	180-5024-00
07*	Slam Tilt	180-5022-00
08	Not Used	-
09	Trough #1 Left	180-5119-00
10	Trough #2	180-5119-00
11	Trough #3	180-5119-00

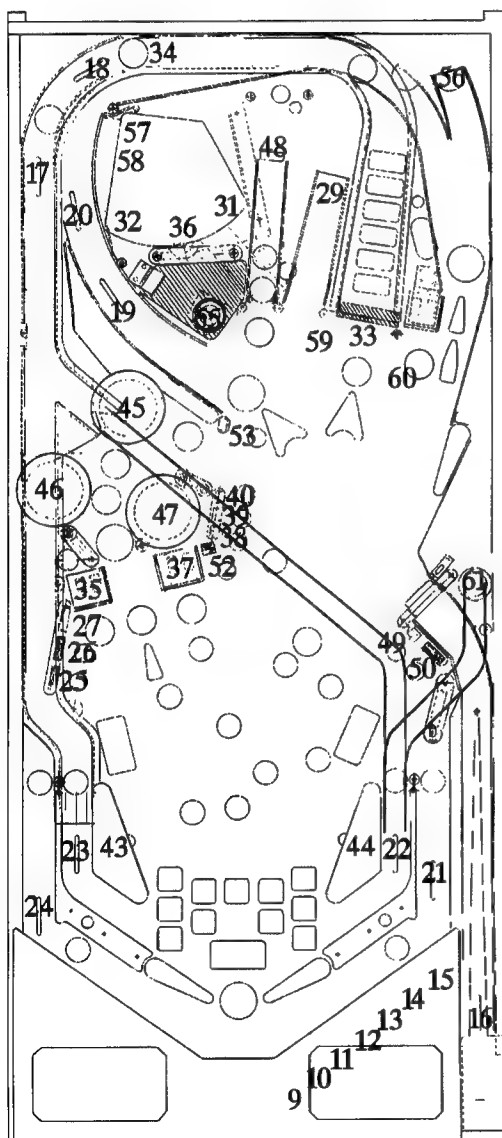

Switch Locations

Switch Number	Description	Part No.
12	Trough #4	180-5119-00
13	Trough #5	180-5119-00
14	Trough #6	180-5119-00
15	Trough #7 Right	180-5119-00
16	Shooter Lane	180-5100-01
17	Outer Loop Low	500-5142-00
18	Outer Loop Top	500-5142-00
19	Inner Loop Low	500-5142-00
20	Inner Loop Top	500-5142-00
21	Right Outlane	500-5142-00
22	Right Return	500-5142-00
23	Left Return	515-5138-00
24	Left Outlane	515-5138-00
25	Spitter Target #1 Bottom	180-5114-02
26	Spitter Target #2 Middle	180-5114-02
27	Spitter Target #3 Top	180-5114-02
28	Not Used	-
29	Raptor Pit	180-5100-01
30	Not Used	-
31	T.Rex Right	180-5040-00
32	T.Rex Left	180-5040-00
33	Right Ramp Enter	180-5087-00
34	Right Ramp Exit	180-5117-00
35	Left Scoop	180-5116-00
36	T.Rex Center	180-5123-00
37	Center Scoop	500-5442-01
38	Herrerasaurus Low	180-5120-02
39	Herrerasaurus Top	180-5120-02
40	Brachiasaurus Low	180-5120-04
41	Launch Trigger	180-5111-00
42	Smart Bomb Button	515-5825-00
43	Left Slingshot	180-5054-00
44	Right Slingshot	180-5054-00
45	Top Turbo Bumper	180-5015-01
46	Left Turbo Bumper	180-5015-01
47	Right Turbo Bumper	180-5015-01
48	Mosquito Captive Ball	180-5114-08
49	Baryonyx Target	180-5120-02
50	Gallimimus Target	180-5120-04
51	Not Used	-
52	Triceritops Target	180-5120-04
53	Brachiasaurus Top	180-5120-04
54	Not Used	-
55	T.Rex Saucer Eject	180-5027-00
56	Right Saucer Eject	180-5027-00
57	T.Rex Top (Up)	180-5040-00
58	T.Rex Bottom (Down)	180-5040-00
59	T.Rex Trough	180-5057-00
60	Right Scoop Trough	180-5057-00
61	Right VUK	180-5064-00
62	Not Used	-
63	Left Flip. Cab	180-5048-01
64	Right Flip. Cab	180-5022-00

## LAMP TESTS

Controlled lamps are configured in an 8 x 8 matrix of columns (lamp drives) and rows (lamp returns) with up to 64 lamps possible. The lamp tests include four parts, all lamps, lamp return (row), lamp drive (column), and discrete (individual) lamps. Row and column wire colors are indicated in the discrete lamp test using corresponding resistor color code numbers.

### All Lamps

From the Active Switch test, operate the STEP push-button switch. Player 1 and 2 displays indicate ALL LAMPS and all controlled lamps will light.

### Lamp Returns

From the ALL LAMPS test, depress the STEP push-button switch. The top display indicates LAMP RETURNS and the Bottom display indicates wire color and the LAMP RETURN driver transistor. All controlled lamps in row 1 should be lit. Operating the Game Start push-button switch cycles through each of the rows separately.

### Lamp Drives

From the LAMP RETURNS test, depress the STEP push-button switch. The Top display indicates LAMP COLUMNS and the bottom display indicates wire color and the LAMP DRIVES driver transistor. All controlled lamps in column 1 should be lit. Operating the Game Start push-button switch, cycles through each of the columns separately.


### Single Lamp

From the LAMP DRIVES test, depress the STEP push-button switch. The top display indicates lamp name. The bottom display indicates the row and column wire colors and the lamp matrix number. Lamp 01 should light. With the FORWARD/REVERSE push-button switch in the FORWARD (up) position, operating the Game Start push-button switch selects higher-numbered lamps; with it in the REVERSE (down) position, Game Start selects lower-numbered lamps.

## LAMP MATRIX CHART

COLUMN ROW	1 Q71 YEL-BRN CN7-1	2 Q70 YEL- RED CN7-2	3 Q69 YEL-ORN CN7-3	4 Q68 YEL-BLK CN7-4	5 Q67 YEL-GRN CN7-6	6 Q66 YEL-BLU CN7-7	7 Q65 YEL-VIO CN7-8	8 Q64 YEL-GRY CN7-9
1 Q72 RED-BRN CN6-1	Visitor Center X2 1	Credit Button 9	Left Scoop Bottom 17	Spitter #1 Bottom 25	Center Scoop Bottom 33	C 41	Baryonyx Target 49	Right Scoop Bottom 57
2 Q73 RED-BLK CN6-2	"T" Arch 2	Mosquito X2 10	Left Scoop Top 18	Spitter #2 26	Center Scoop Top 34	H 42	#2 50	Right Scoop Top 58
3 Q74 RED-ORN CN6-3	Brachia- saurus Map 3	Electric Fence 11	Helo X2 19	Spitter #3 27	Advance X 35	A 43	2Ball Play Arrow 51	Brachia- saurus Top 59
4 Q75 RED-YEL CN6-5	Spitter Map 4	Spitter Attack 12	Raptor Multi- Million 20	Boat Dock X2 28	Triceratop 36	0 44	Raptor Pit 5 Million 52	"X" Arch 60
5 Q76 RED-GRN CN6-6	Herrera- saurus Map 5	2 Ball Grid 13	Feed T.Rex 21	Jackpot Loop 29	T-Rex Map 37	S 45	Raptor Pit Jackpot 53	Egg 61
6 Q77 RED-BLU CN6-7	Map 6	System Boot 14	Bone Buster 22	Jackpot Map 30	Herrera- saurus Low 38	Gate X2 46	Raptor Pit Danger 54	Left Turbo Bumper 62
7 Q78 RED-VIO CN6-8	Triceratop Map 7	Raptor Rampage 15	Escape Isle Nubar 23	Top Turbo Bumper 31	Herrera- saurus Top 39	"R" Arch 47	Outlanes Special X2 55	Extra Ball Arrow 63
8 Q79 RED-GRY CN6-9	Gallimimus 8	Light Extra Ball 16	Stampede 24	Right Turbo Bumper 32	Brachia- saurus Low 40	"C" Arch 48	Shoot Again 56	Smart Bomb X2 64

Lamp Number	Description
01	Visitor Center (2 Bulbs)
02	"T" Arch
03	Brachiasaurus Map
04	Spitter Map
05	Herrerasaurus Map
06	Map
07	Triceratops Map
08	Gallimimus
09	Credit Button
10	Mosquito (2 Bulbs)
11	Electric Fence

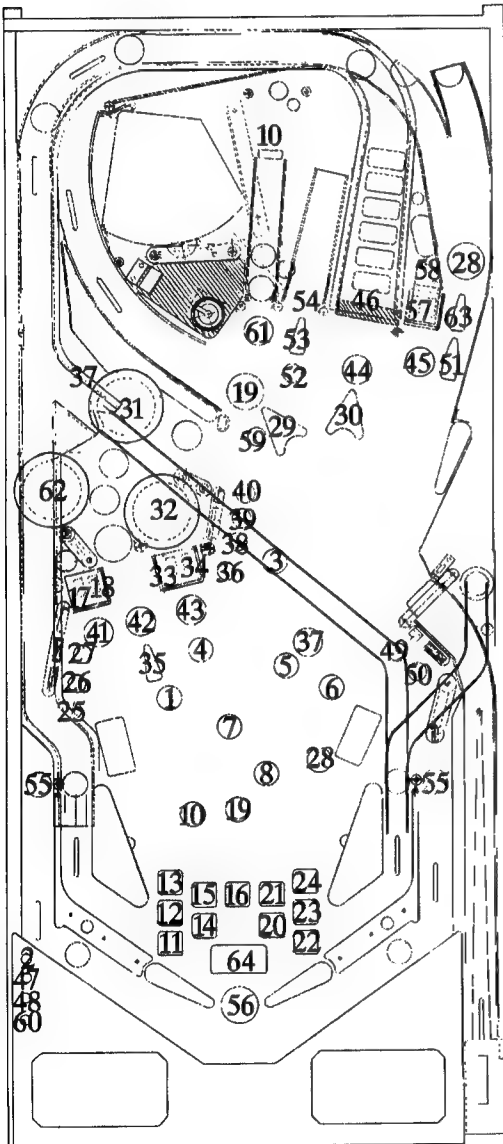

**Lamp Locations**

**Note:**  
See page 36 for lamp part numbers

12	Spitter Attack
13	2 Ball Grid
14	System Boot
15	Raptor Rampage
16	Lite Extra Ball
17	Left Scoop Bottom
18	Left scoop Top
19	Helo (2 Bubs)
20	Raptor Multi-Million
21	Feed T.Rex
22	Bone Buster
23	Escape Isla Nubar
24	Stampede
25	Spitter #1 Bottom
26	Spitter #2
27	Spitter #3
28	Boat Dock (2 Bulbs)
29	Jackpot Loop
30	Jackpot Map
31	Top Turbo Bumper
32	Right Turbo Bumper
33	Center Scoop Bottom
34	Center Scoop Top
35	Advance X
36	Triceratops
37	T-Rex Map
38	Herrerasaurus Low
39	Herrerasaurus Top
40	Brachiasaurus Low
41	C
42	H
43	A
44	O
45	S
46	Gate (2 Bulbs)
47	"R" Arch
48	"C" Arch
49	Baryonyx Target
50	#2
51	2 Ball Play Arrow
52	Raptor Pit 5 Million
53	Raptor Pit Jackpot
54	Raptor Pit Danger
55	Outlanes Special (2 Bulbs)
56	Shoot Again
57	Right Scoop Bottom
58	Right Scoop Top
59	Brachiasaurus Top
60	"X" Arch
61	Egg
62	Left Turbo Bumper
63	Extra Ball Arrow
64	Smart Bomb (2 Bulbs)

## FLASH LAMP / COIL TESTS

Twenty-Two regular (pulsed under microprocessor control) coil drivers are provided to switch ground to coils. The Left/Right relay is used in conjunction with drives 1 through 8 to switch +32 volts between coils or flash lamps; these sets are termed "left" and "right". This relay is located on the PPB board which provides isolation diodes and current limiting resistors. This effectively provides 29 regular coils.

### Flash Lamp

From the Single Lamp test, depress the STEP push-button switch. All Flash lamps will fire randomly. This allows the Technician to easily spot any burned out bulbs and replace them without stepping through the tests below.

### Automatic Test


From the Flash Lamps test, depress the STEP push-button switch. Player 1 and 2 displays indicate ALL COILS. The test pulses each regular solenoid or flash lamp sequentially with the coil/flash lamp name indicated in the Player 1 and 2 displays and the wire colors in the Player 3 and 4 displays.

### Select Coil

From the Coil Test, depress the STEP push-button switch. Player 1 and 2 displays indicate SELECT COIL and then the name of 1st drive, the wire colors are indicated in the Player 3 and 4 displays. Operate either Flipper push-button switch to select the coil or flash lamp to be tested. With the desired drive number indicated in the Player 4 display, depress the START push-button switch to cause it to be pulsed repeatedly.

### RETURN TO GAME OVER

From the Select Coil test, depress the STEP push-button switch once. The game returns to the game-over mode.

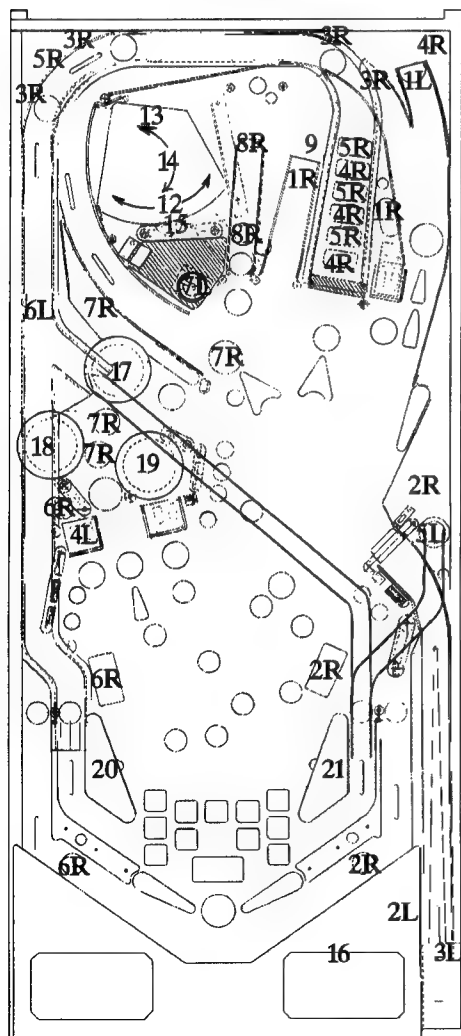



### CPU Controlled Auxillary Solenoids

Coil Number	Coil Description	Control Line (CPU to Coil)	Power Line (PS to Coil)	Drive Transistor	Coil Type
17	Top Turbo Bumper	BLU-BRN CPU CN19-7	RED PS CN3-6	Q11	23-800
18	Left Turbo Bumper	BLU-RED CPU CN19-4	RED PS CN3-6	Q9	23-800
19	Right Turbo Bumper	BLU-ORN CPU CN19-3	RED PS CN3-6	Q8	23-800
20	Left Slingshot	BLU-YEL CPU CN19-6	RED PS CN3-6	Q10	23-800
21	Right Slingshot	BLU-GRN CPU CN19-8	RED PS CN3-6	Q12	23-800
22	Shaker Motor (See Schematic)	BLU-BLK CPU CN19-9	VIO-YEL PPB J7-3	Q13	23-800

### Flipper Solenoids


Coil Description	Flipper GND CPU to Flip Sw. to Flip.PCB	Power Lines FlipPc toCoil	Coil Type	Power Input To Flip PCB
Left Flipper 090-5020-30	ORN-GRY CPU CN19-2	BLU-GRY CN1-9	GRY-YEL CN2-4,5	23-900
Right Flipper 090-5020-30	ORN-VIO CPU CN19-1	BLU-VIO CN1-1	BLU-YEL CN2-7,8	23-900
Upper Right Flipper 090-5041-00	ORN-VIO CPU CN19-1	GRY-VIO CN1-12	BLK-YEL CN2-1,2	25-1800
				BLK-WHT 50VDC GRY, GRY-GRN 8VAC

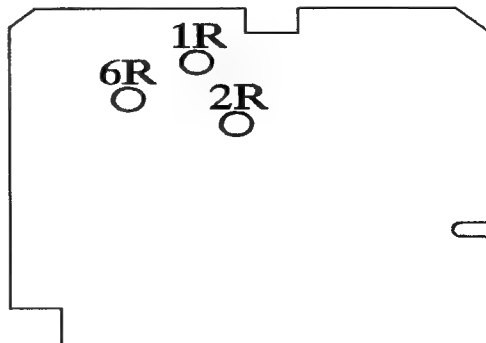

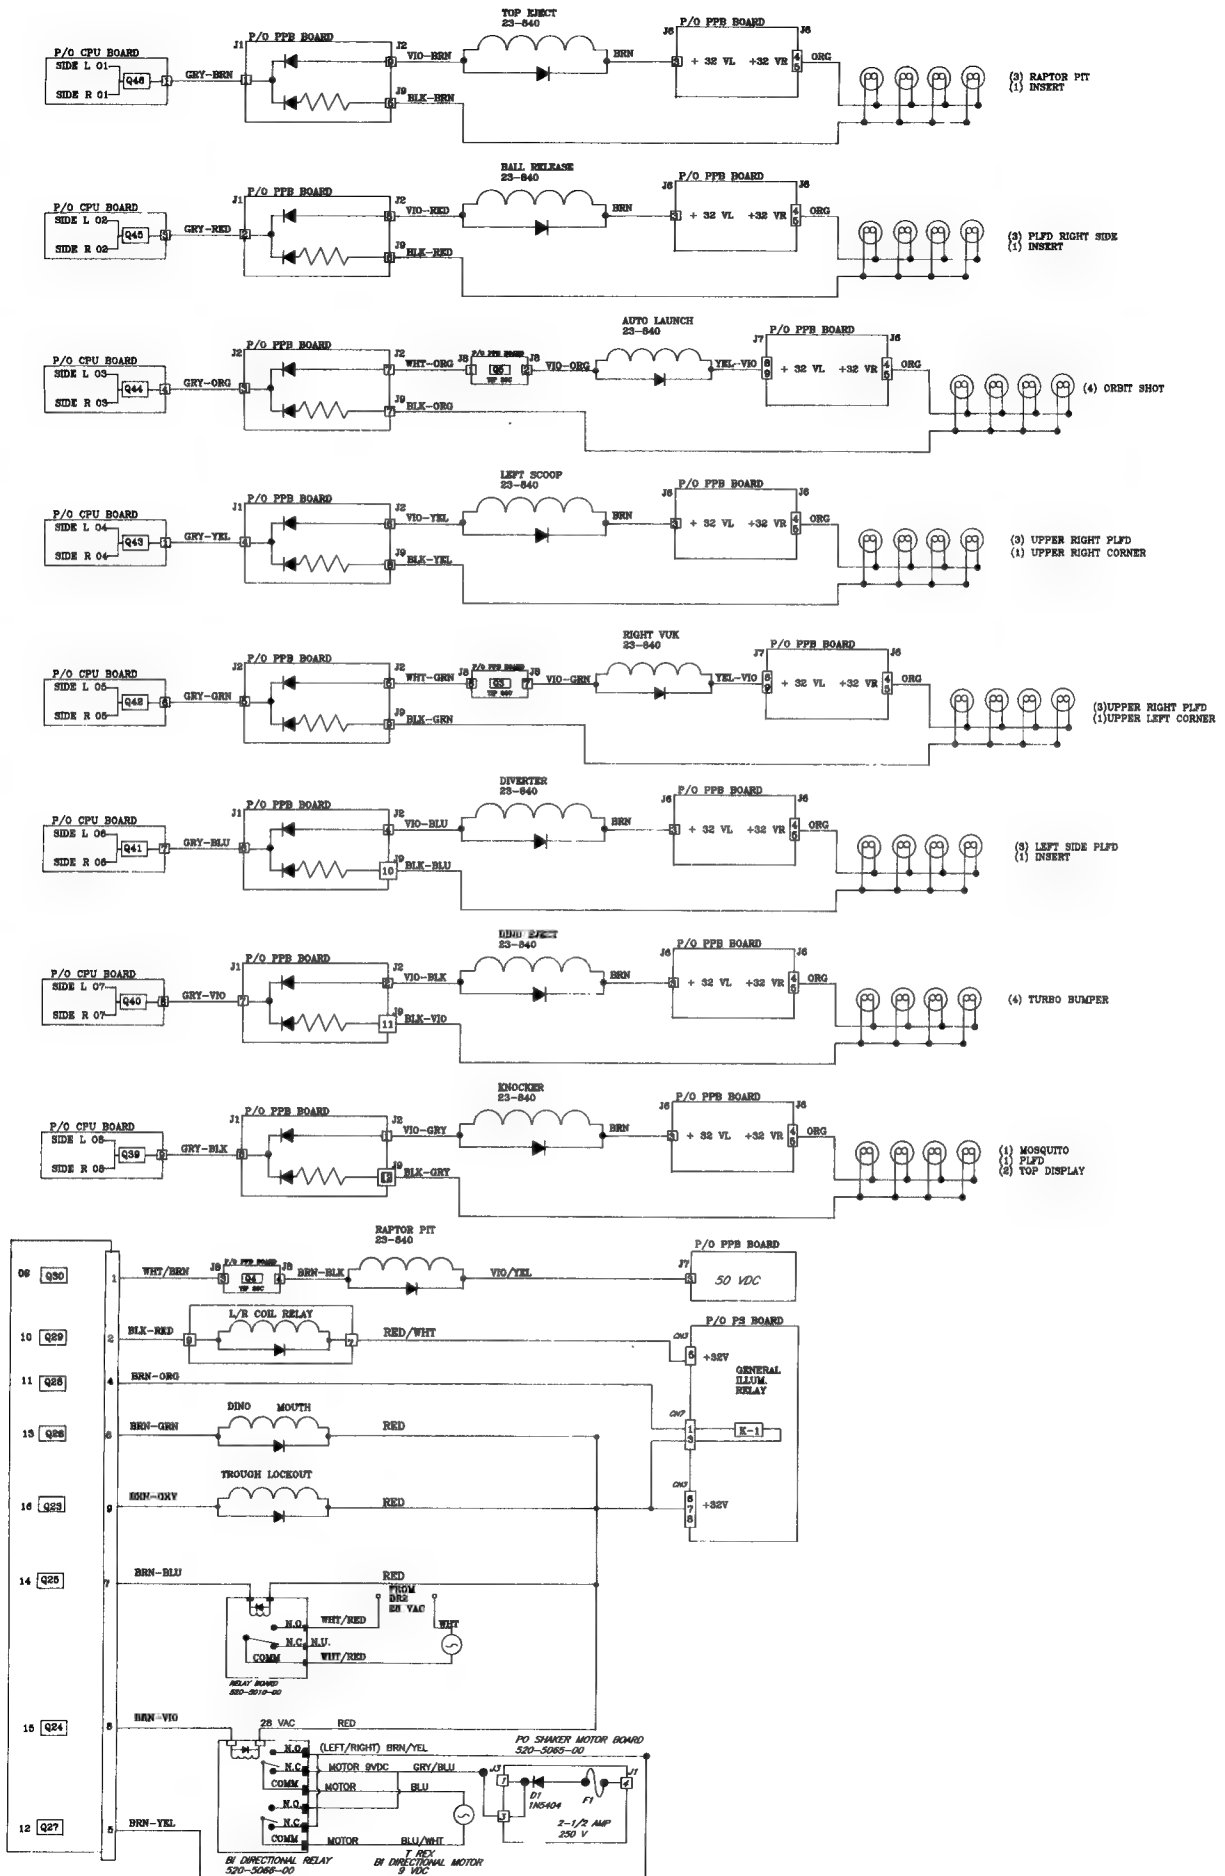




# CABINET PARTS ILLUSTRATION

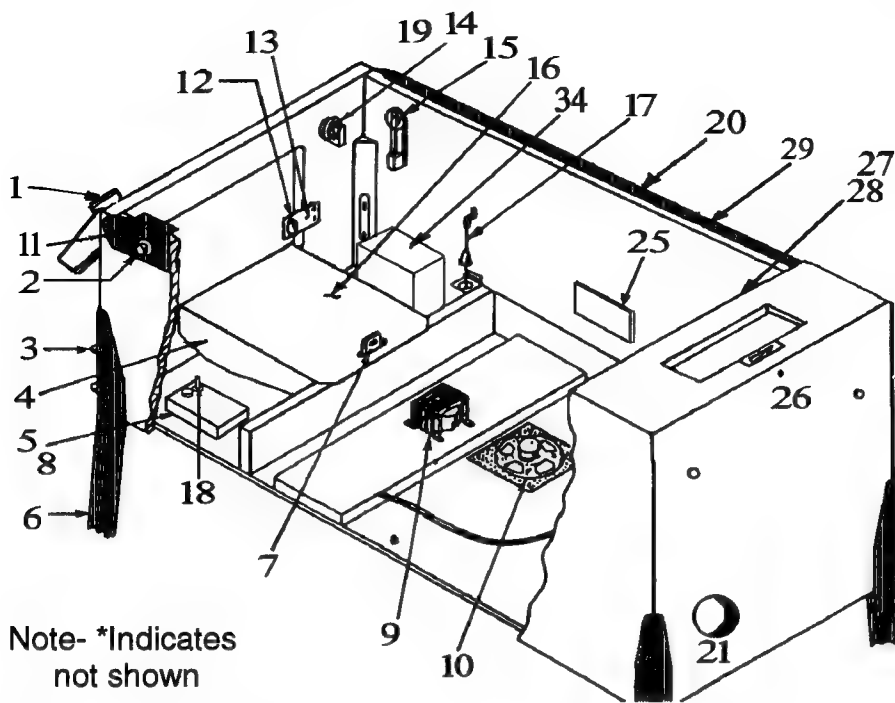

Item	Description	Part No.
1	Shooter Gun Assy.	500-5673-00
2	Flipper Button	500-5026-36
3	Leg Bolt (Black)	231-5000-01
4	Cash Box Bottom	545-5090-00
5	On/Off Switch DP/ST	180-5001-00
6	Leg (Black)	535-5020-30
7	Lock Bracket-Cash Box	535-5215-00
8	Power Input Box Assy	515-5360-00
9	Transformer	010-5003-00
10	Speaker-Round (8")	031-5005-00
11	Side Armor-Right	535-5010-31
12	Memory Protect Switch	180-5000-00
13	Memory Protect Switch Bracket	535-6409-00
14	Push Button Switch	180-0028-00
15	Left Flipper Leaf Switch	180-5048-01
15a	Right Flipper Leaf Switch *	180-5122-00
16	Cash Box Top	535-5013-03
17	Plumb Bob Tilt Assembly	500-5023-00
18	Volume Control	123-5000-02
19	Playfield Glass (Tempered) *	660-5001-00
20	Side Armor -Left	535-5010-32
21	Recessed cup for Line cord	545-5122-00
22	Service Switch (Not Shown)	180-5012-00
23	Front Molding Lockdown Assy.*	500-5020-00
24	Front Molding -Black *	500-5021-10
25	S.S.Flipper P.C.B.	520-5033-02
26	Roto Lock Bottom	355-5006-01
27	Rear Plastic Extrusion for Playfield Glass	545-5038-00
28	Mounting Foam for Extrusion	626-5004-00
29	Plastic Channel (Right & Left)	545-5017-00
30	Backbox Hinge Left *	535-6172-00
31	Backbox Hinge Right *	535-6172-01
32	Leg Leveler *	500-5017-00
33	Coin Door with Validator Blank*	500-5018-17
34	Shaker Motor	500-5228-00
35	Shaker Motor P.C. Board *	520-5065-00

## Playfield - Major Assemblies

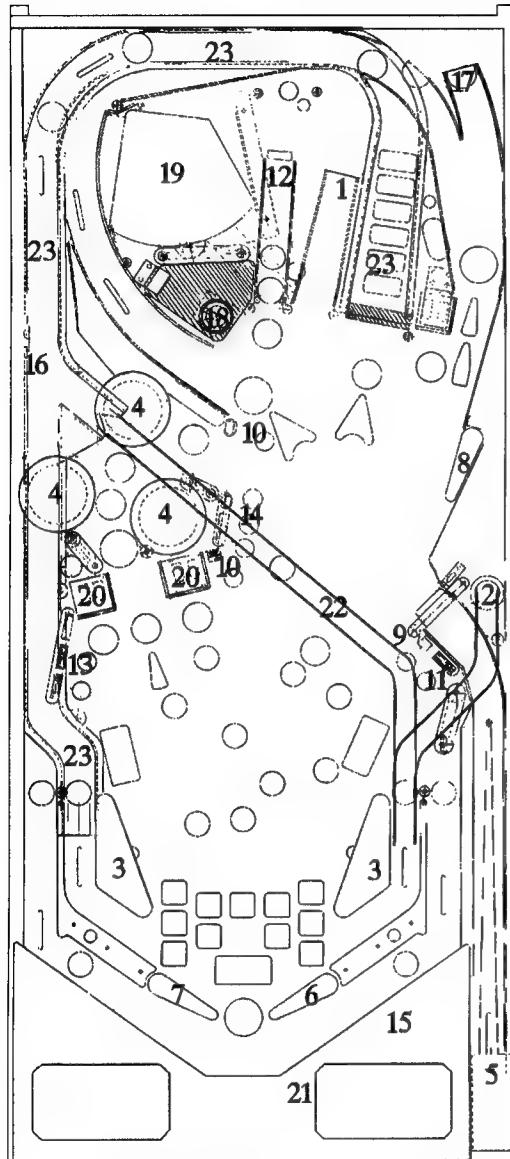


### Item Description

### Part No.

1.	Kickback Assy.	500-5081-00
2.	Super VUK	500-5116-04
3.	Sling Shot Assy.	500-5226-00
4.	Pop Bumper	500-5277-00
5.	Ball Launch	500-5477-00
6.	Flipper Right	500-5606-77
7.	Flipper Left	500-5606-78
8.	Flipper Right Upper	500-5606-79
9.	S/U Narrow Tgt. Assy.	500-5639-12
10.	S/U Tgt. 1 Bank Green	500-5639-14
11.	1 Bank ST/UP Target	500-5640-14
12.	1 Bank ST/UP Target	500-5640-18
13.	3 Bank ST/UP Target	500-5640-32
14.	3 Bank ST/UP Target	500-5641-00
15.	6 Ball Switch Assy.	500-5645-00
16.	Diverter Assy.	500-5661-00
17.	Ball Eject	500-5664-00
18.	Dino Eject	500-5665-00
19.	Dinosaur Assy.	500-5667-00
20.	Double Scoop	515-5772-00
21.	Outhole Ball Deflector	535-6568-00
22.	Wire Ramp	535-6531-00
23.	Ramp Assembly	500-5669-00

**Note:**  
See page 27 for switch part numbers

Individual part breakdowns for most of these assemblies can be found on pages 37 through 43 and 68 through 72.

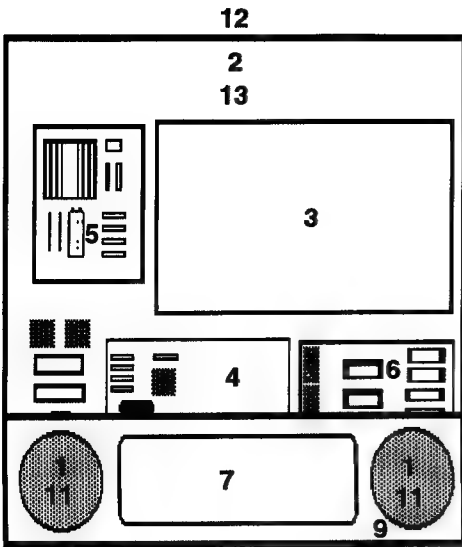

Item	Description	Part No.
1	Speakers	031-5004-00
2	Back Box Lock	355-5008-00
3	CPU †	520-5003-00NR
4	PPB Board	520-5021-05
5	Power Supply	520-5047-02
6	Sound Board †	520-5050-02
7	Dot Matrix ‡	520-5052-XX
8	Display Controller Board †	520-5055-00
9	Speaker Housing	545-5180-01
10	BackGlass Mylar *	830-5220-00
11	Speaker Grill	830-5623-00
12	Back Box Plastic	545-5391-00
13	Back Box Lock Plate	535-5860-00
14	Static Shield*	545-5463-00
15	Backglass Clear	660-5008-00


† When ordering PC Boards with ROMs  
please specify game name

\* Not Shown

‡ Indicate Manufacturer

## RUBBER PARTS ILLUSTRATION


Item	Description	Part #
A	Post Rubber (3)	545-5009-00
B	Post Rubber (9)	545-5151-00
C	Flipper Rubber (3)	545-5277-00
D	$\frac{3}{16}$ " I.D. Ring (3)	545-5348-01
E	$\frac{3}{8}$ " I.D. Ring (3)	545-5348-03
F	$\frac{3}{4}$ " I.D. Ring (1)	545-5348-04
G	1" I.D. Ring (1)	545-5348-05
H	1 $\frac{1}{4}$ " I.D. Ring (5)	545-5348-06
I	$\frac{1}{2}$ " I.D. Ring (1)	545-5348-07
J	$\frac{3}{8}$ " O.D. Ring (1)	545-5348-19
K	2 $\frac{3}{4}$ " I.D. Ring (3)	545-5348-20

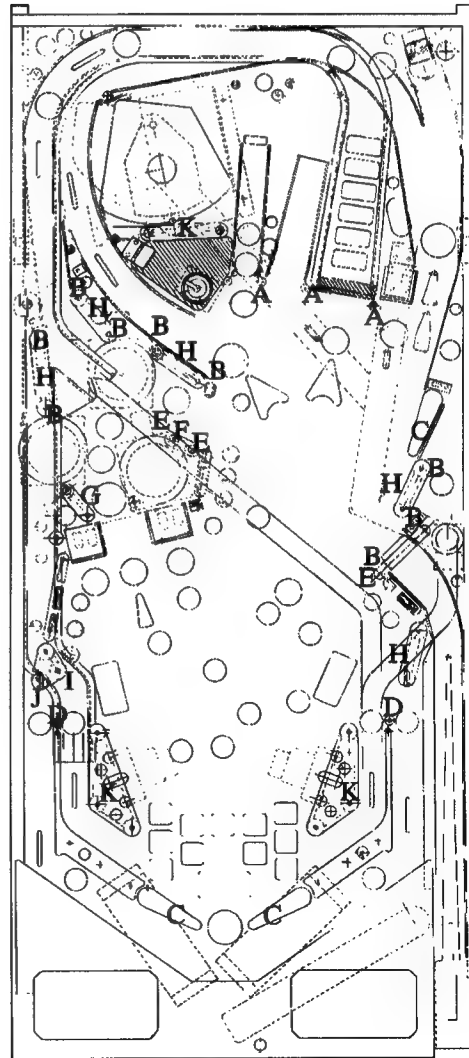

# Playfield Parts

## No. Description


## Part No.

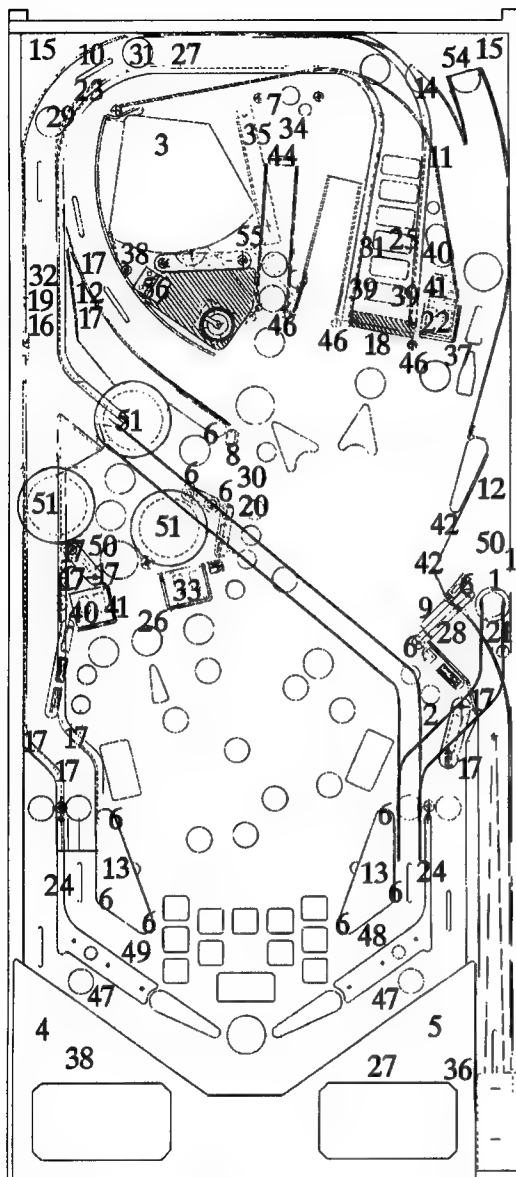



**Note:**  
See page 27 for switch part numbers

1. Spacer 1" 254-5000-04
2. Wire Ramp 535-6532-00
3. Dino Asy. 500-5667-00
4. T-Rex Lamp 500-5670-00
5. Lock Ball Assy. 500-5684-00
6. Metal Standoff 530-5035-01
7. Amber Plastic (Fossil) 545-5331-00
8. Rebound Gate 515-5797-00
9. Rebound Gate 535-5022-00
10. Ramp Switch 500-5679-00
11. Wire Form 2 1/2" 535-5300-01
12. Wire Form 3" 535-5300-02
13. Wire Form 1" 535-5300-05
14. Wire Form 1 3/4" 535-5300-09
15. Mini Mars Red 550-5055-02
16. Retaining Ring 250-0008-00
17. Bumper Post 545-5308-00
18. Ramp Plate 535-6534-00
19. Diverter Spring 266-5034-00
20. Rebound Hinge Pin 535-5372-00
21. Pteranodon 545-5396-00
22. Ball Deflector 535-5380-01
23. Wire Gate 535-5625-00
24. Wire Form 535-5642-00
25. Wire Gate 535-5694-00
26. Scoop Gate 535-5696-00
27. Wire Gate 535-5697-00
28. Rebound Brkt. 535-5742-00
29. Wire Gate and Swith Brkt 535-5960-00
30. Ball Gate Flap 535-6043-01
31. Sw. Body Protectant 535-6539-00
32. Diverter Assembly 515-5781-00
33. Scoop Plate 535-6548-00
34. Lite Brkt. 535-6559-00
35. Fossil Brkt 535-6562-00
36. Ball Deflector 535-6568-00
37. Ball Hopper 535-6592-00
38. T-Rex Brkt. 535-6596-00
39. Lite Cover Red 545-5014-02
40. Lite Cover Green 545-5014-04
41. Lite Cover Yellow 545-5014-06
42. Double Rubber 545-5209-01
43. Lite Shield 545-5255-00
44. Amber Mosquito 545-5331-00
45. Small Plastic Spacer 550-5034-01
46. Metal Standoff 530-5007-00
47. Return Lane Guides 550-5037-01
48. Return Guide-Right 550-5043-01
49. Return Guide-Left 550-5045-01
50. Mini Mars Clear 550-5055-01
51. Pop Bumper Cap 550-5056-01
52. Decal Sheet 820-6030-00
53. Screened Playfield 830-5120-00
54. Ball Deflector 535-6017-00
55. Brkt, Dino Skirt 535-6618-00
56. Brkt, Dino Deflector 535-6619-00


# Lamp Bulb Part Numbers

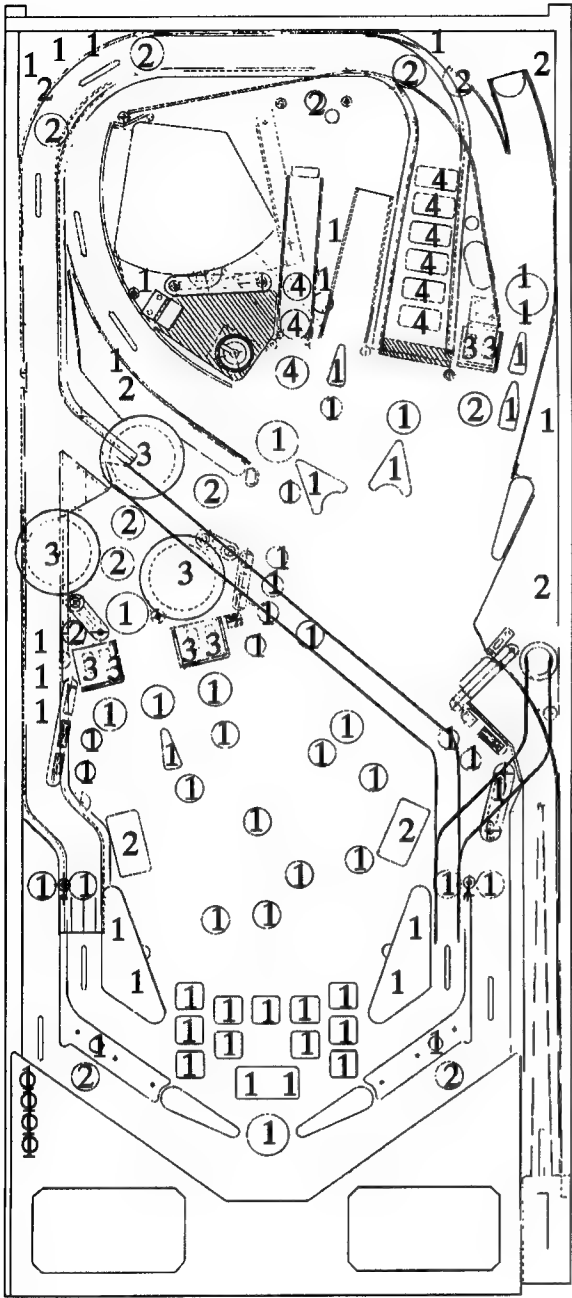

Item	Description	Part Number
1	#44 Bulb	165-5000-44
2	#89 Bulb	165-5000-89
3	#555 Bulb	165-5002-00
4	# 906 Bulb	165-5004-00

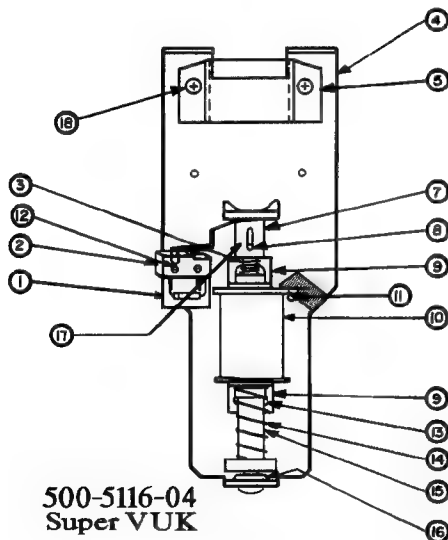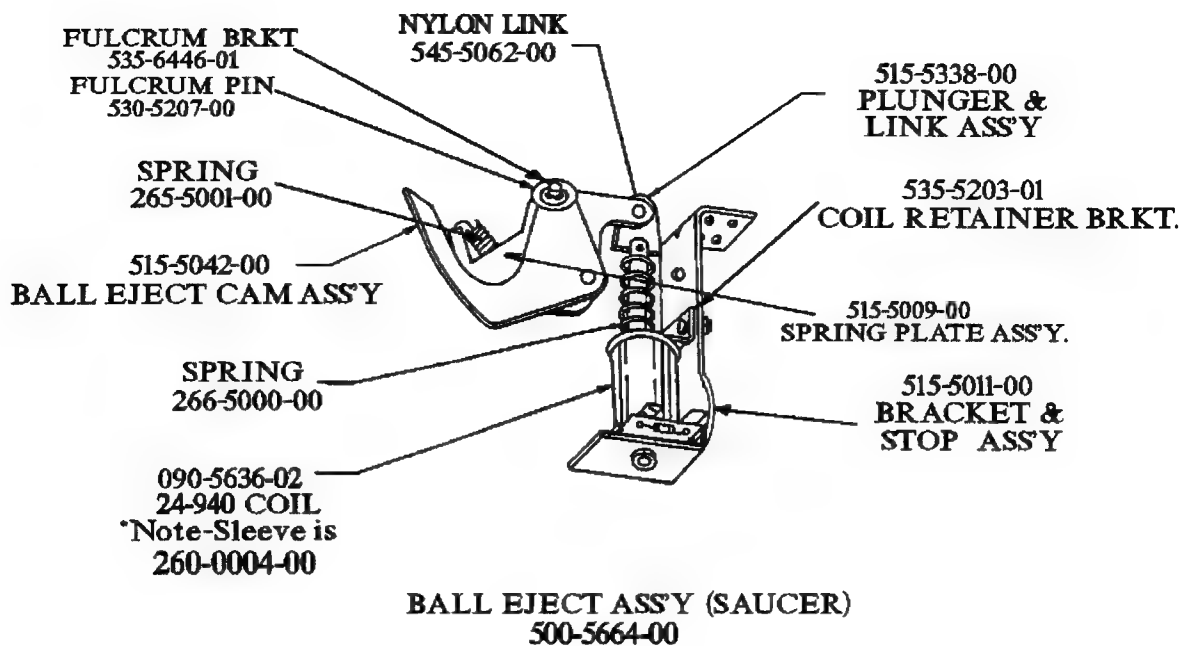

Item	Description	Part #
1	Sw. Insulator	545-5193-00
2	Micro Switch	180-5064-00
3	Cap Spring	266-5025-00
4	Ball Kickup Mtg. Brkt.	535-5298-00
5	Ball Guide Brkt.	535-6047-00
6	# 6-32 x <sup>3</sup> / <sub>8</sub> SEMS (2)*	232-5201-00
7	Vert. Kick. Cap	545-5227-00
8	Pin <sup>3</sup> / <sub>32</sub> x <sup>7</sup> / <sub>16</sub>	251-5004-00
9	Coil Retainer Brkt. (2)	535-5203-01
10	Coil 23-800	090-5001-01
11	1N4004 Diode	112-5003-00
12	2-56 x <sup>1</sup> / <sub>2</sub> Screw (2)	237-5806-00
13	# 6-32 x <sup>1</sup> / <sub>4</sub> Phil.M.S.	232-5200-00
14	Spring	266-5009-00
15	Plunger Assy.	515-5352-00
16	Bumper	545-5105-00
17	Compression Ring (3)	270-5010-00
18	#6-32 x <sup>1</sup> / <sub>4</sub> SEMS	232-5200-00

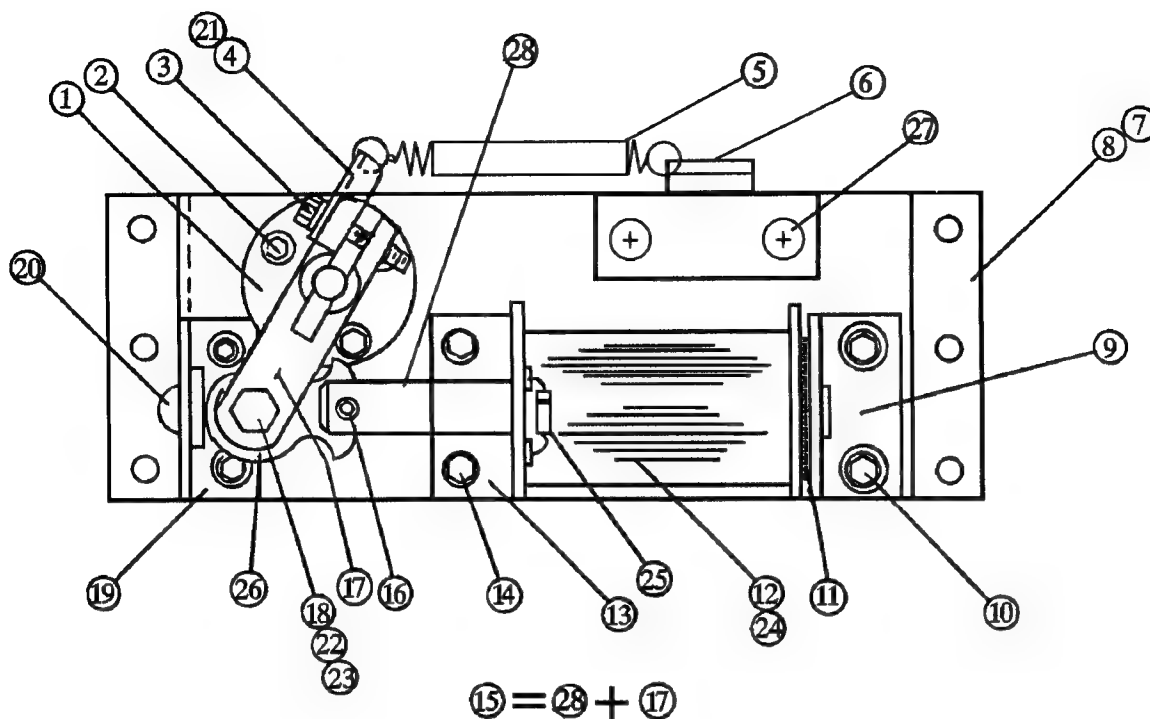

Item	Description	Part #	Item	Description	Part #
1	Flipper Bushing	545-5070-00	15	Plunger, Link & Pawl	515-5051-00
2	#6 x <sup>3</sup> / <sub>8</sub> Hex Hd.scr.	234-5000-00	16	Pin	251-5000-00
3	#10-32 x <sup>3</sup> / <sub>4</sub> Soc.Hd.scr.	232-2206-12	17	Pawl	530-5070-00
4	Spring Brkt. (left)	535-6421-00	18	10-32x <sup>3</sup> / <sub>4</sub> Shoulder Bolt	231-5019-00
5	Flipper Return Spring	265-5029-02	19	Rebound Brkt.	535-5279-00
6	Spring Bracket	535-6469-00	20	Rubber Bumper	545-5105-00
7	Flipper Base (left)	515-5077-02	21	Spring Brkt. (right)	535-6422-00
8	Flipper Base (right)	515-5077-01	22	Bushing (inside Link)	530-5139-00
9	Coil Stop Brkt.	515-5346-00	23	10-32 Elastic Stop Nut	238-1306-00
10	<sup>1</sup> / <sub>4</sub> -20x <sup>3</sup> / <sub>8</sub> Soc.Hd.scr.	231-2507-06	24	Coil Sleeve	260-0003-00
11	Spring Washer	269-5002-00	25	1N4004 Diode	112-5003-00
12	Coil 23-900	090-5020-30	26	Flipper Link	545-5401-00
13	Front Brkt.	515-5129-00	27	#8 <sup>3</sup> / <sub>8</sub> Pan Hd.Thr.Form	237-5821-00
14	#8 x <sup>3</sup> / <sub>8</sub> Hex Hd.Scr.	234-5100-00	28	Plunger & Link Ass'y.	515-5822-00

## Flipper Assemblies

**500-5693-01 Right**



**500-5693-02 Left** (uses Switch 180-5124-00)



**500-5694-01 Upper Right** (uses coil 090-5030-00)




## Slingshot Assembly 500-5226-00


Item	Description	Part No.
1	Slingshot Bracket	515-5339-00
2	S.S. Arm & Tip Assy.	515-5340-00
3	Plunger & Link Assy.	515-5338-00
4	1/4 Retaining Ring (2)	270-5002-00
5	Spring	266-5020-00
6	23-800 Coil w/Sleeve	090-5001-02
7	Coil Sleeve	260-0004-00
8	Coil Retainer	535-5203-01
9	#8-32 X 1/4" Screw (2)	232-5300-00
10	Slingshot Switch (2)	180-5054-00
11	Tension Plate (2)	535-5846-00
12	#4-40 X 1/2" Screw (4)	237-5837-00
13	Diode 1N4004 (2)	112-5004-00
14	Link	545-5062-00

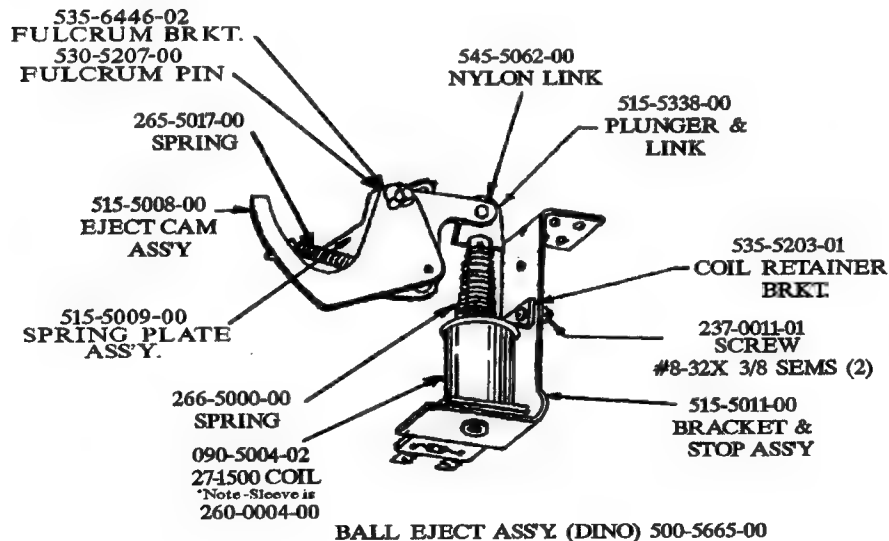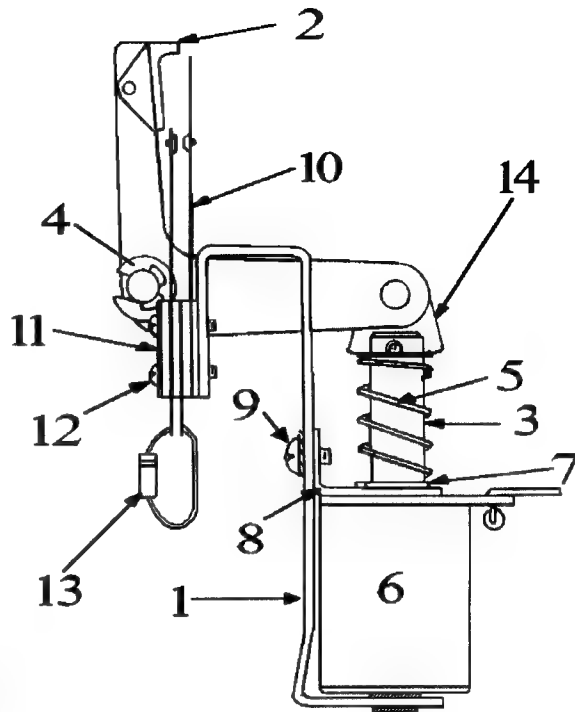

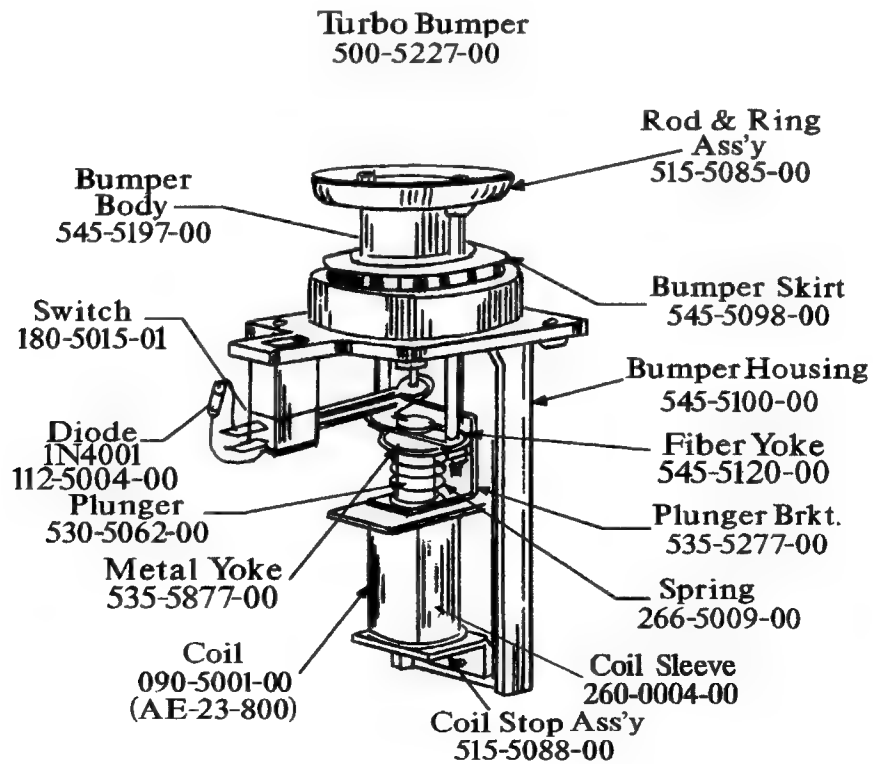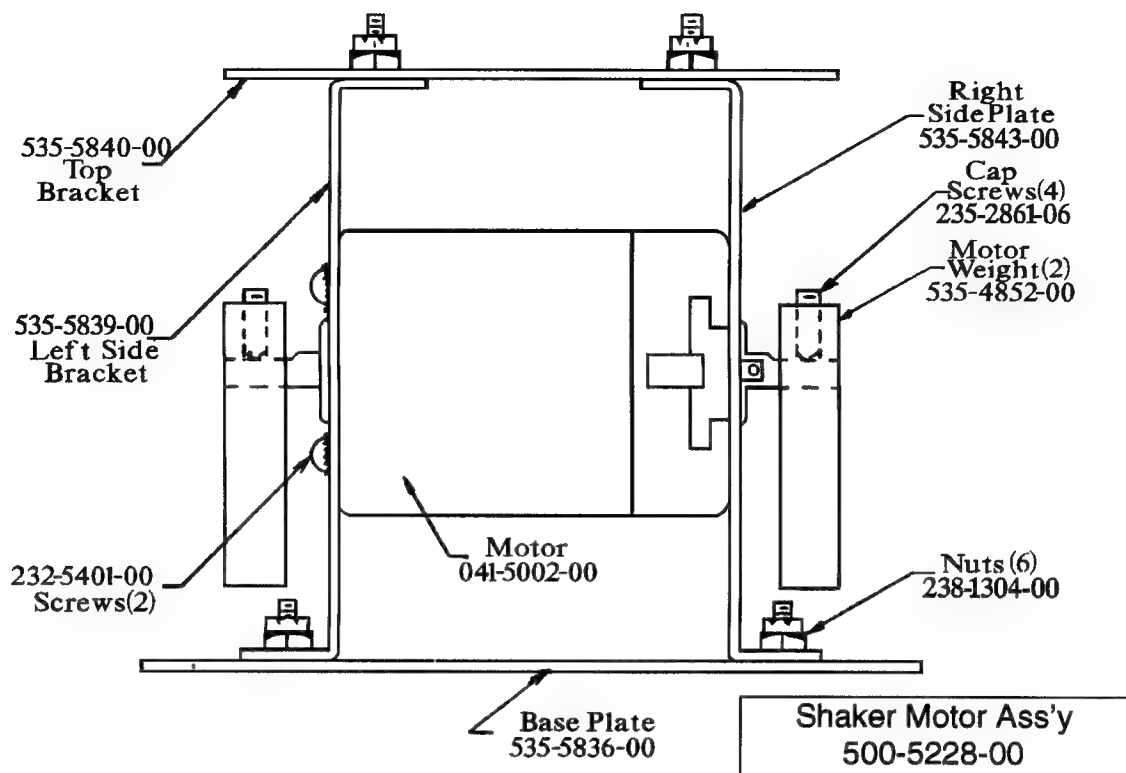


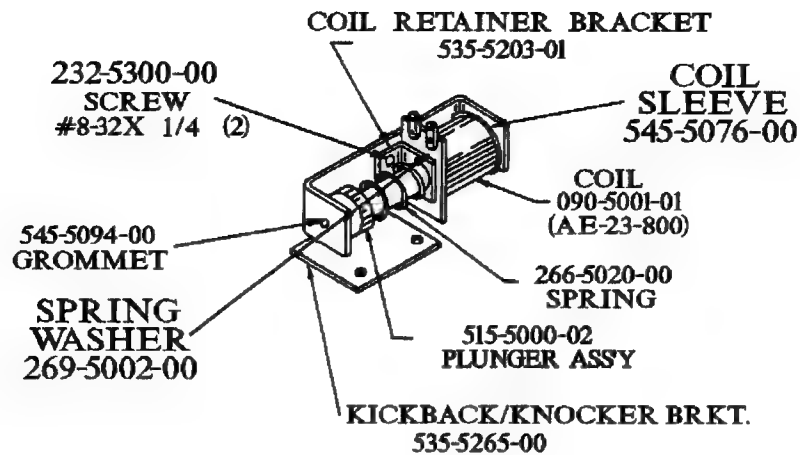



KICKBACK &  
KNOCKER ASSEMBLY 500-5081-00

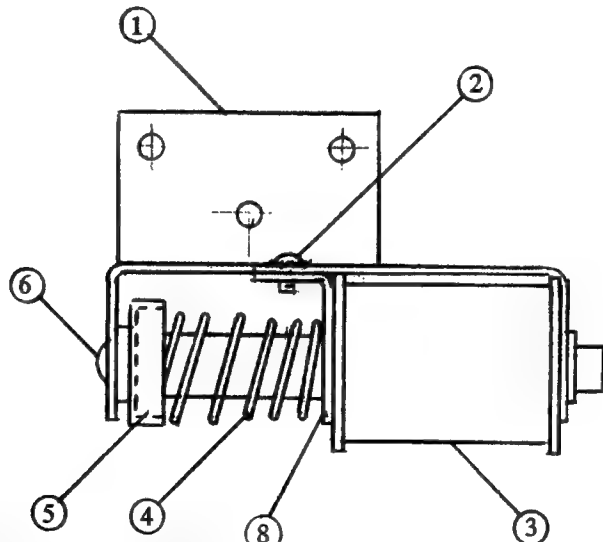


Item	Description	Part #
1	Coil Mtg. Brkt.	535-6385-00
2	8-32x1/4 Sems.(2)	232-5300-00
3	Coil 23-800	090-5001-01
4	Spring	266-5020-00
5	Plunger Ass'y.	515-5000-02
6	Grommet	545-5105-00
7	1N4004 Diode	112-5003-00
8	Coil Retainer Brkt.	535-5203-03

**Ball Launch Ass'y  
500-5477-00**

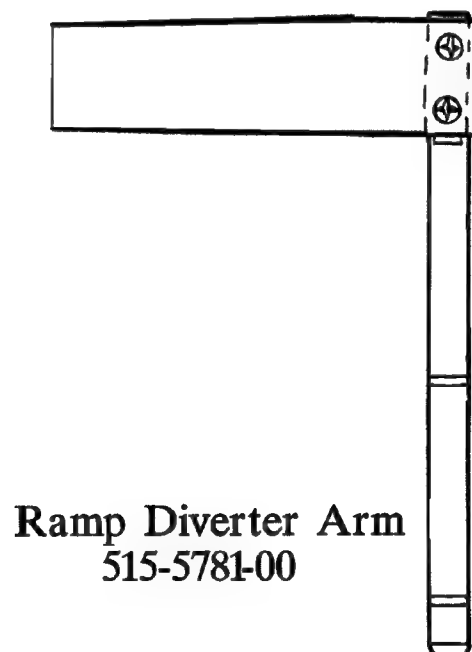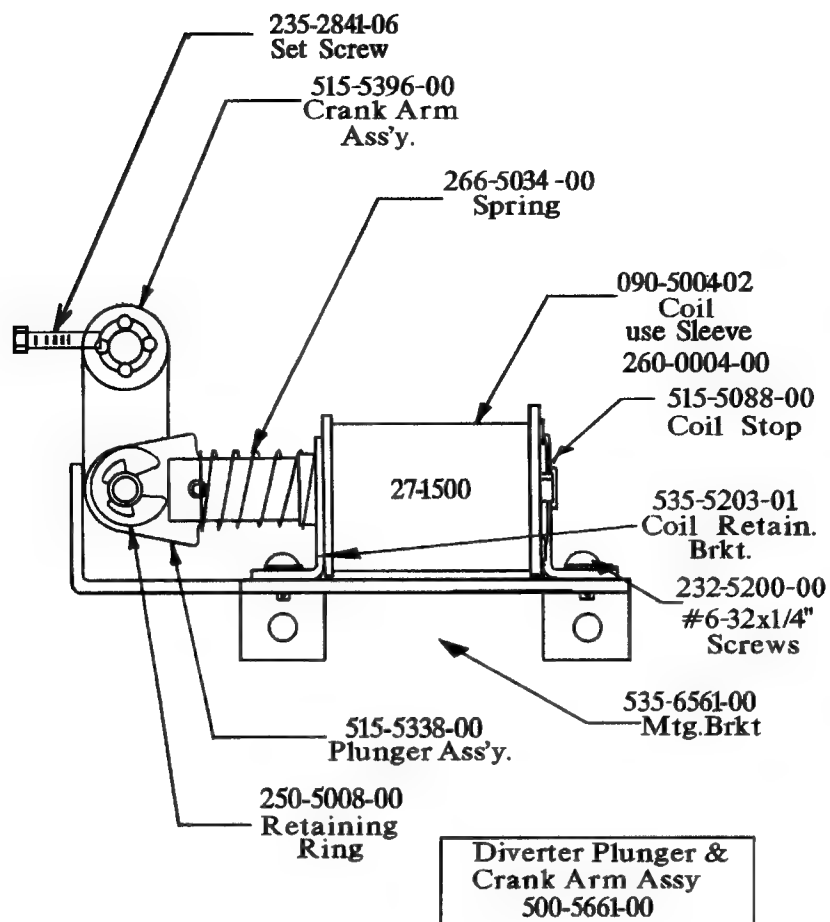


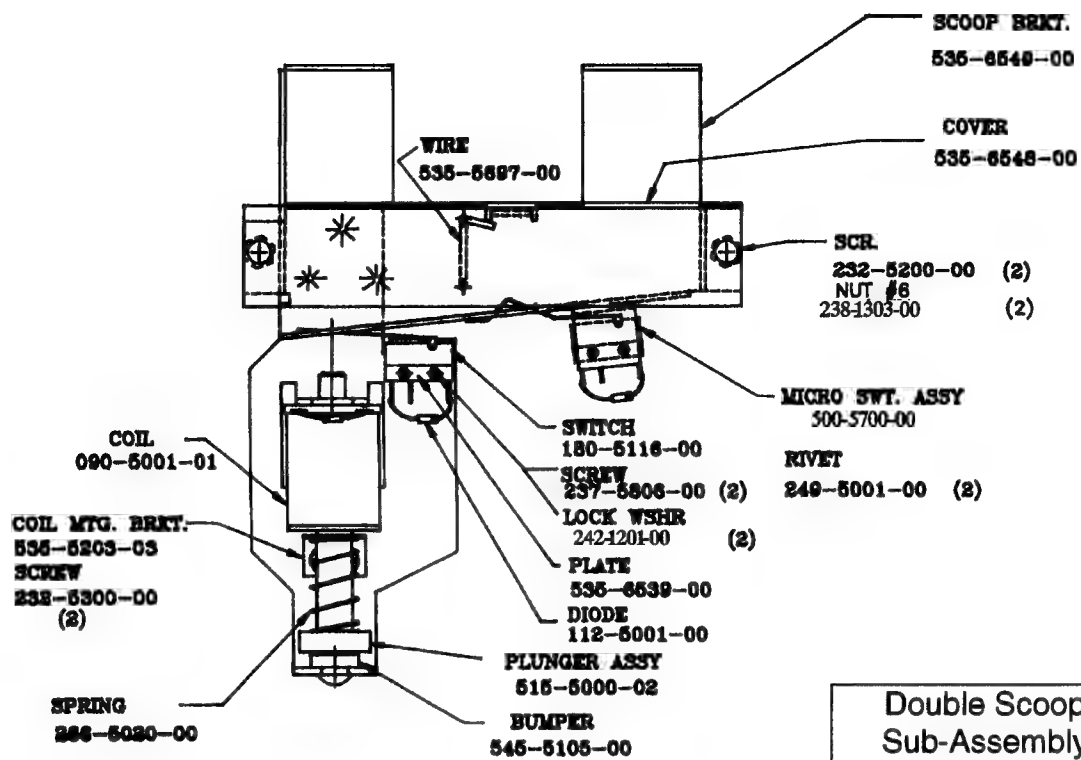


Double Scoop  
Sub-Assembly  
515-5772-00

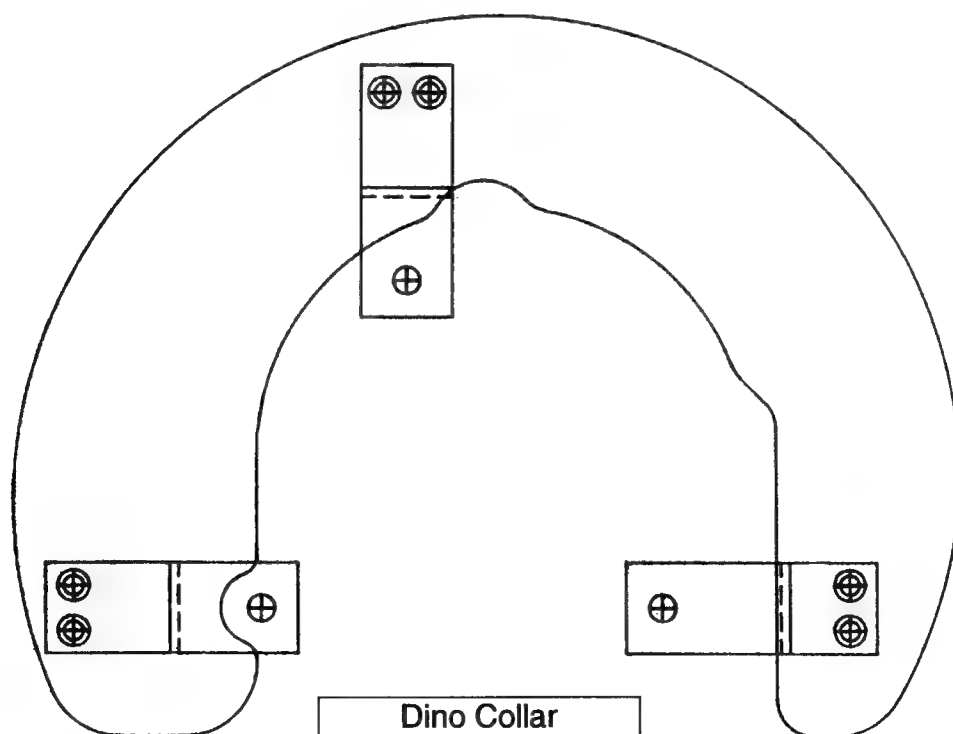


Dino Collar  
515-5804-00


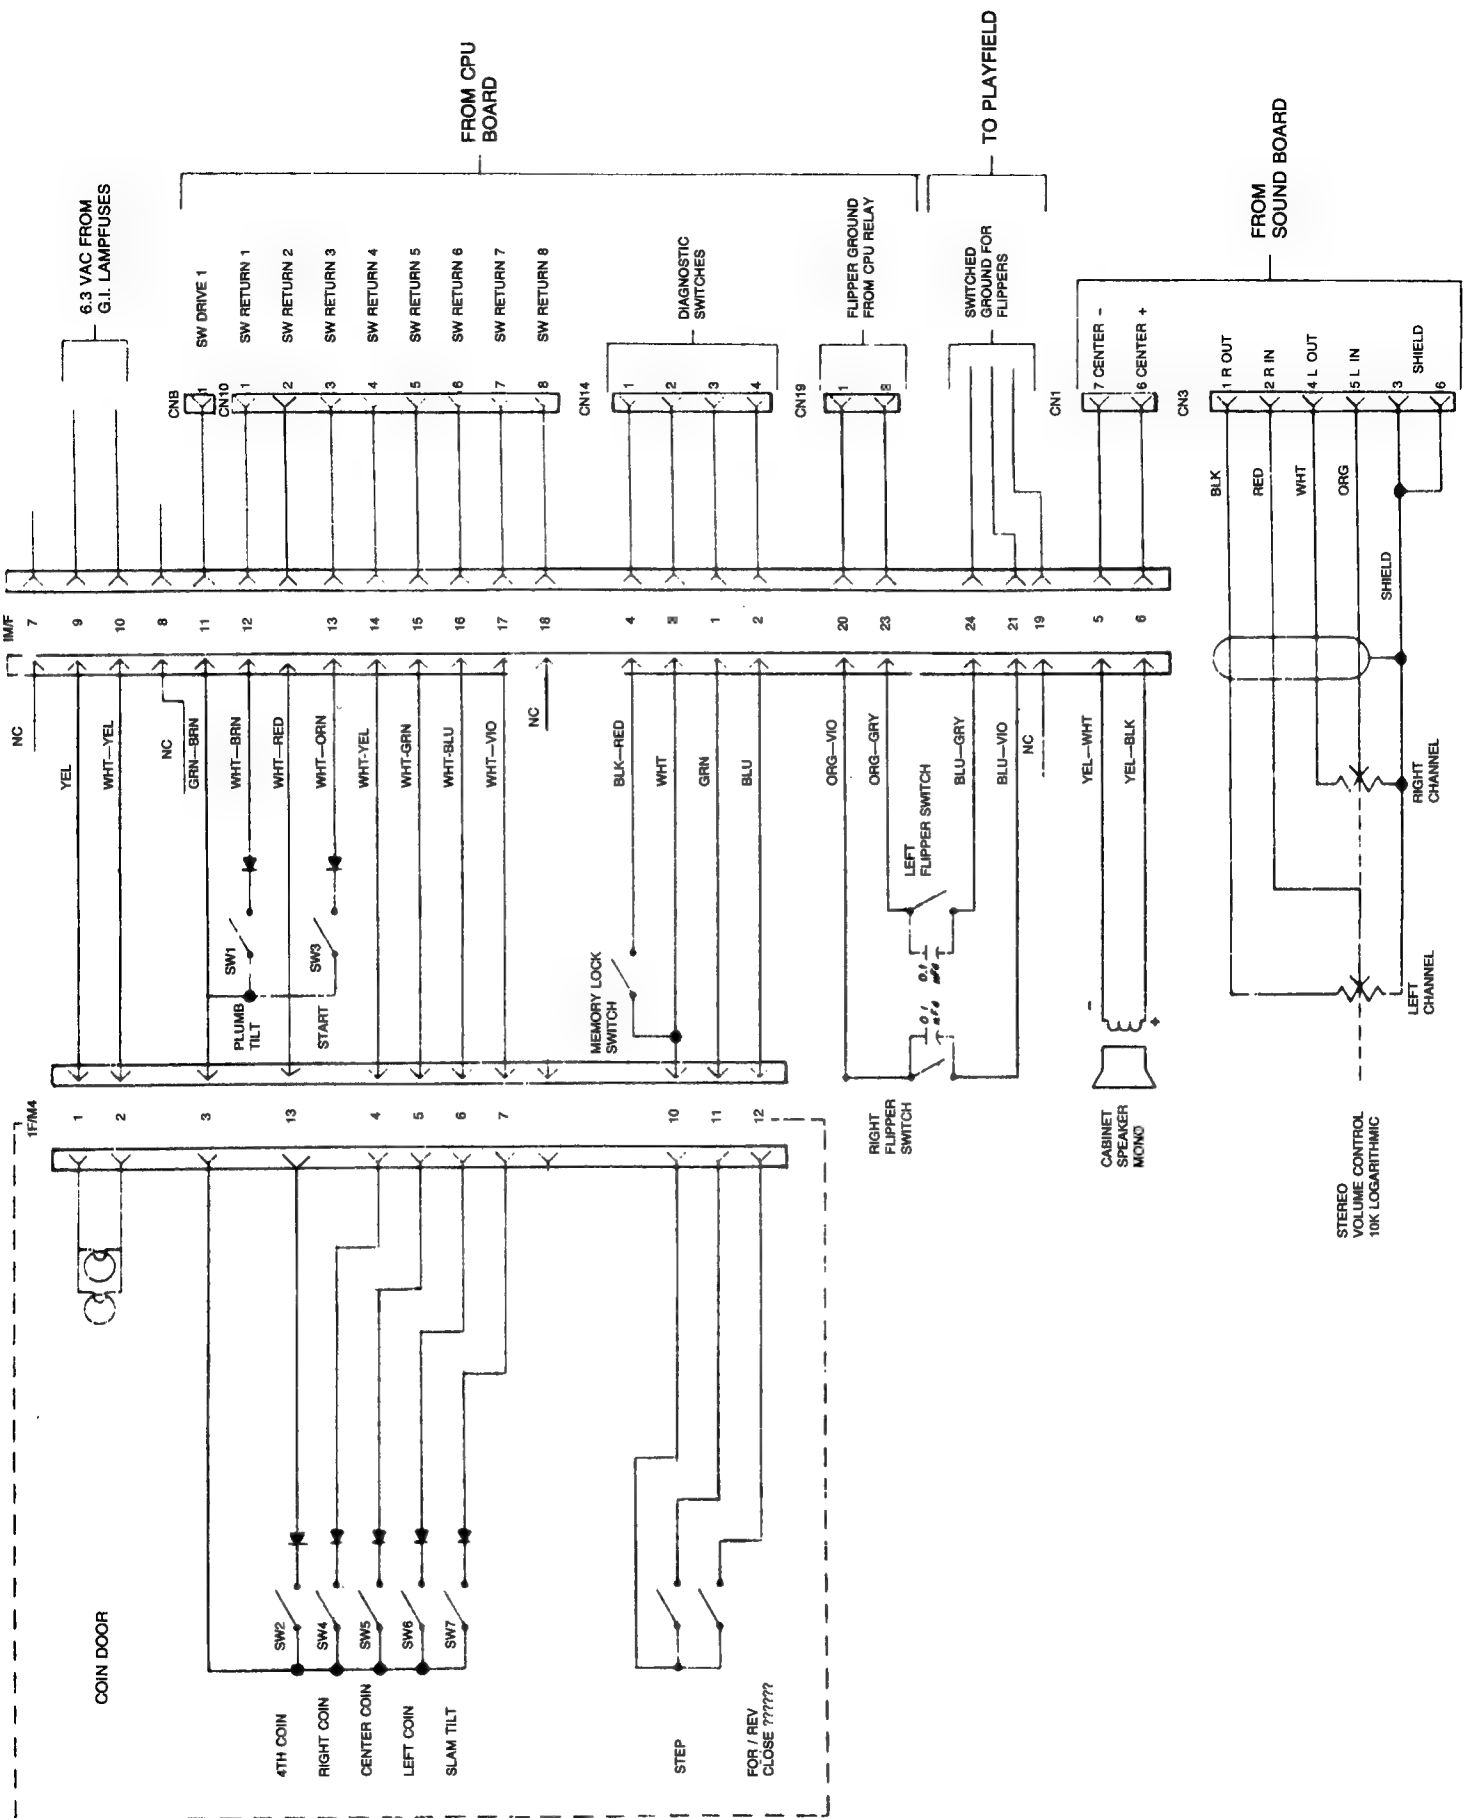


44 Cabinet Wiring Diagram

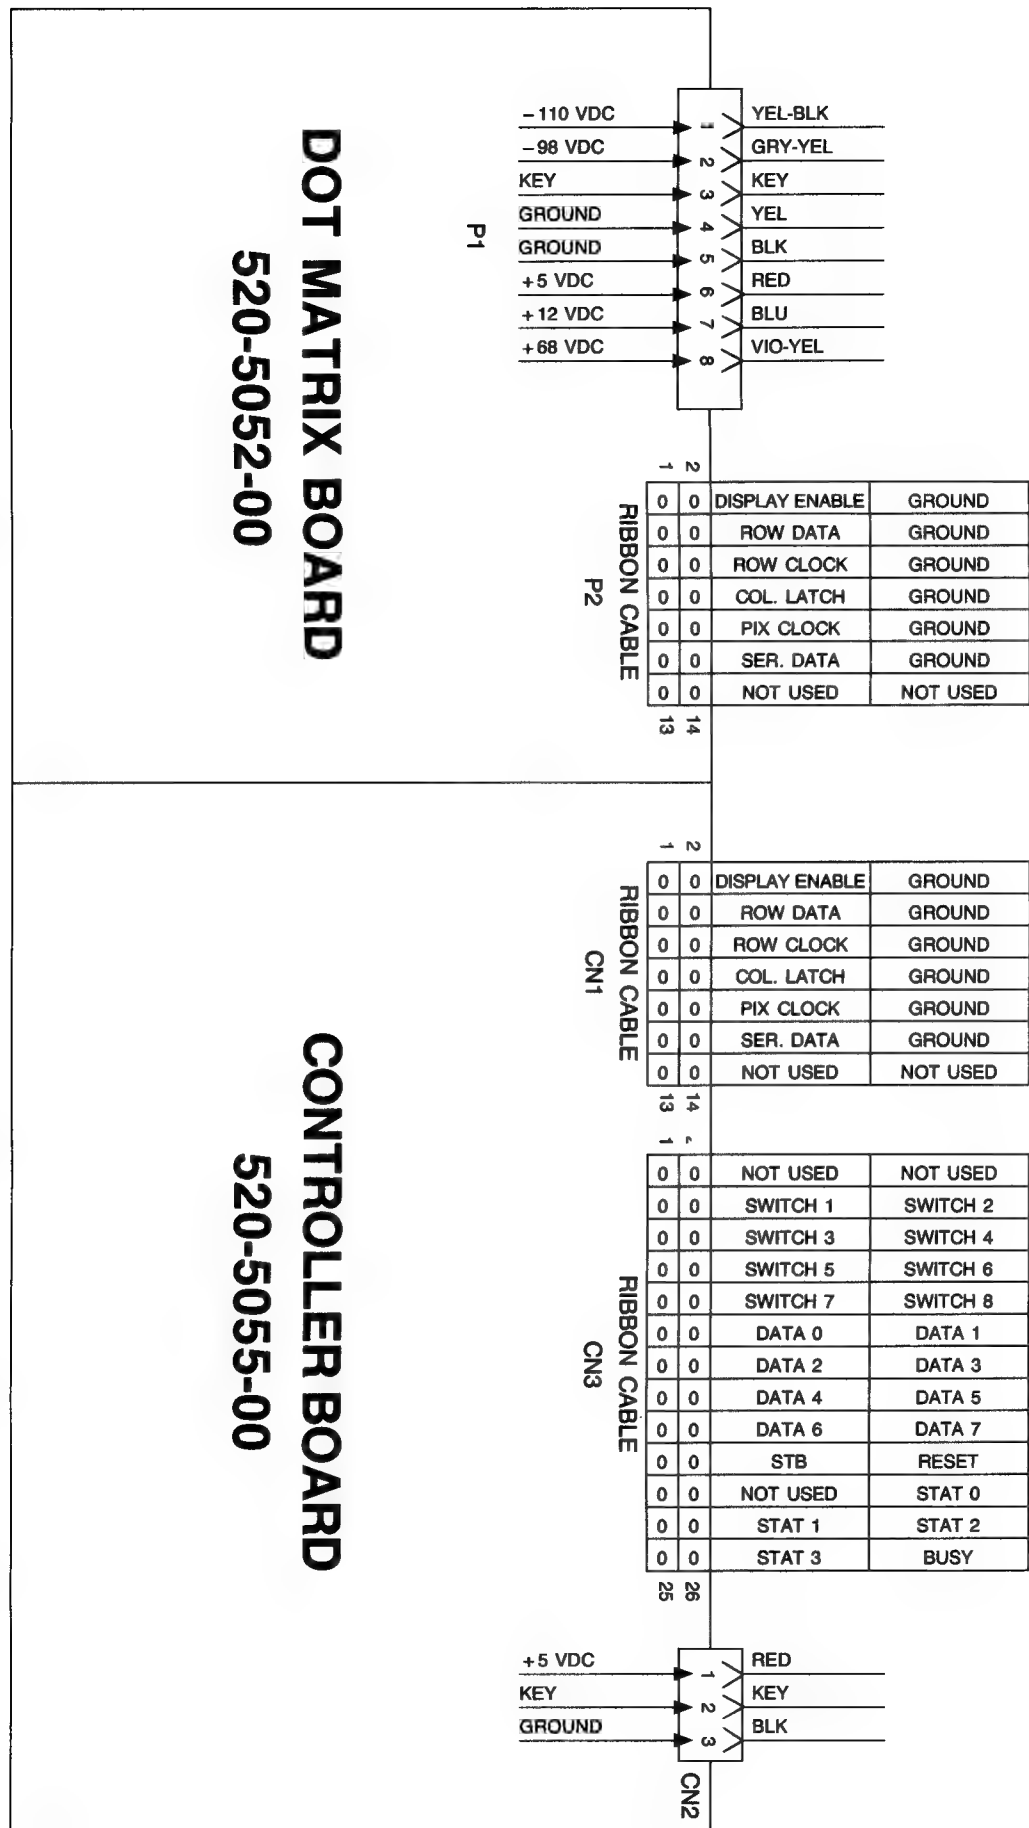




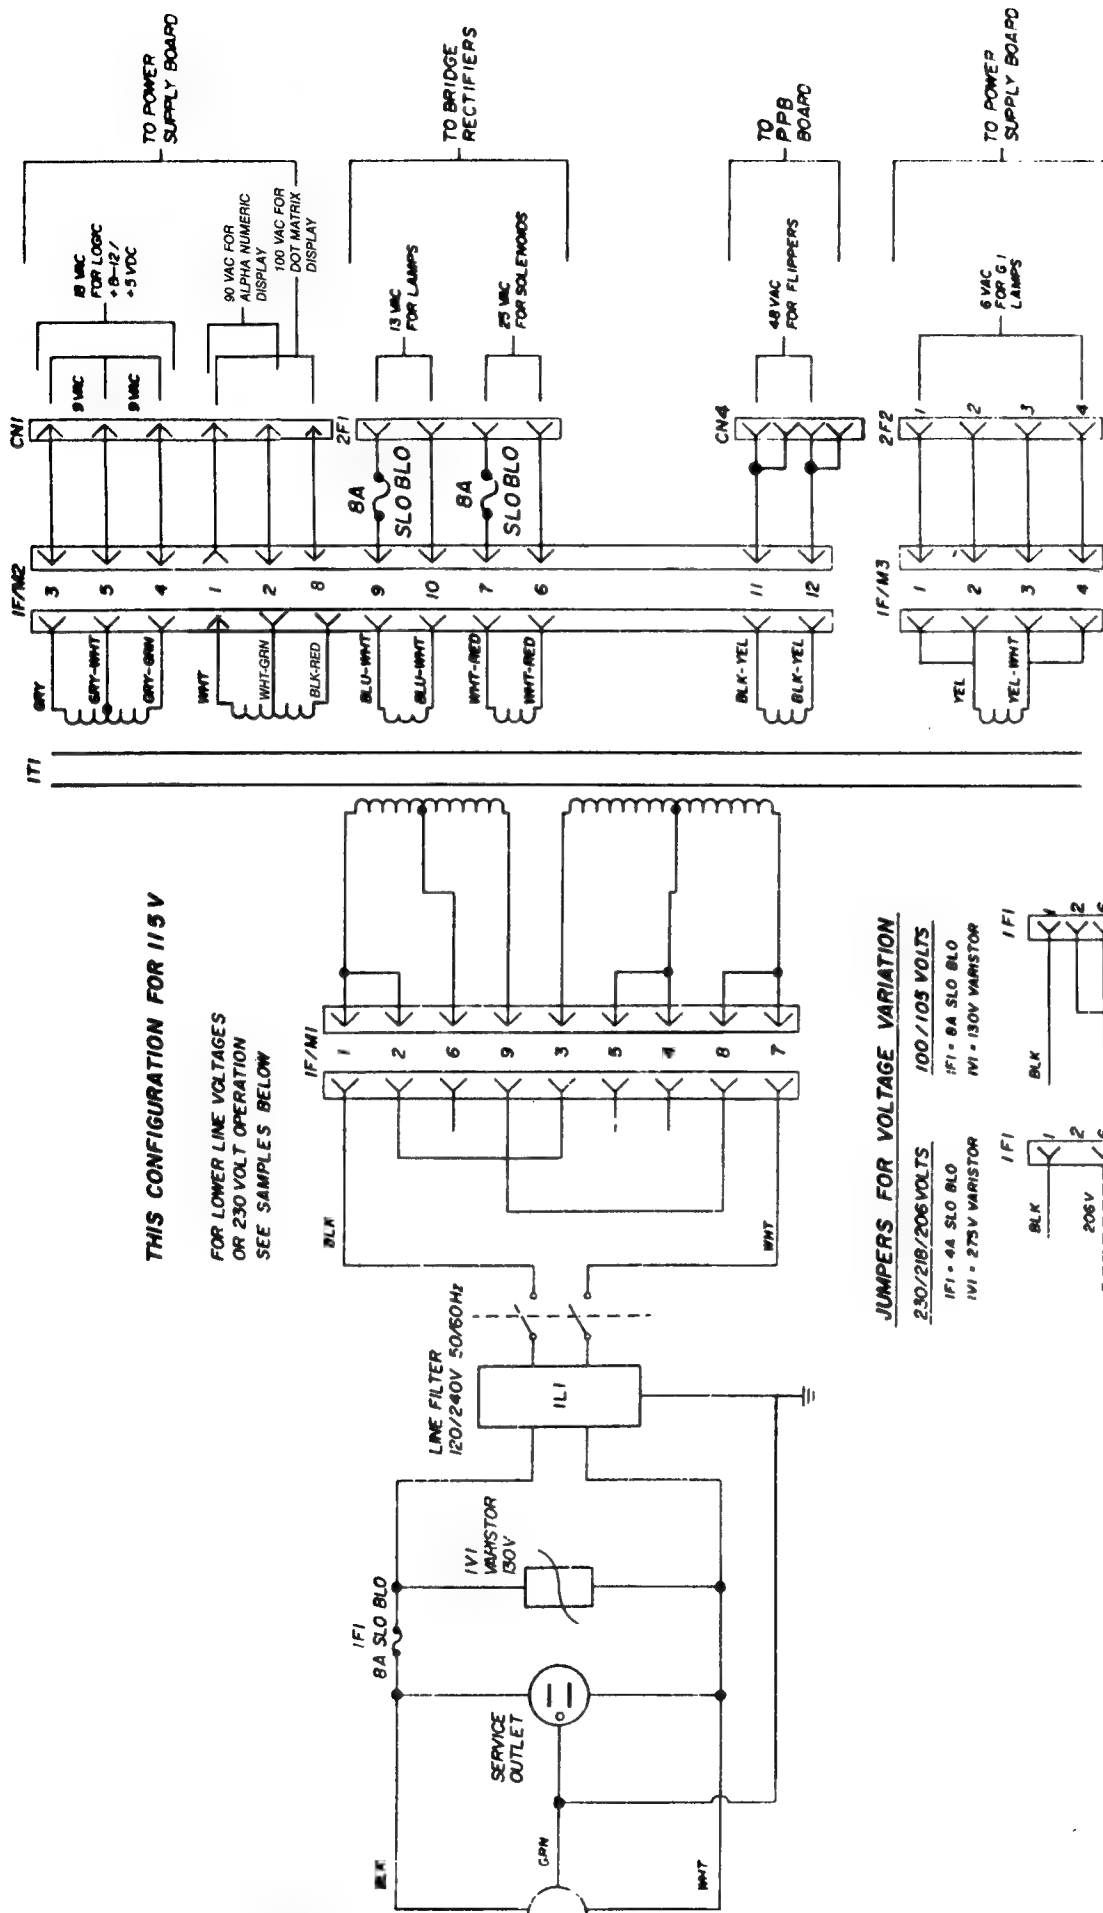


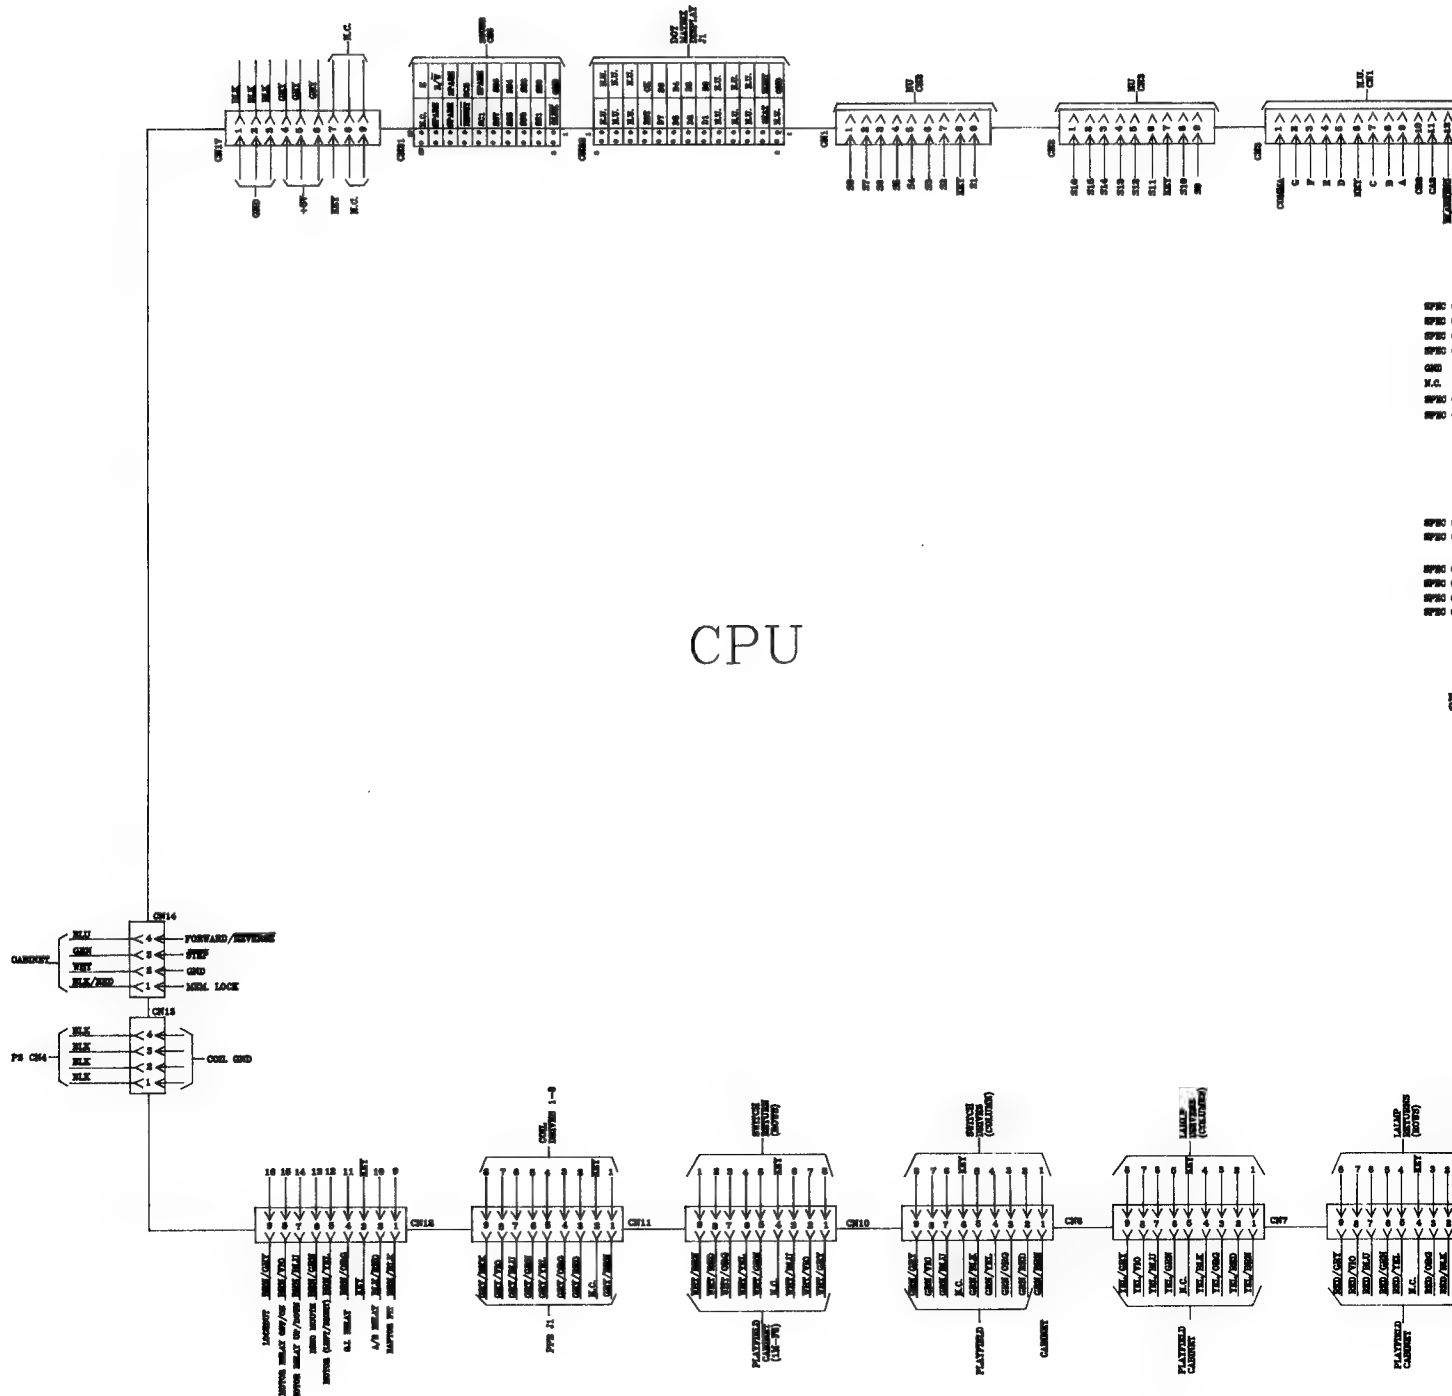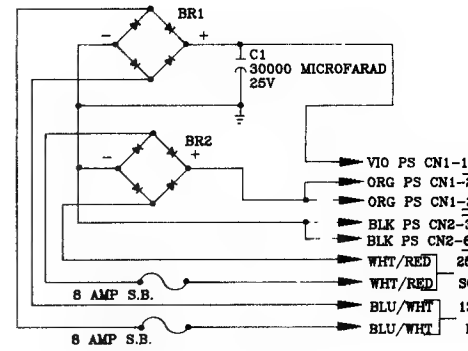






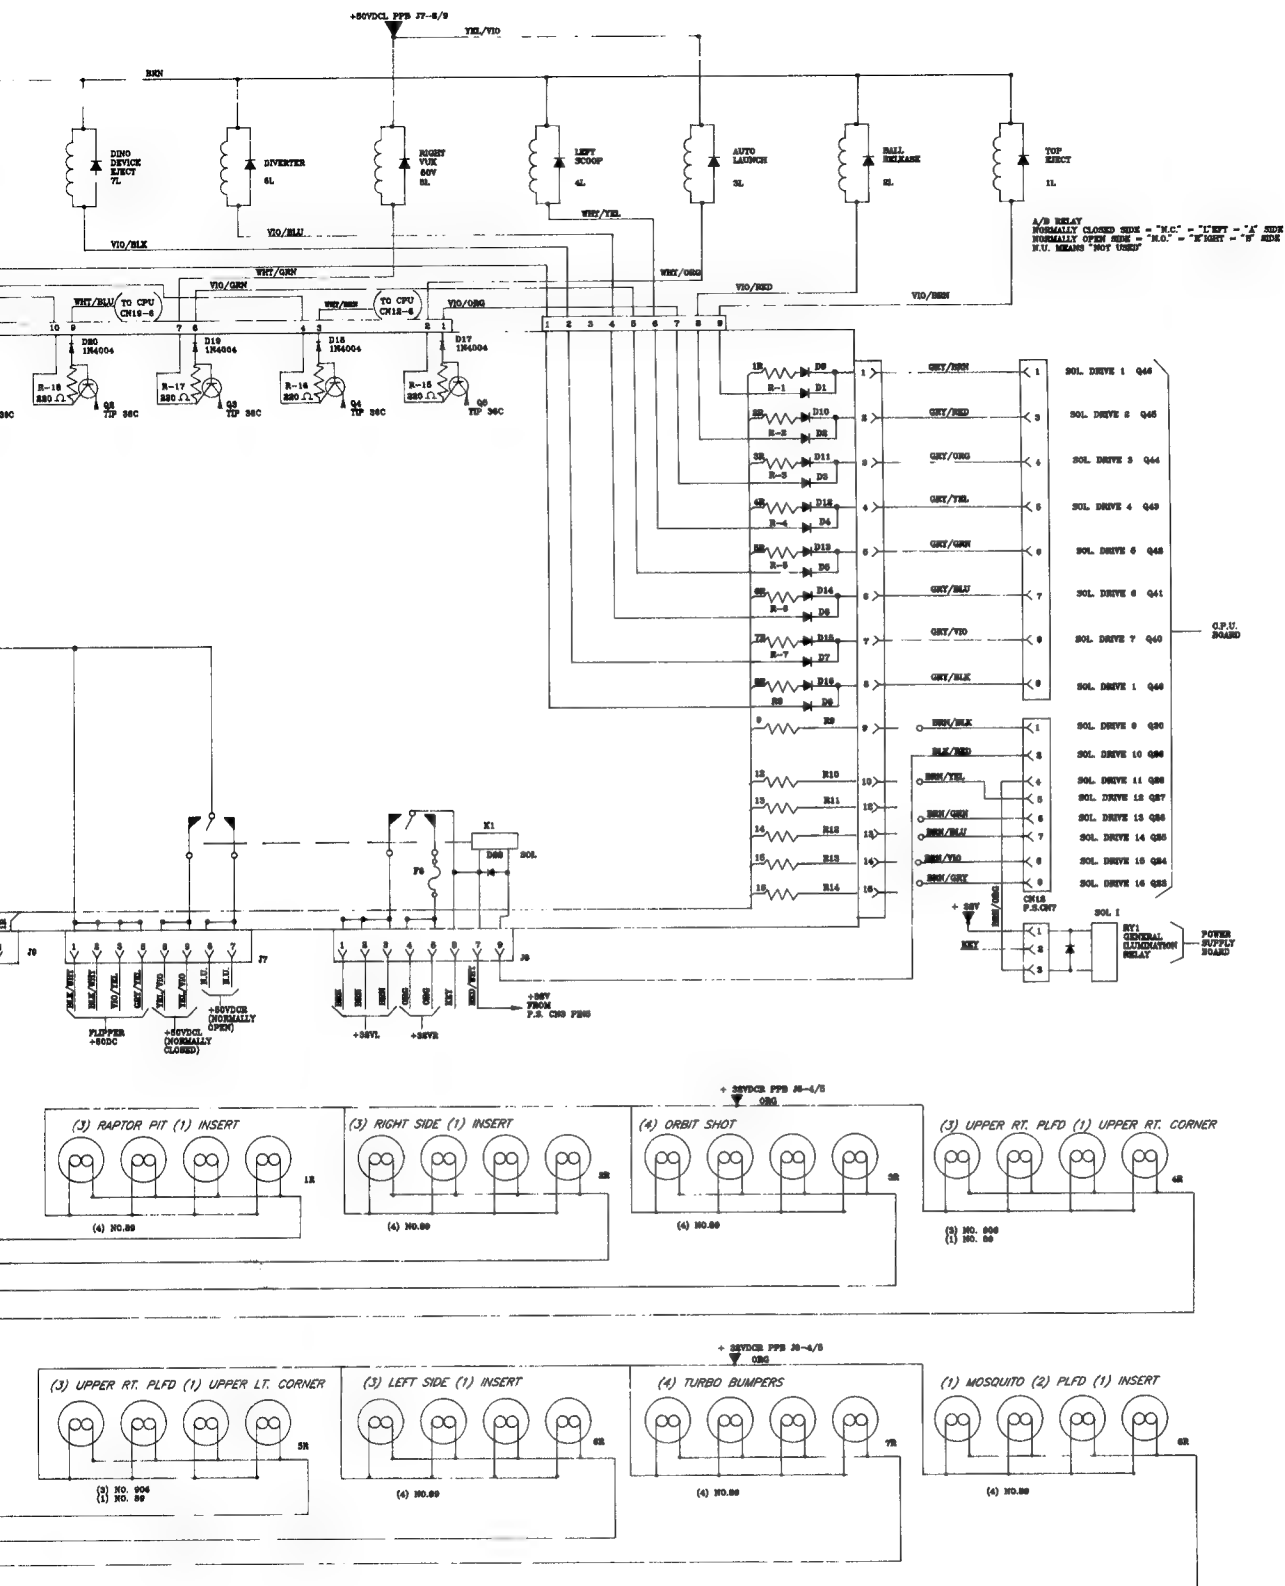

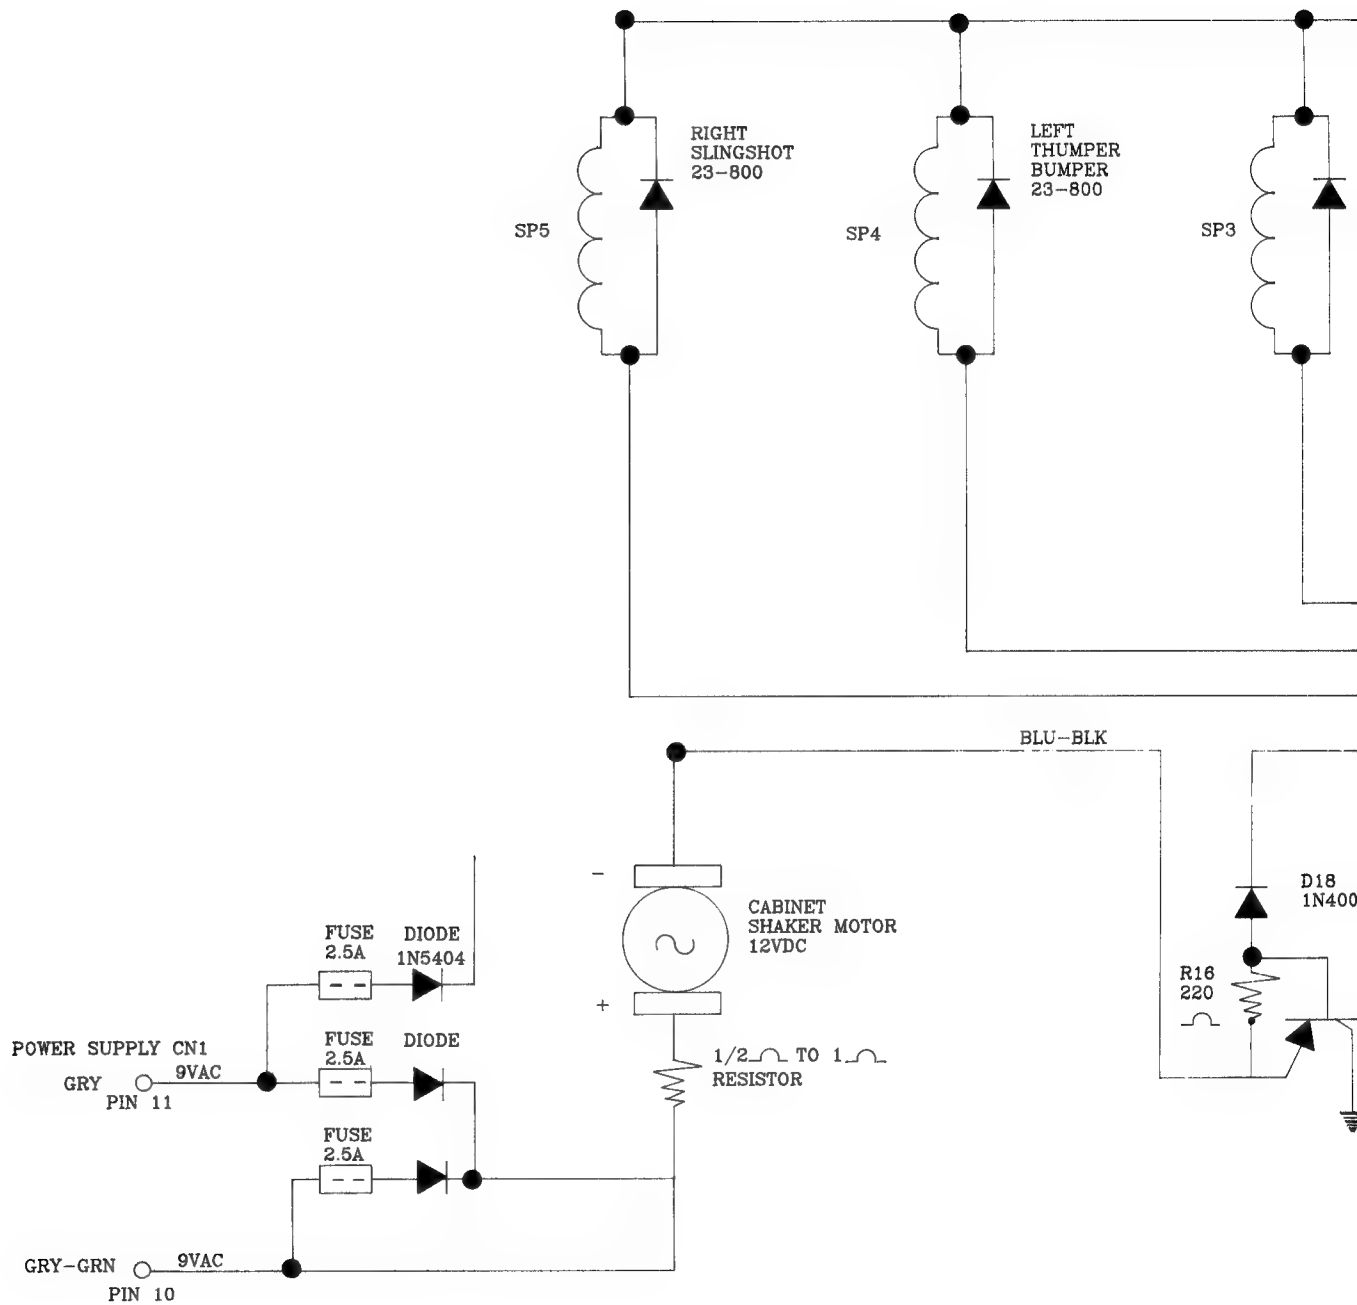

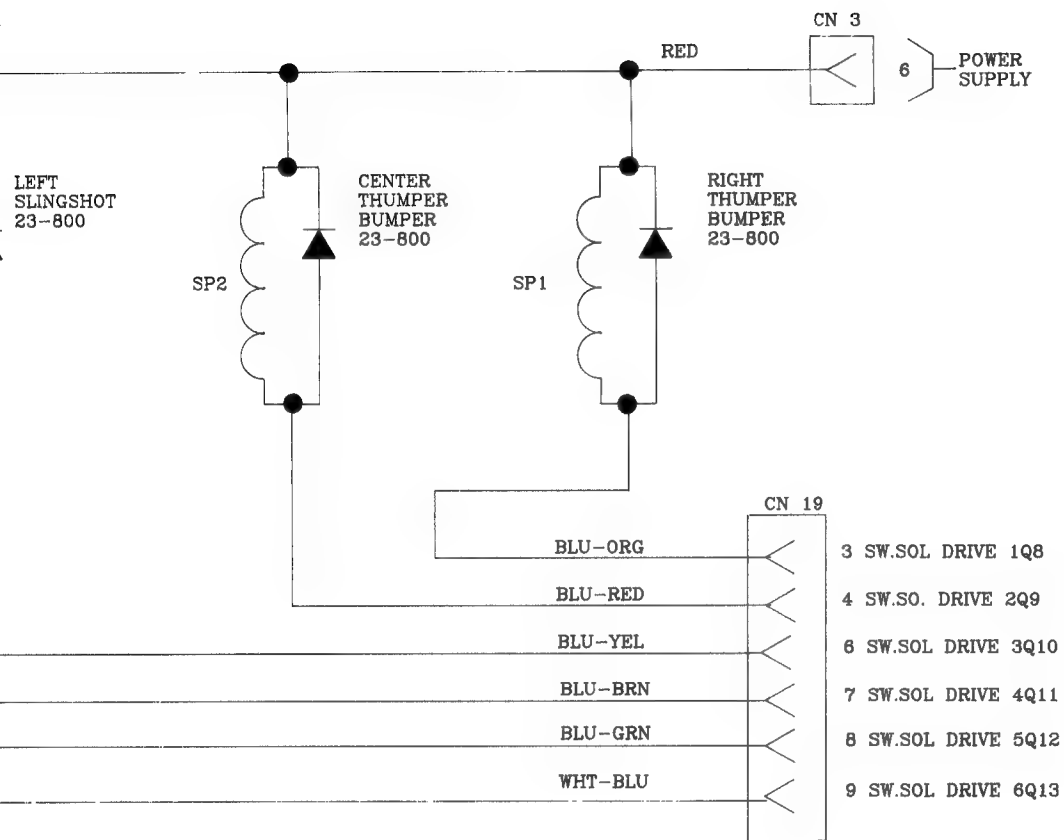

004






**Switch  
Number Description**

**Part No.**


01*	Plumb Tilt	See Cabinet
02*	4th Coin	-
03*	Credit Button	500-5097-02
04*	Right Coin	180-5024-00
05*	Center Coin	180-5024-00
06*	Left Coin	180-5024-00
07*	Slam Tilt	180-5022-00
08	Not Used	-
09	Trough #1 Left	180-5119-00
10	Trough #2	180-5119-00
11	Trough #3	180-5119-00
12	Trough #4	180-5119-00
13	Trough #5	180-5119-00
14	Trough #6	180-5119-00
15	Trough #7 Right	180-5119-00
16	Shooter Lane	180-5100-01

17	Outer Loop Low	500-5142-00
18	Outer Loop Top	500-5142-00
19	Inner Loop Low	500-5142-00
20	Inner Loop Top	500-5142-00
21	Right Outlane	500-5142-00
22	Right Return	500-5142-00
23	Left Return	515-5138-00
24	Left Outlane	515-5138-00
25	Spitter Target #1 Bottom	180-5114-02
26	Spitter Target #2 Middle	180-5114-02
27	Spitter Target #3 Top	180-5114-02
28	Not Used	-
29	Raptor Pit	180-5100-01
30	Not Used	-
31	T.Rex Right	180-5040-00
32	T.Rex Left	180-5040-00

33	Right
34	Right
35	Left S
36	T.Rex
37	Center
38	Herre
39	Herre
40	Brach
41	Launc
42	Smart
43	Left S
44	Right
45	Top T
46	Left T
47	Right
48	Mosco

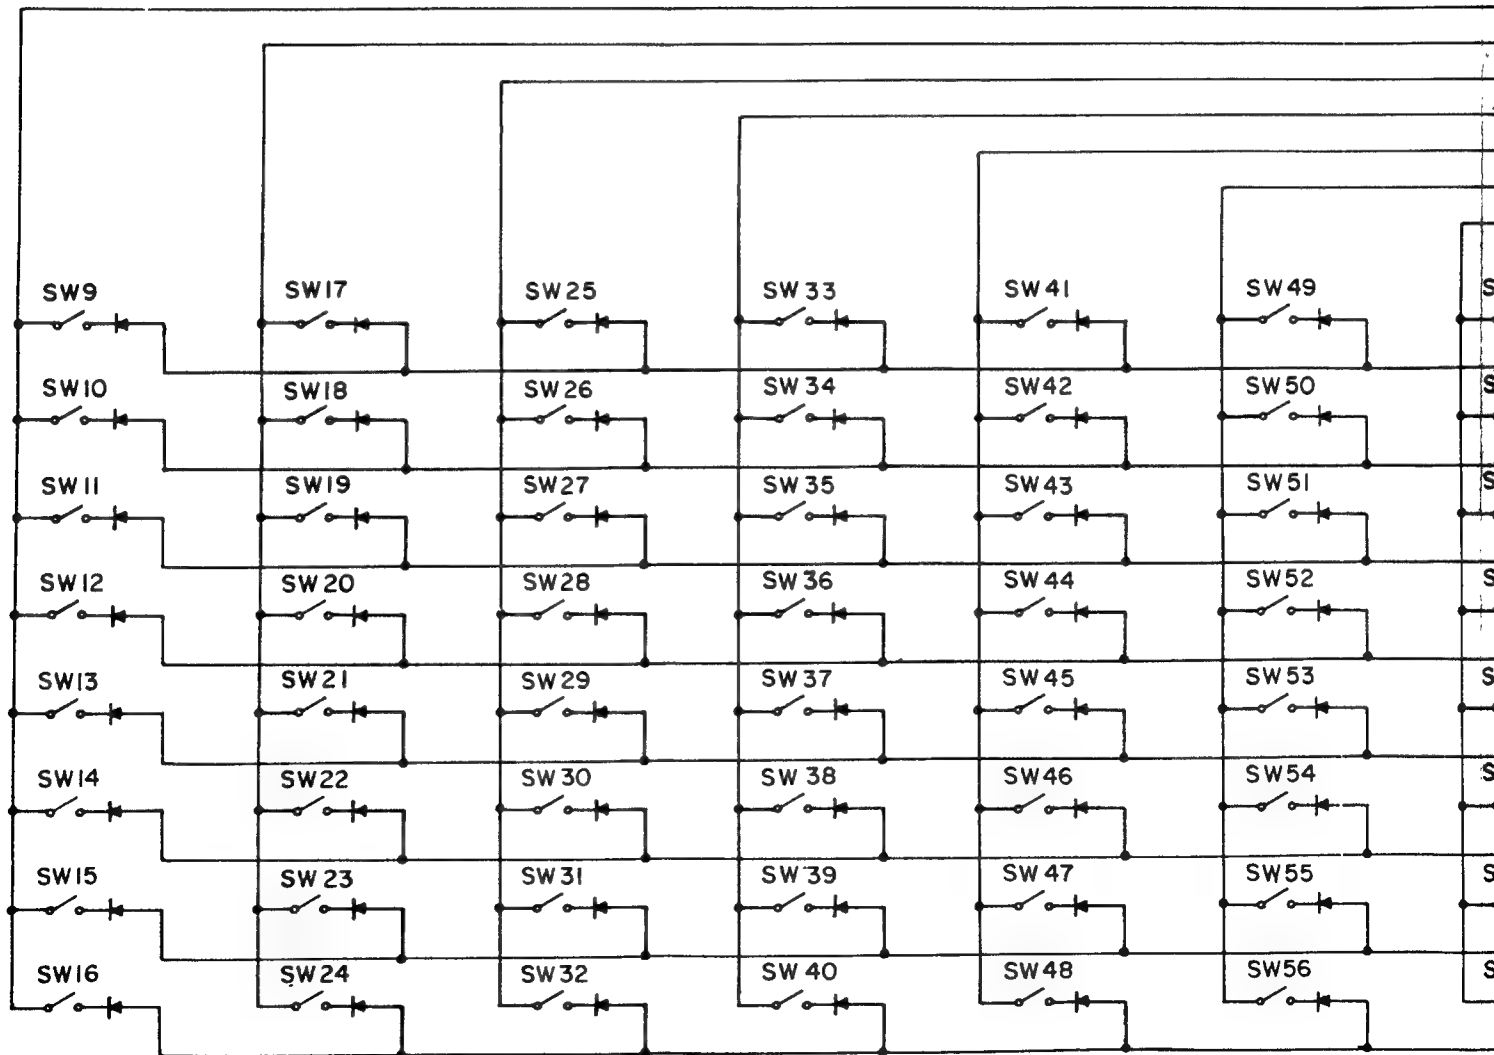

Right Ramp Enter	180-5087-00	49	Baryonyx Target	180-5120-02
Right Ramp Exit	180-5117-00	50	Gallimimus Target	180-5120-04
Left Scoop	180-5116-00	51	Not Used	-
Triceratops Center	180-5123-00	52	Triceratops Target	180-5120-04
Right Scoop	500-5442-01	53	Brachiosaurus Top	180-5120-04
Brachiosaurus Low	180-5120-02	54	Not Used	-
Brachiosaurus Top	180-5120-02	55	T.Rex Saucer Eject	180-5027-00
Brachiosaurus Low	180-5120-04	56	Right Saucer Eject	180-5027-00
Launch Trigger		57	T.Rex Top (Up)	180-5040-00
Start Bomb Button		58	T.Rex Bottom (Down)	180-5040-00
Slingshot	180-5054-00	59	T.Rex Trough	180-5057-00
Right Slingshot	180-5054-00	60	Right Scoop Trough	180-5057-00
Left Turbo Bumper	180-5015-01	61	Right VUK	180-5064-00
Right Turbo Bumper	180-5015-01	62	Not Used	-
Left Turbo Bumper	180-5015-01	63	Left Flip. Cab	180-5048-01
Worm Captive Ball	180-5114-01	64	Right Flip. Cab	180-5048-01

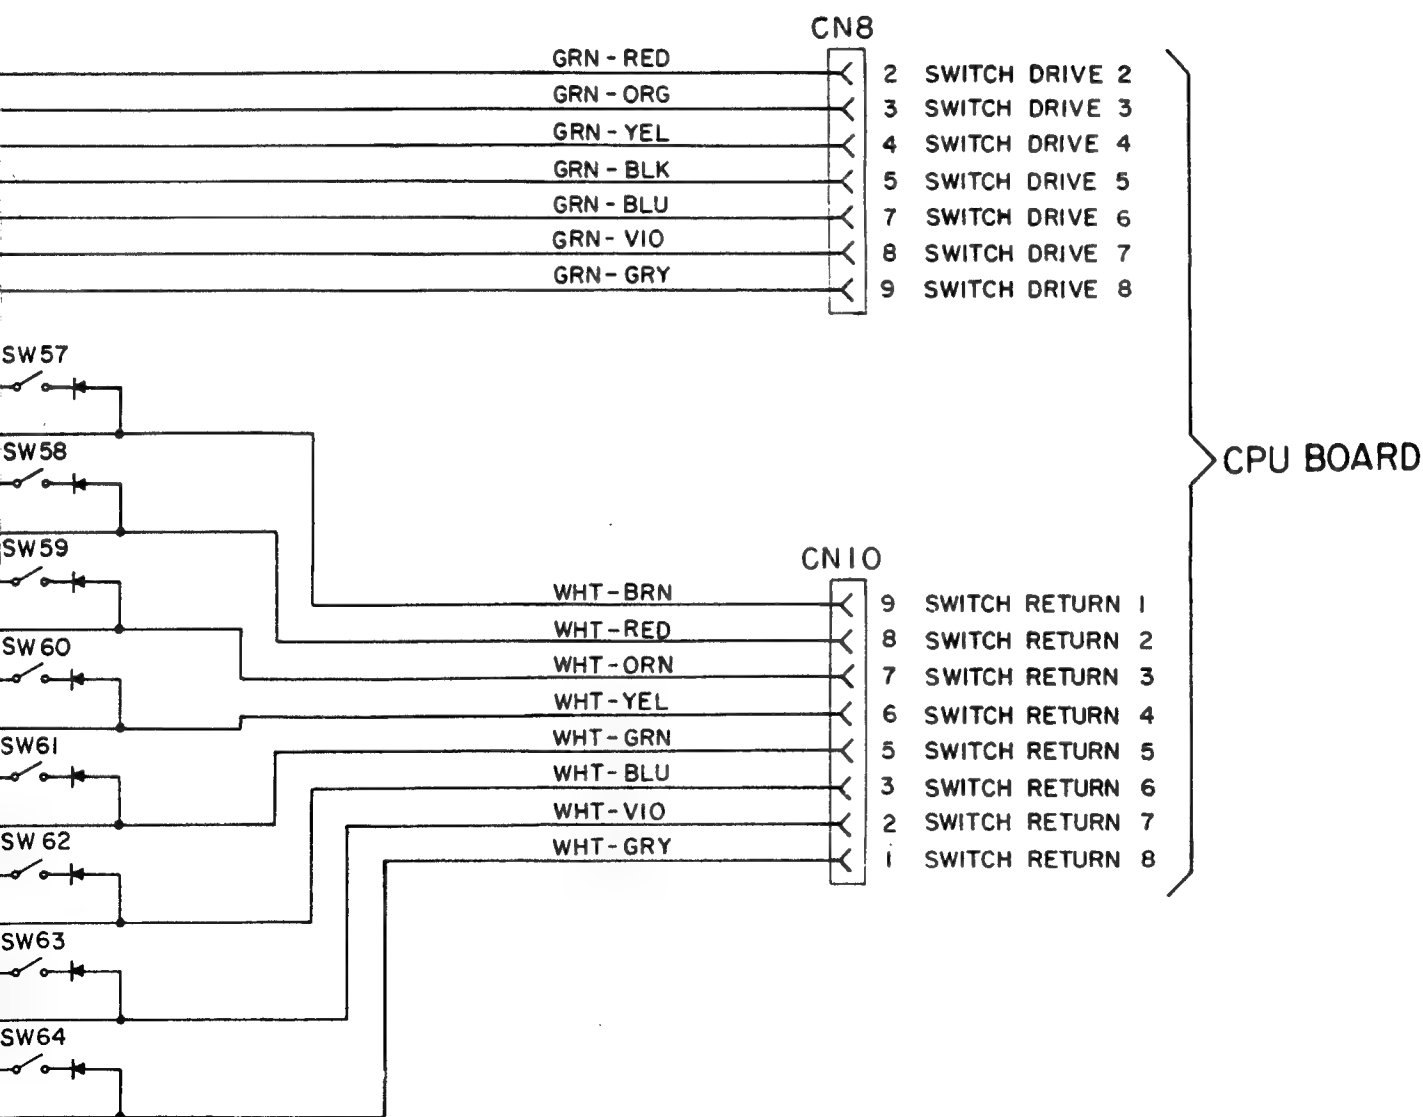


Lamp Number	Description
01	Visitor Center (2 Bulbs)
02	"T" Arch
03	Brachiasaurus Map
04	Spitter Map
05	Herrerasaurus Map
06	Map
07	Triceratops Map
08	Gallimimus
09	Credit Button
10	Mosquito (2 Bulbs)
11	Electric Fence
12	Spitter Attack
13	2 Ball Grid
14	System Boot
15	Raptor Rampage
16	Lite Extra Ball

17	Left Scoop Bottom
18	Left scoop Top
19	Helo (2 Bubs)
20	Raptor Multi-Million
21	Feed T.Rex
22	Bone Buster
23	Escape Isla Nubar
24	Stampede
25	Spitter #1 Bottom
26	Spitter #2
27	Spitter #3
28	Boat Dock (2 Bulbs)
29	Jackpot Loop
30	Jackpot Map
31	Top Turbo Bumper
32	Right Turbo Bumper

33	Center Scoop
34	Center Scoop
35	Advance
36	Triceratops
37	"T" Arch
38	Herrerasaurus
39	Herrerasaurus
40	Brachiasaurus
41	C
42	H
43	A
44	O
45	S
46	Gate (2 Bulbs)
47	"R" Arch
48	"C" Arch


\*Indicates Speaker or Backbox Lamp

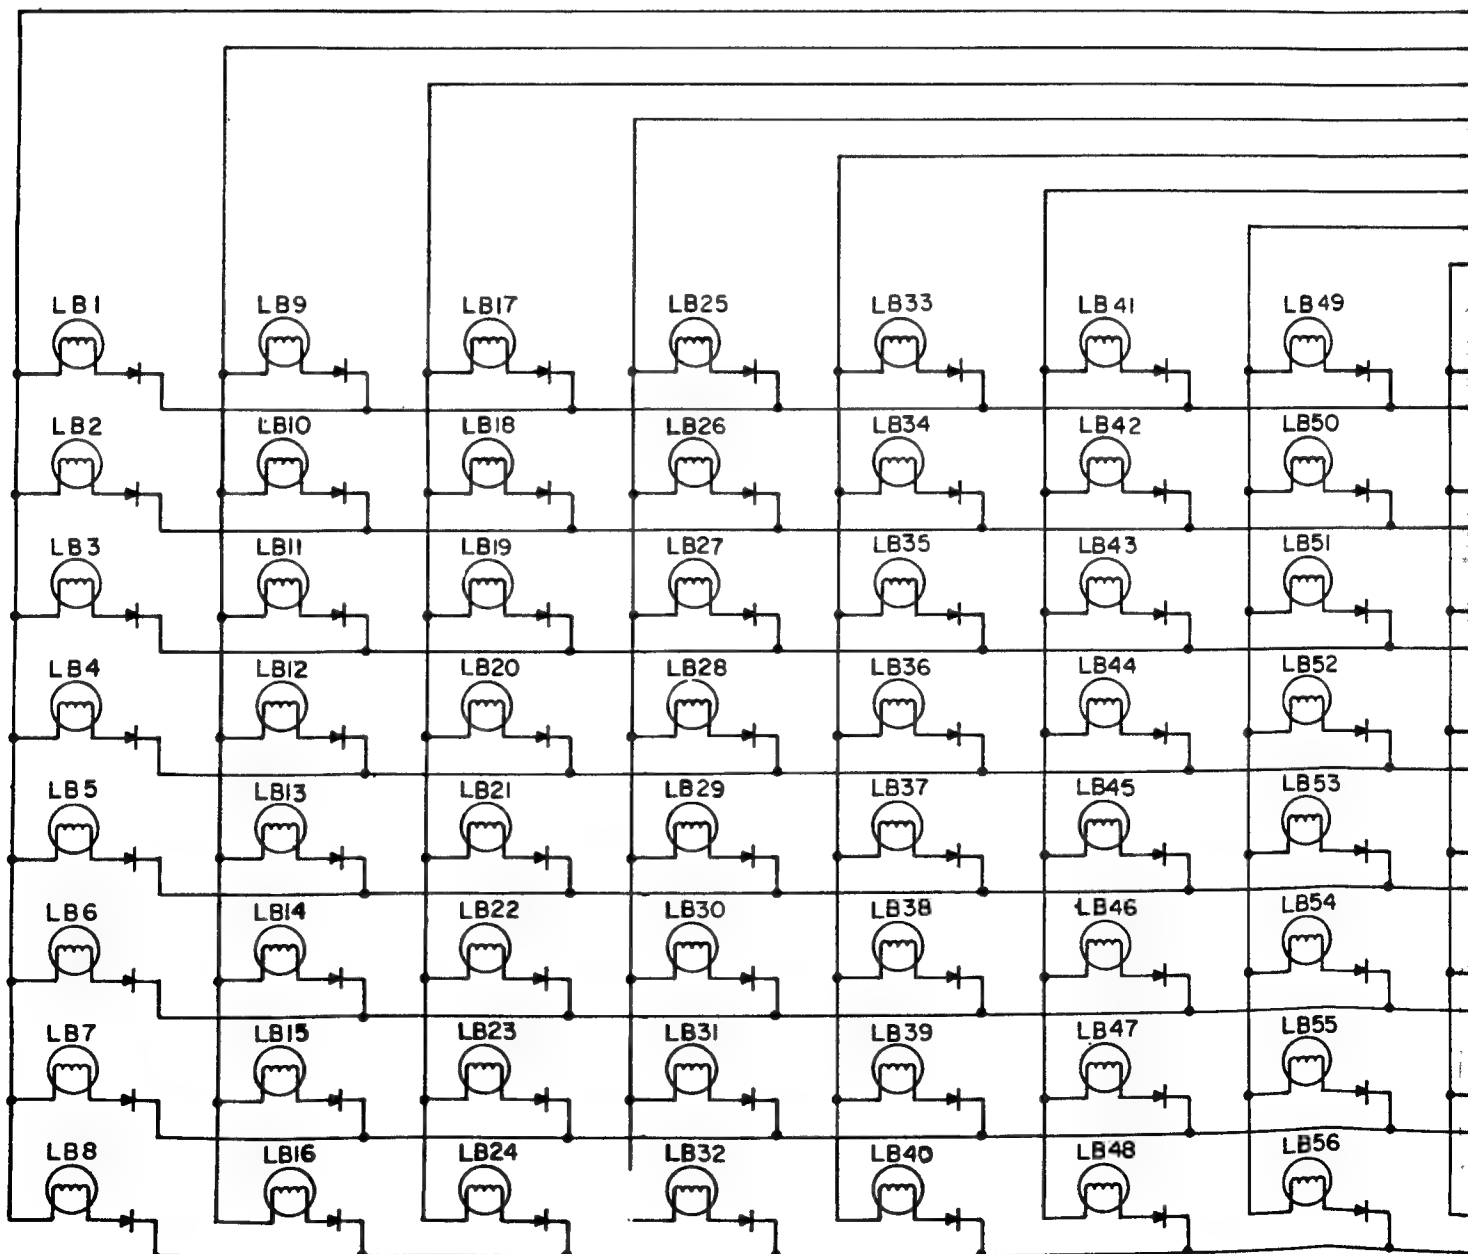


r Scoop Bottom  
 r Scoop Top  
 ace X  
 itops  
 ch  
 asaurus Low  
 asaurus Top  
 asaurus Low


- 49 Baryonyx Target
- 50 #2
- 51 2 Ball Play Arrow
- 52 Raptor Pit 5 Million
- 53 Raptor Pit Jackpot
- 54 Raptor Pit Danger
- 55 Outlanes Special (2 Bulbs)
- 56 Shoot Again
- 57 Right Scoop Bottom
- 58 Right Scoop Top
- 59 Brachiasaurus Top
- 60 "X" Arch
- 61 Egg
- 62 Left Turbo Bumper
- 63 Extra Ball Arrow
- 64 Smart Bomb (2 Bulbs)

2 Bulbs)  
 ch  
 ch

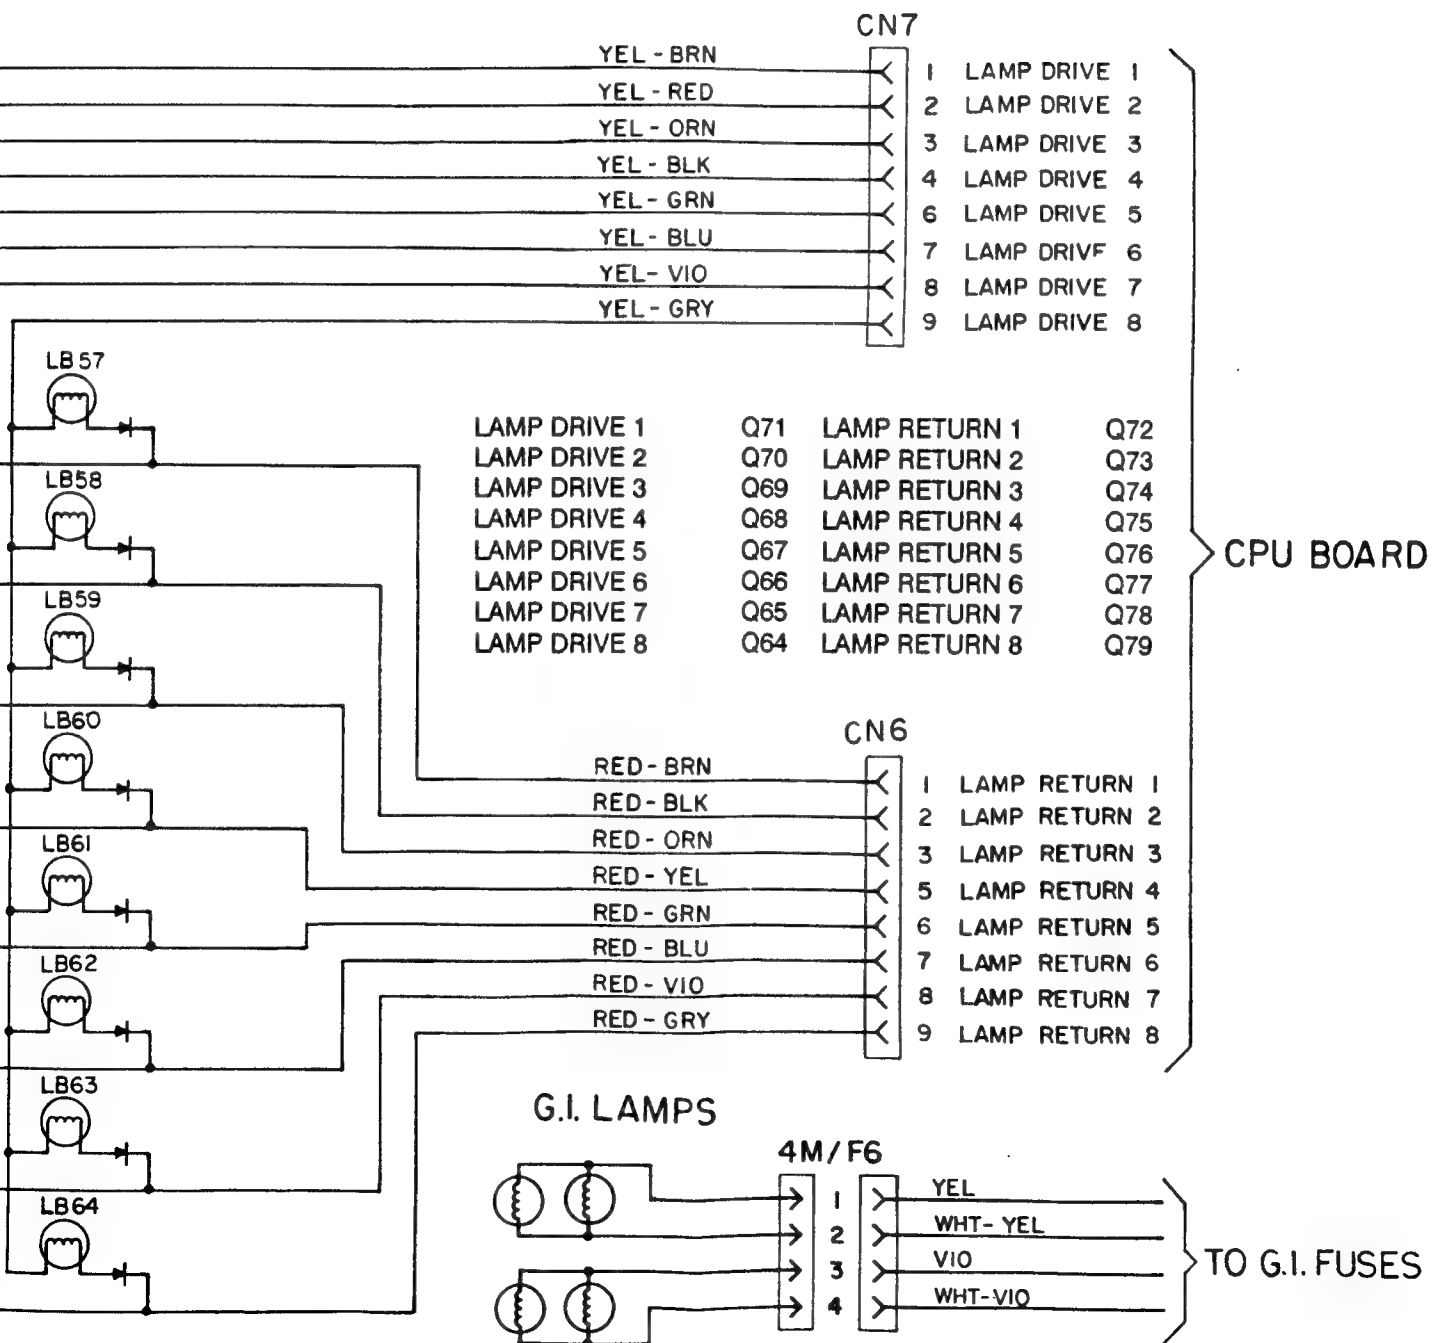



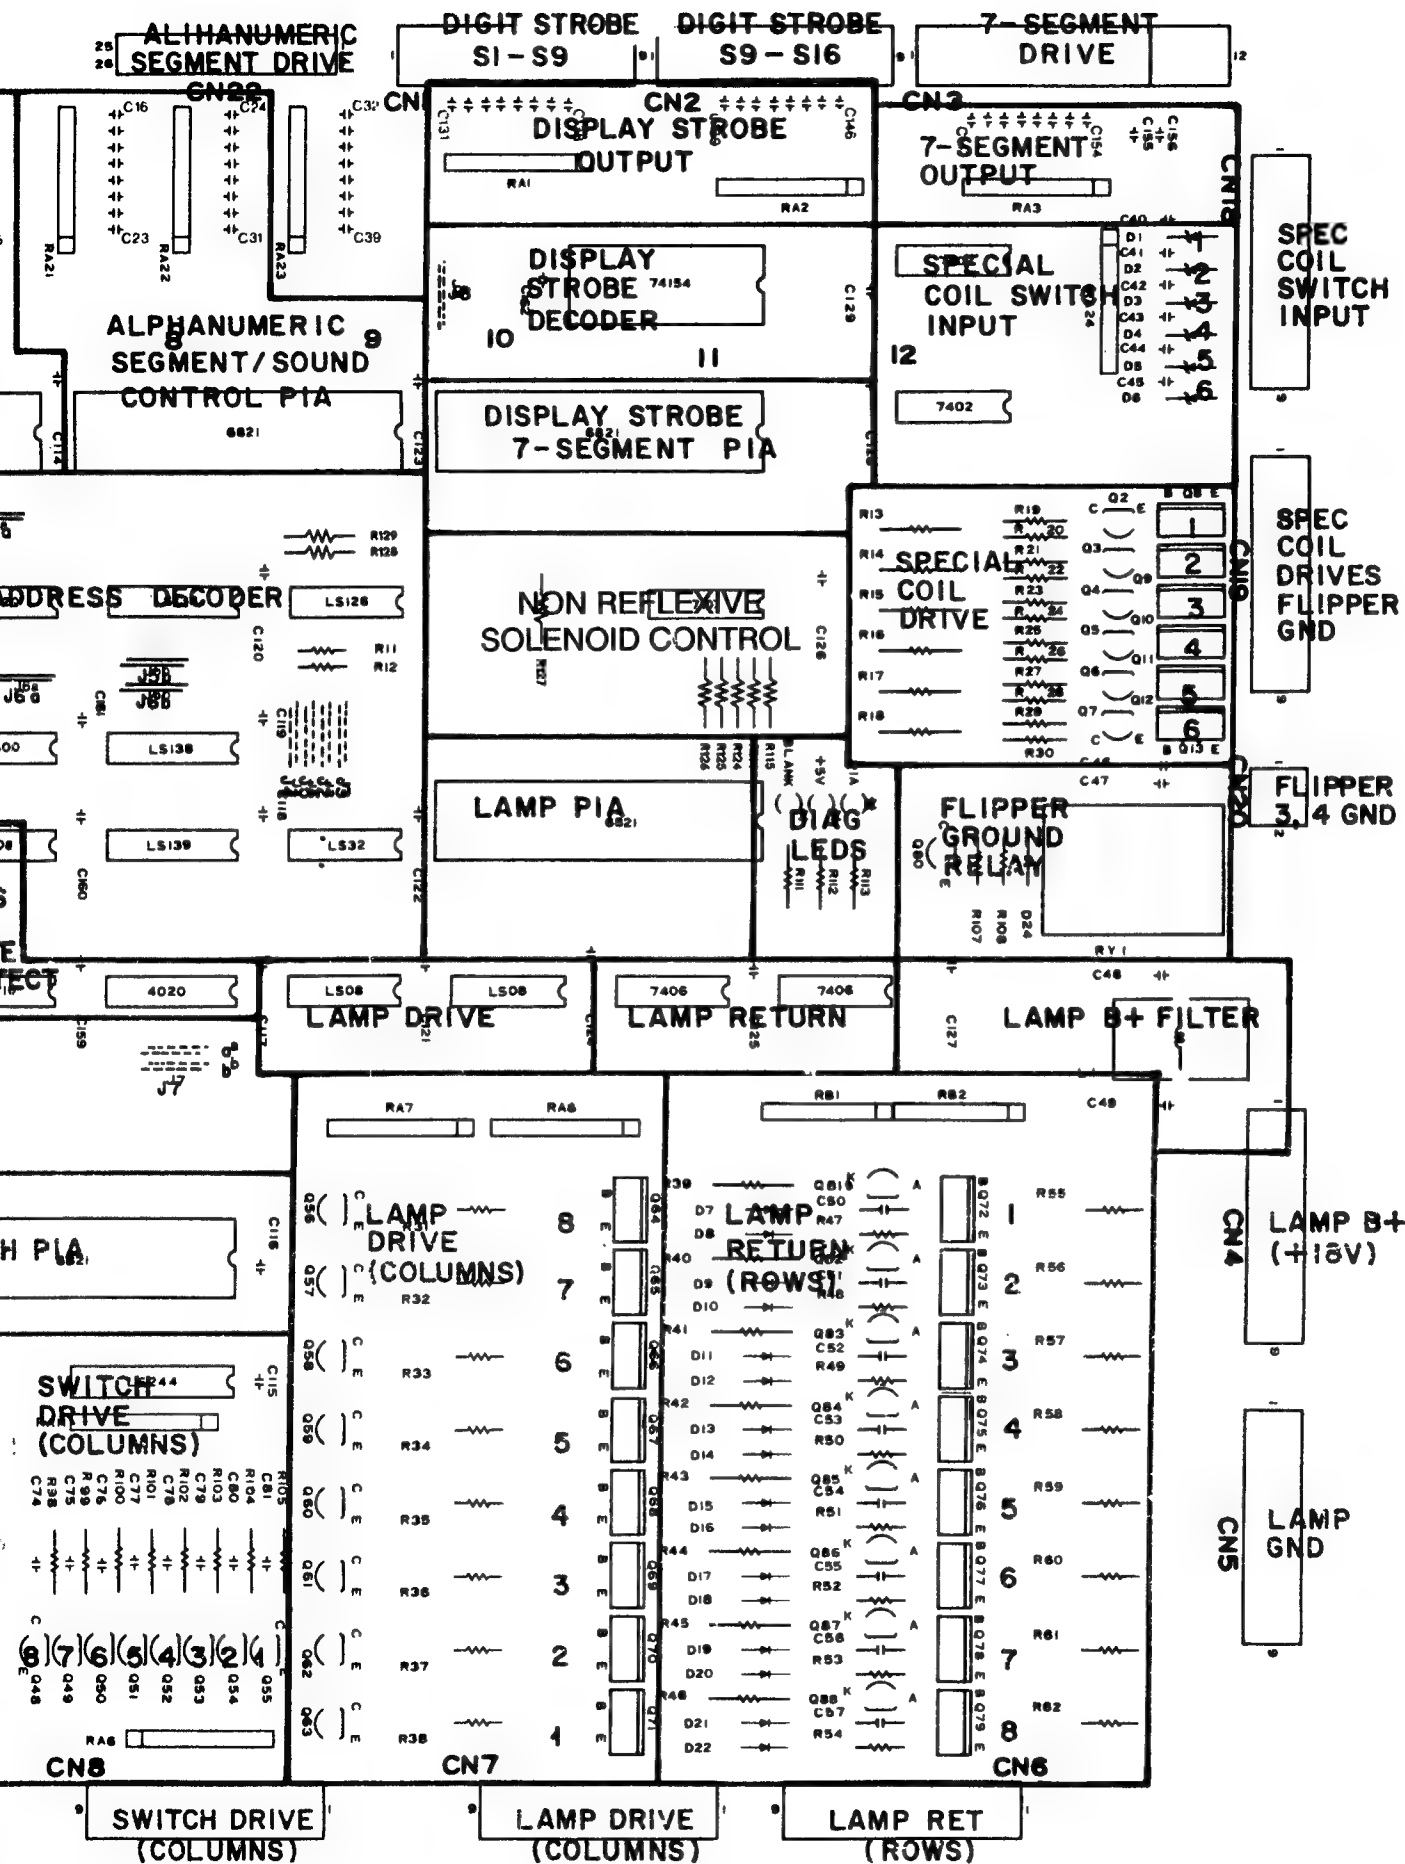


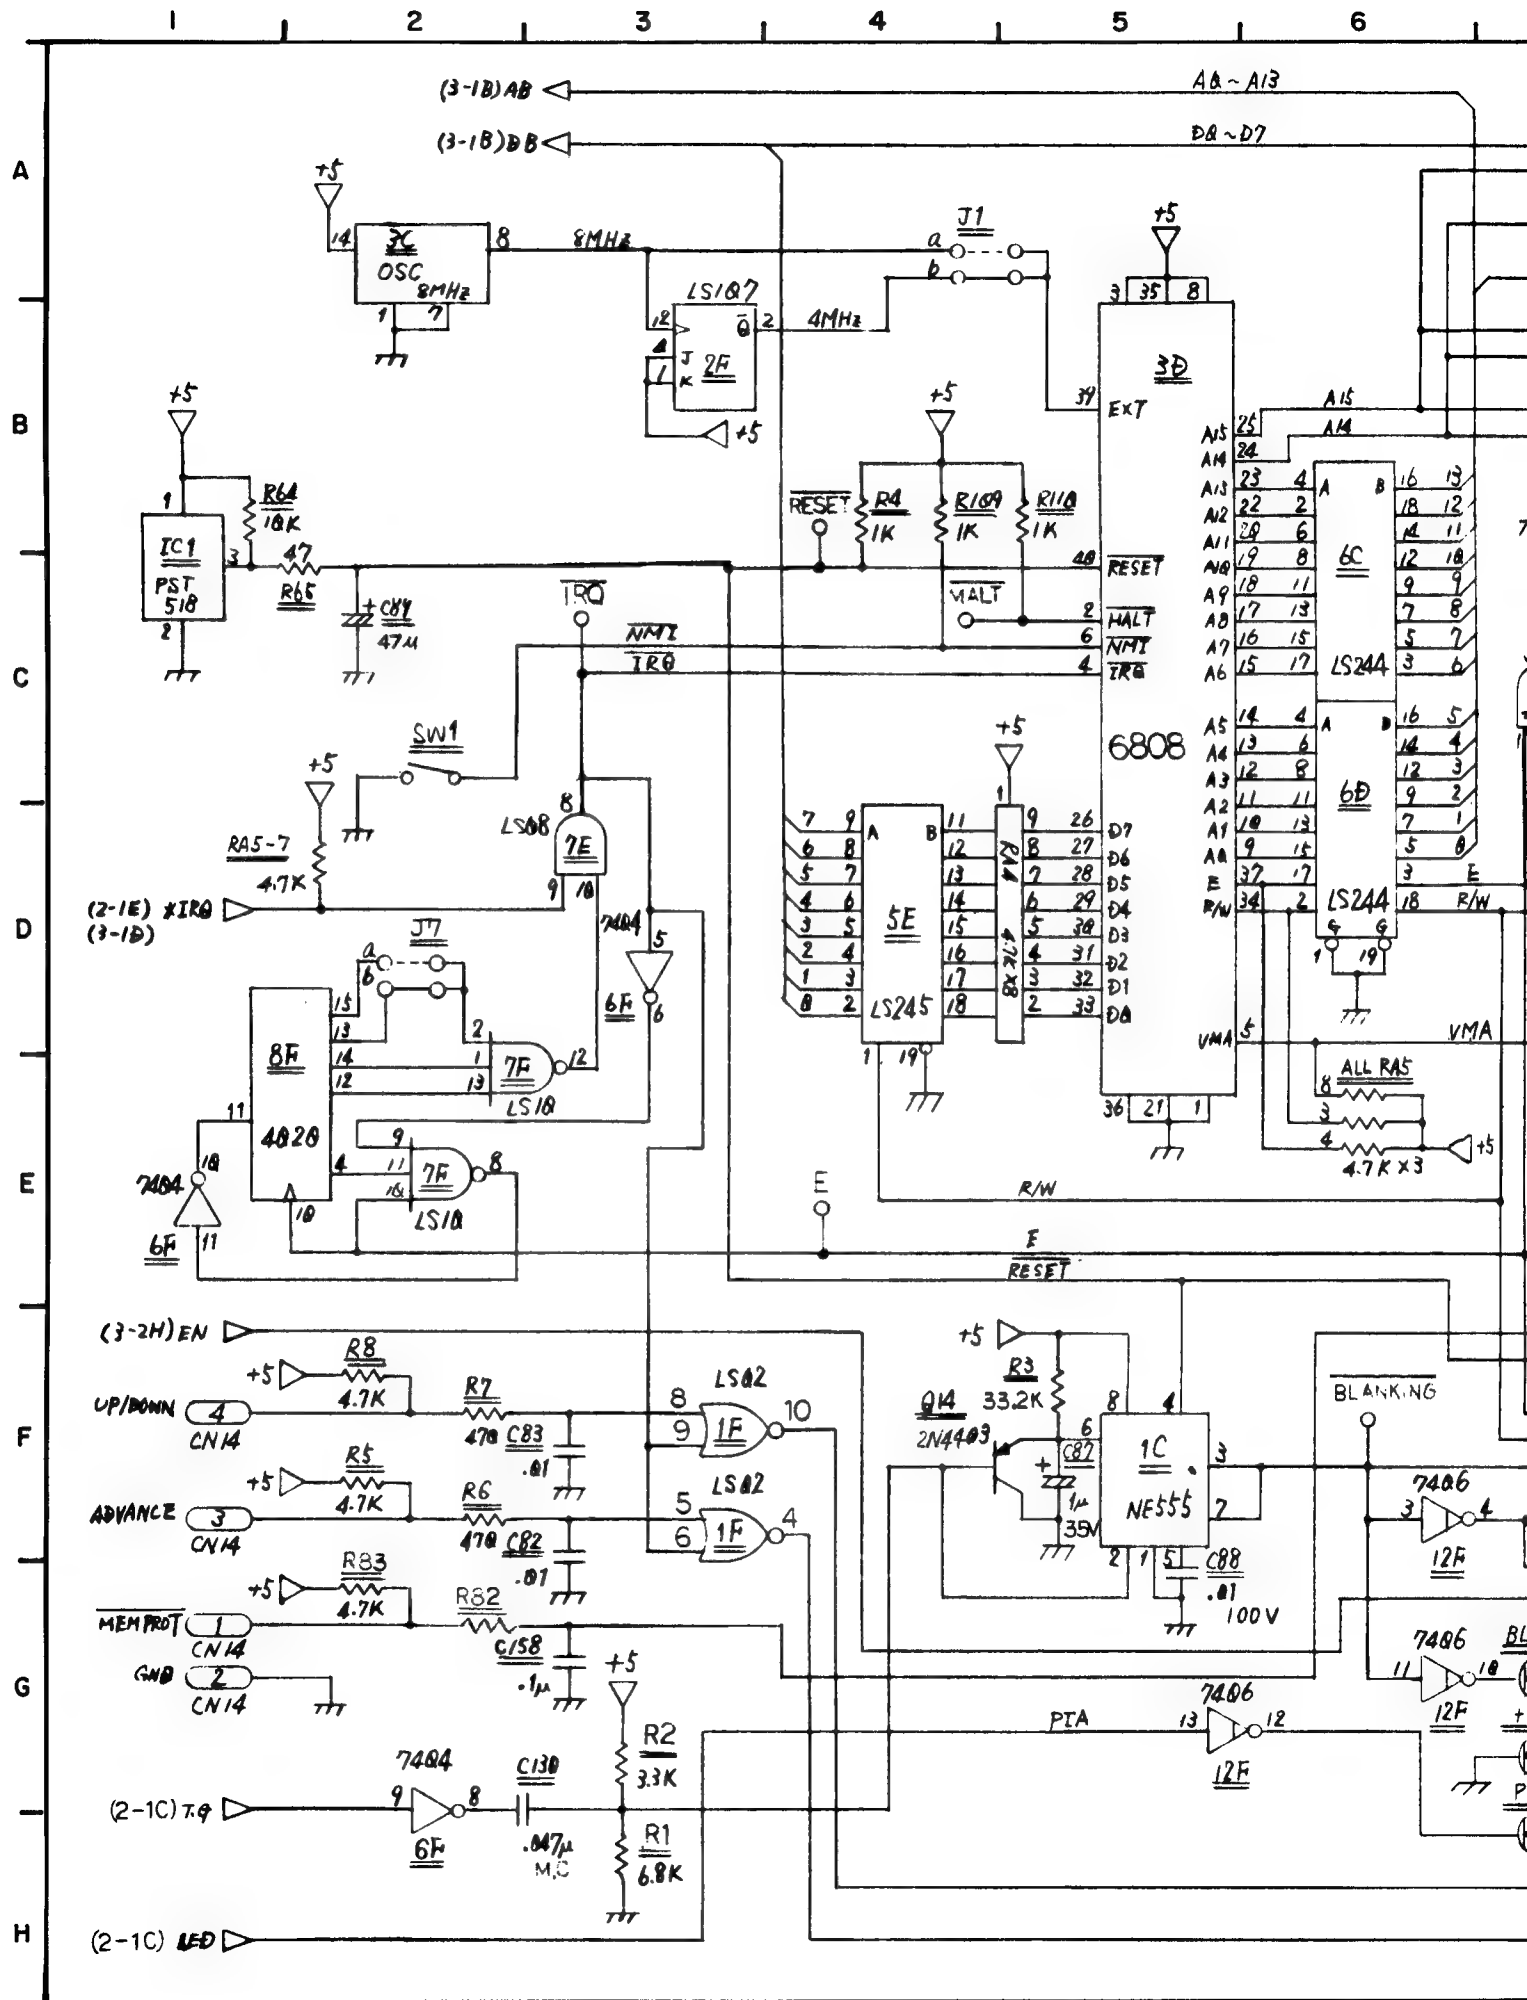


 






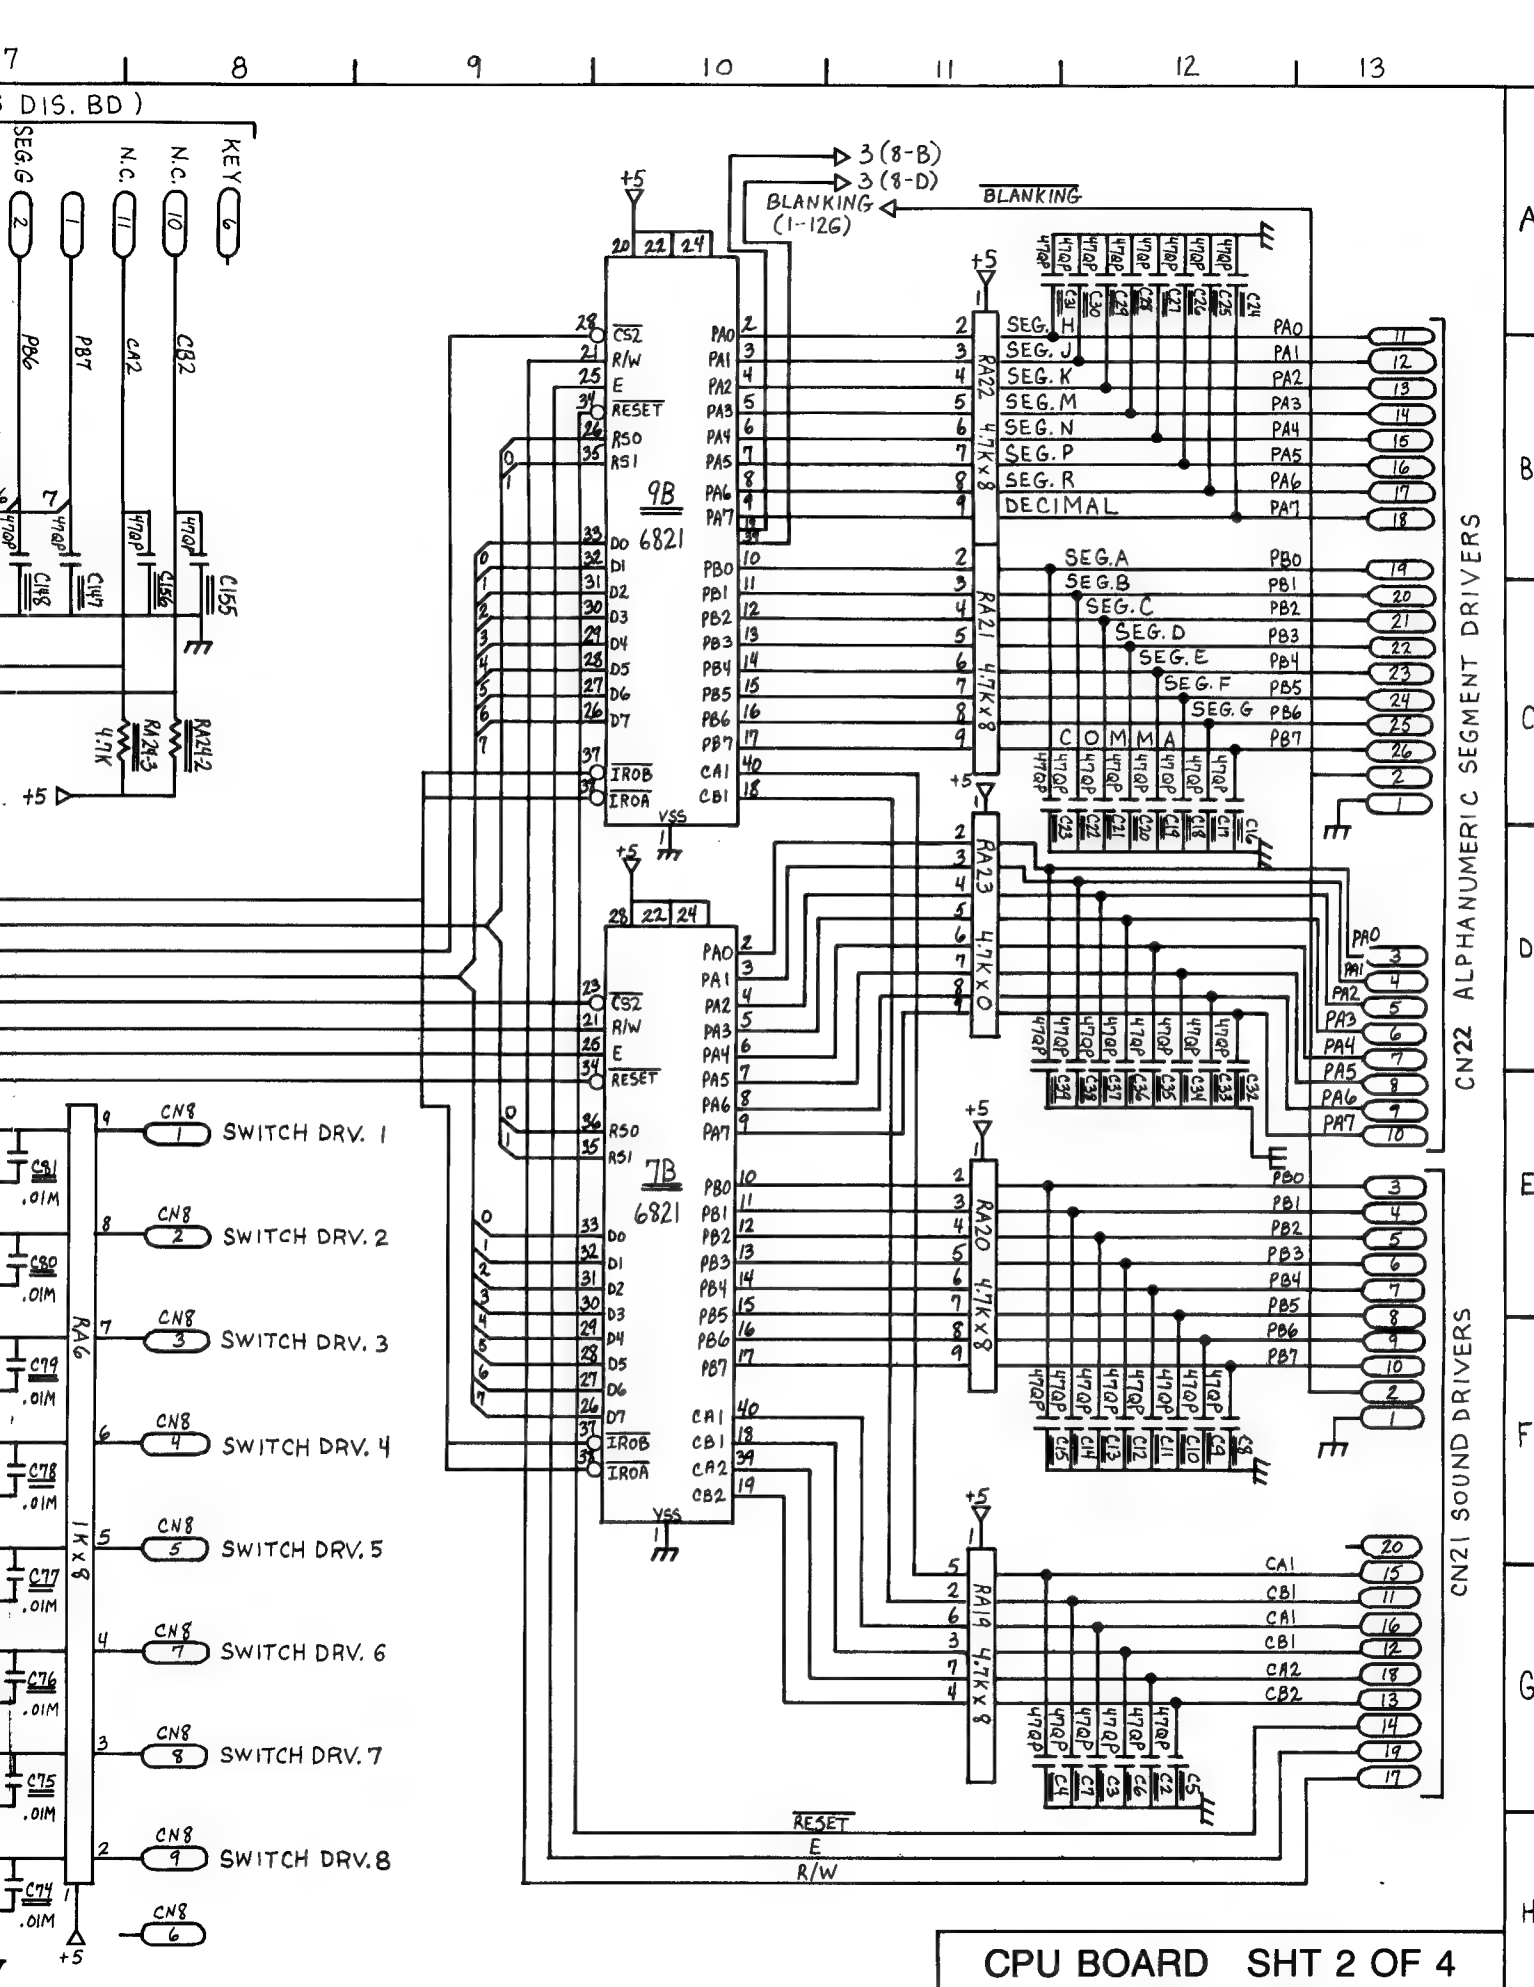

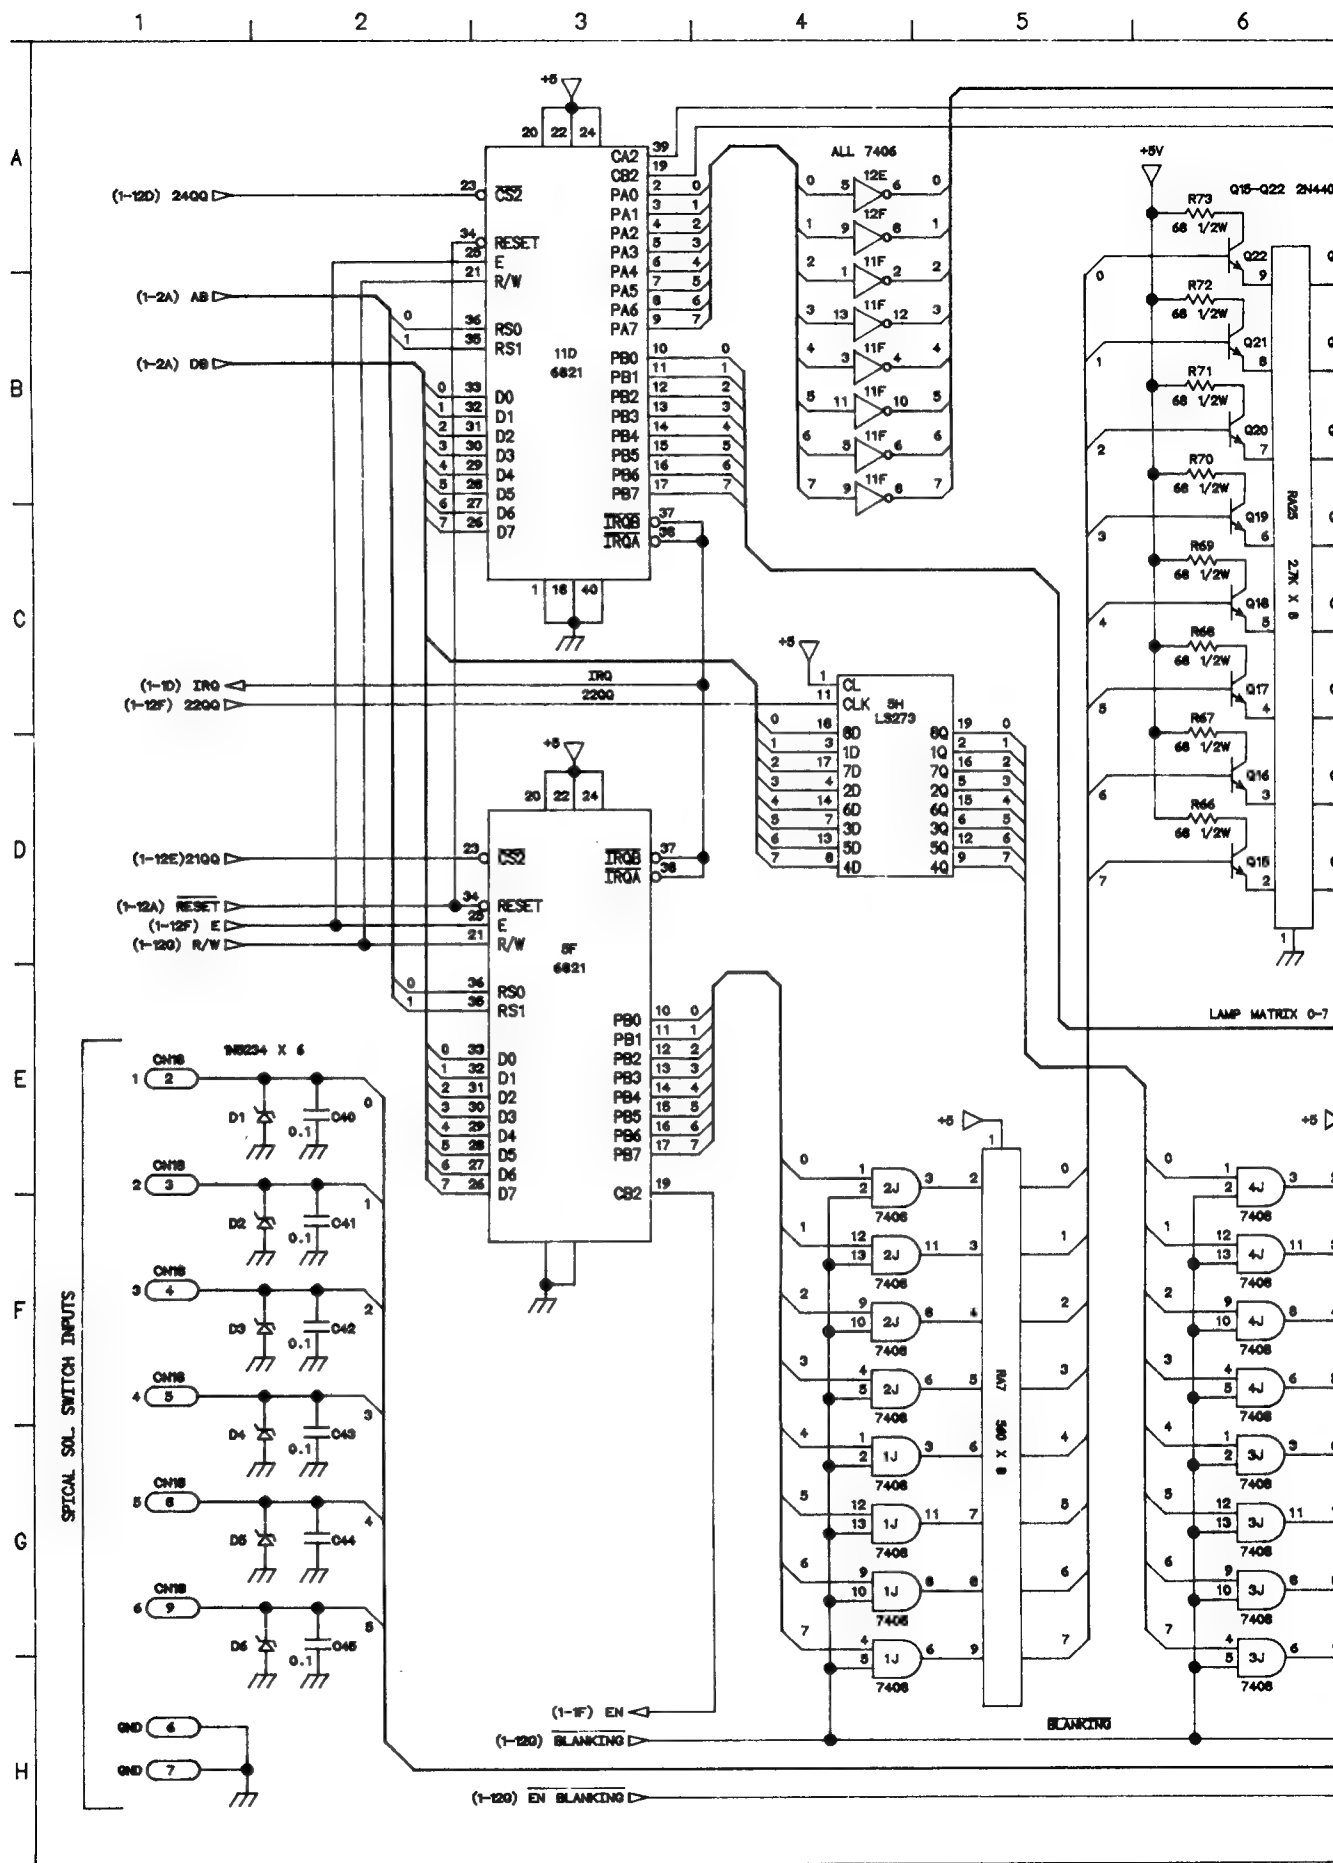



A

B

C


D


E


F


G

H

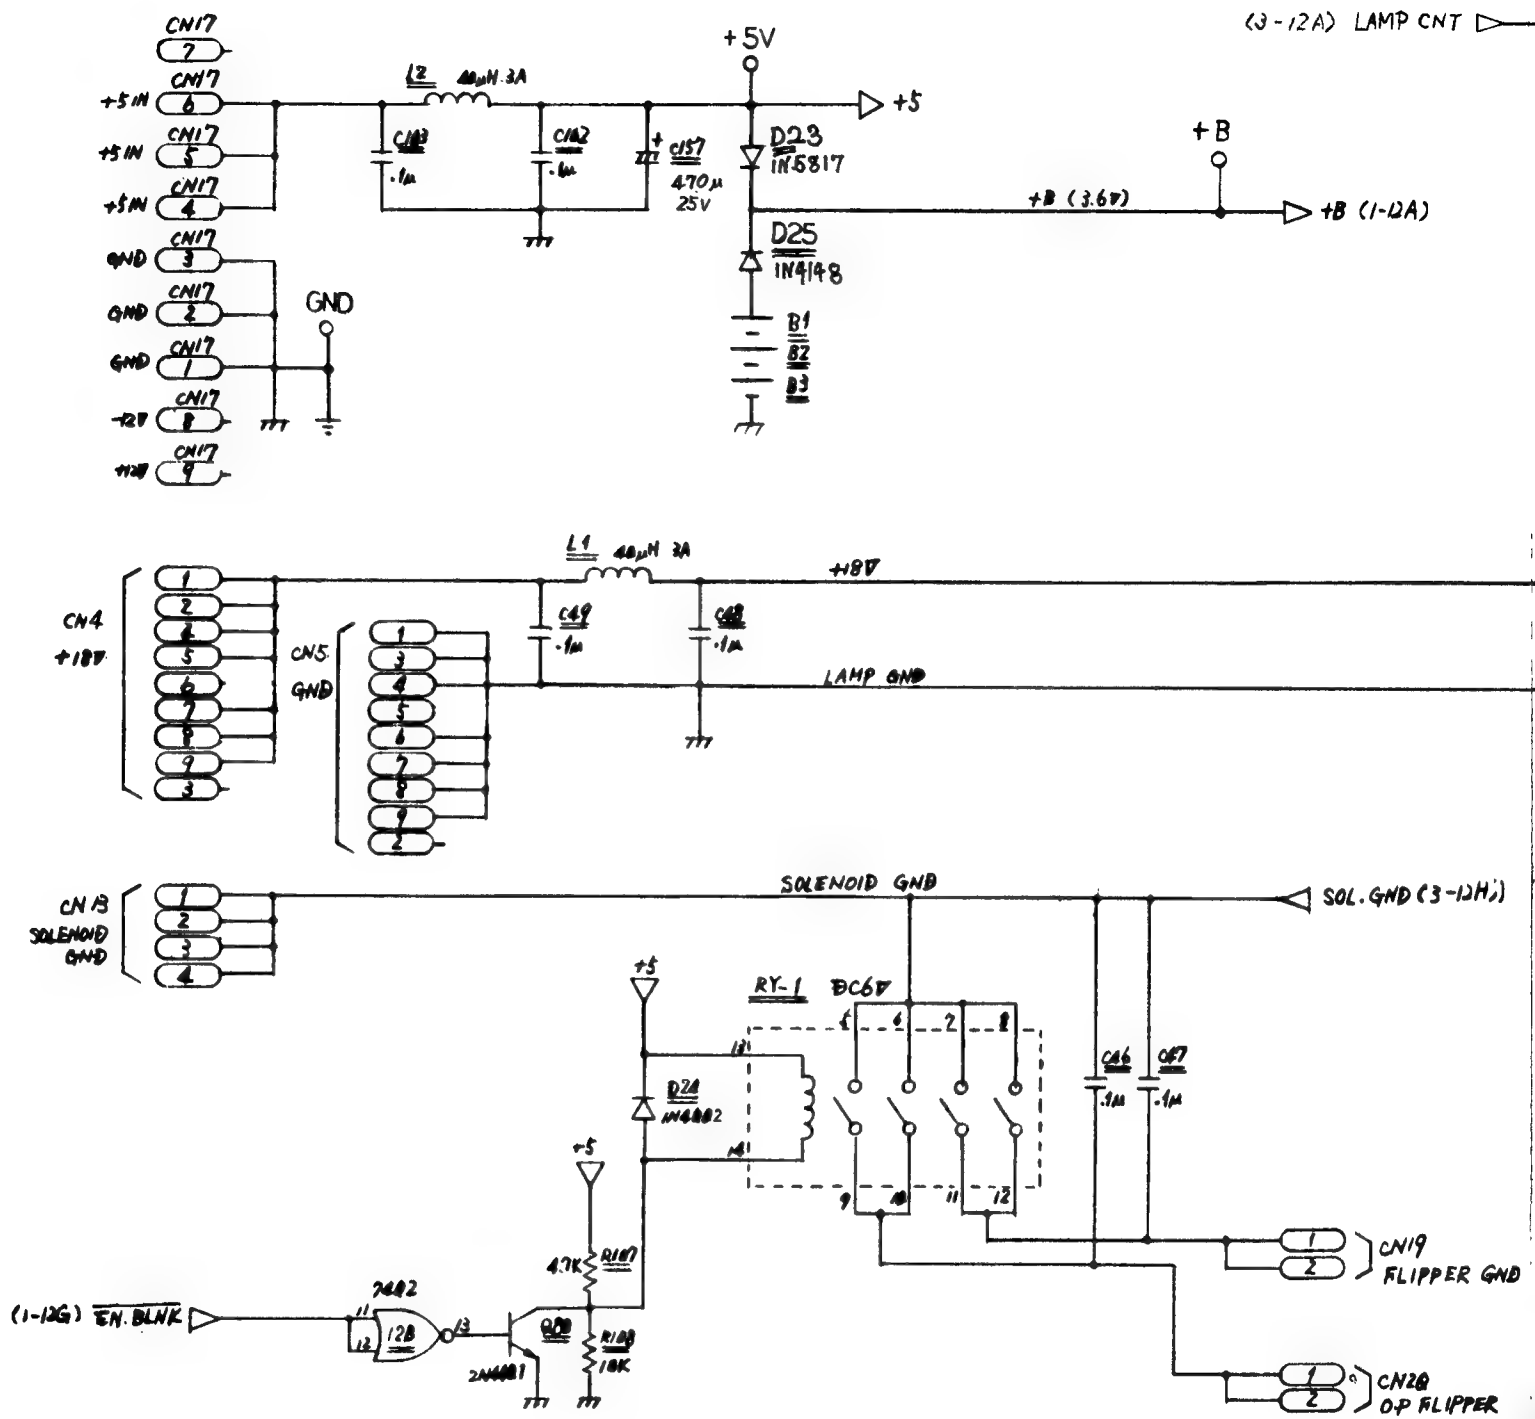


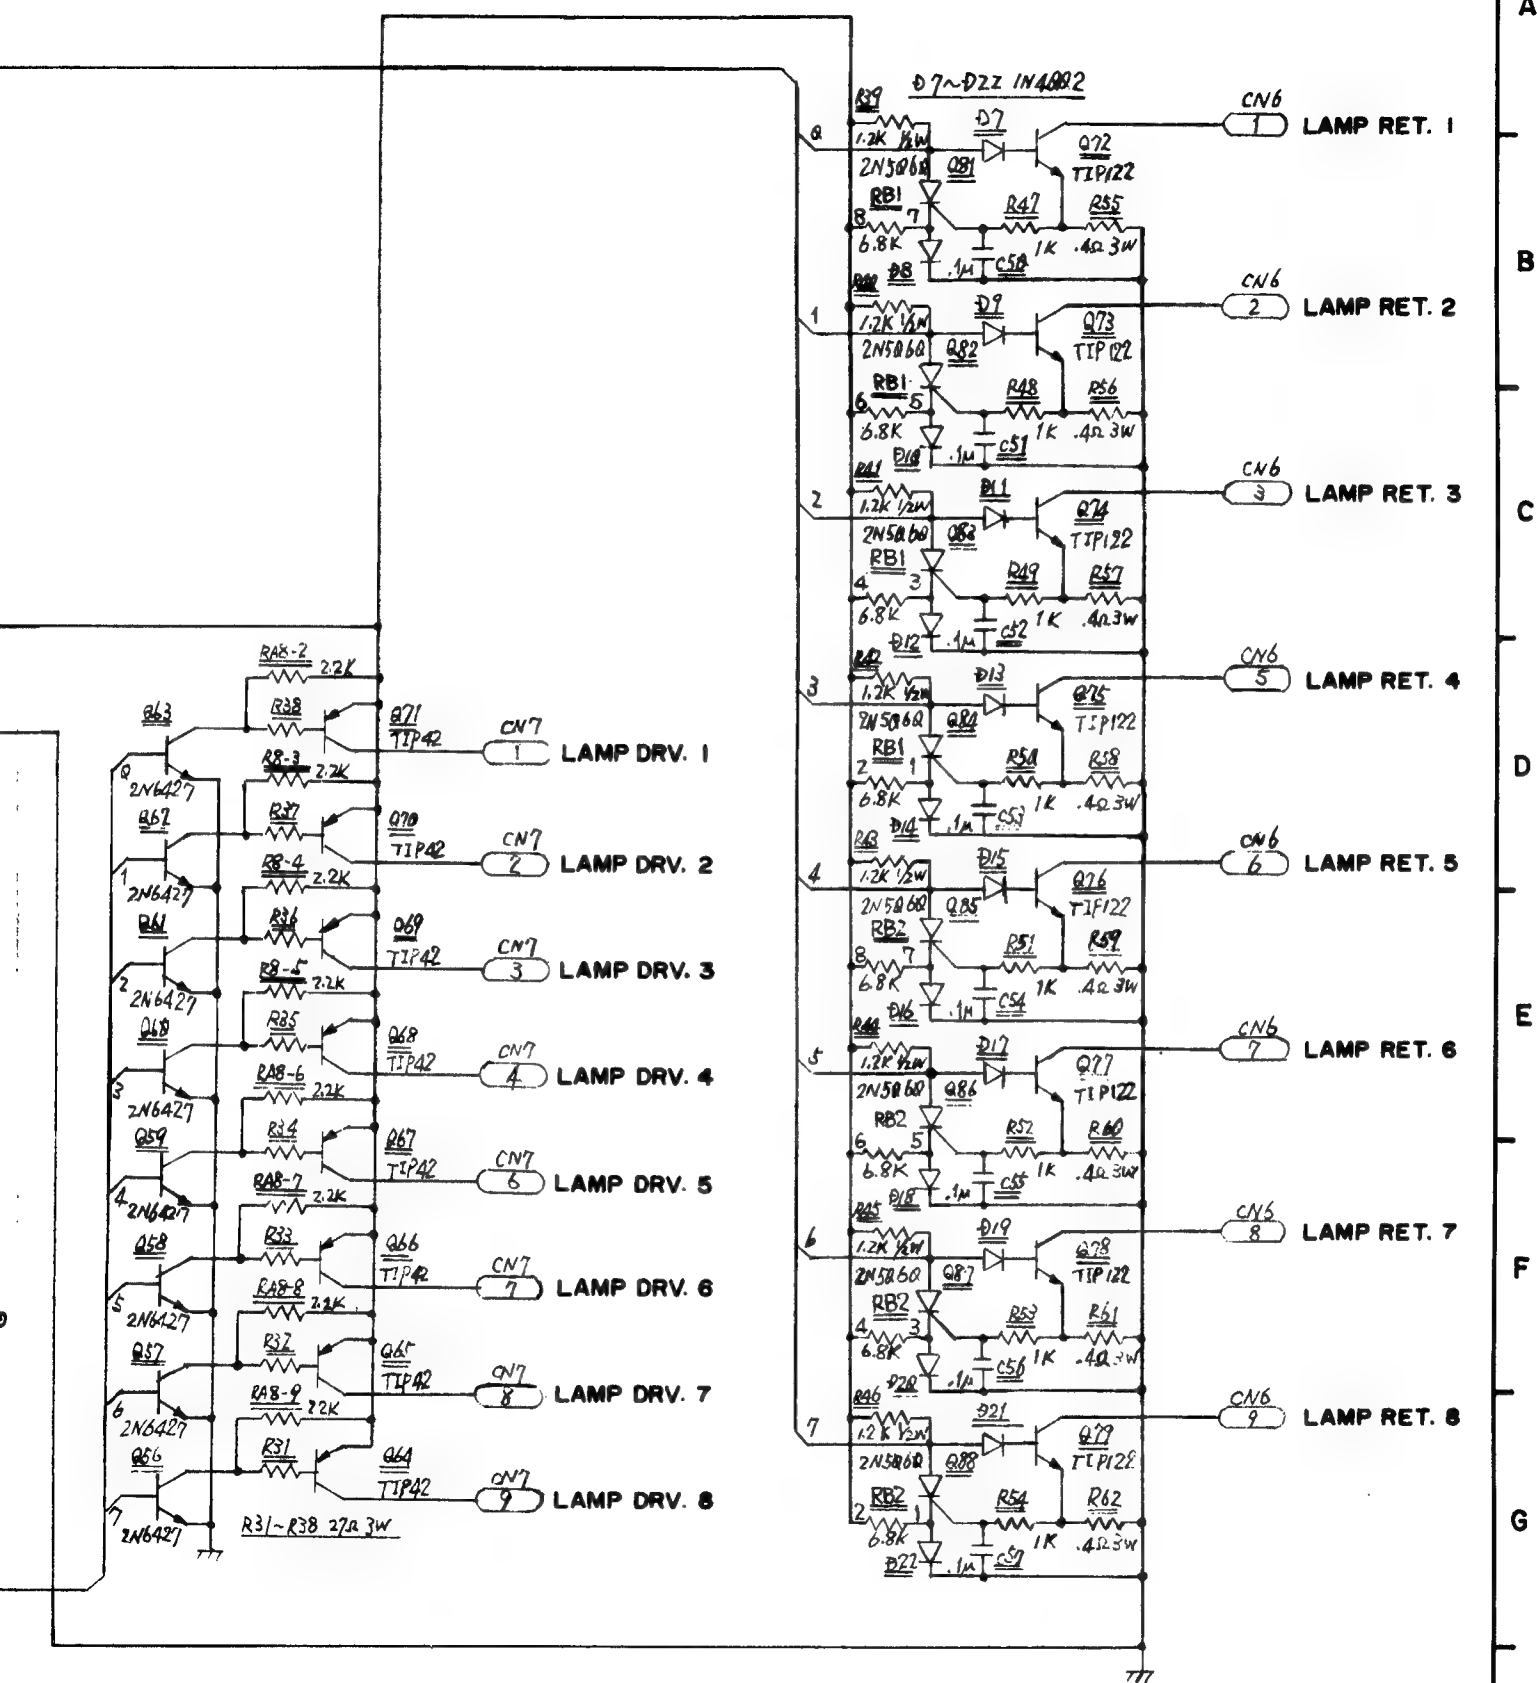


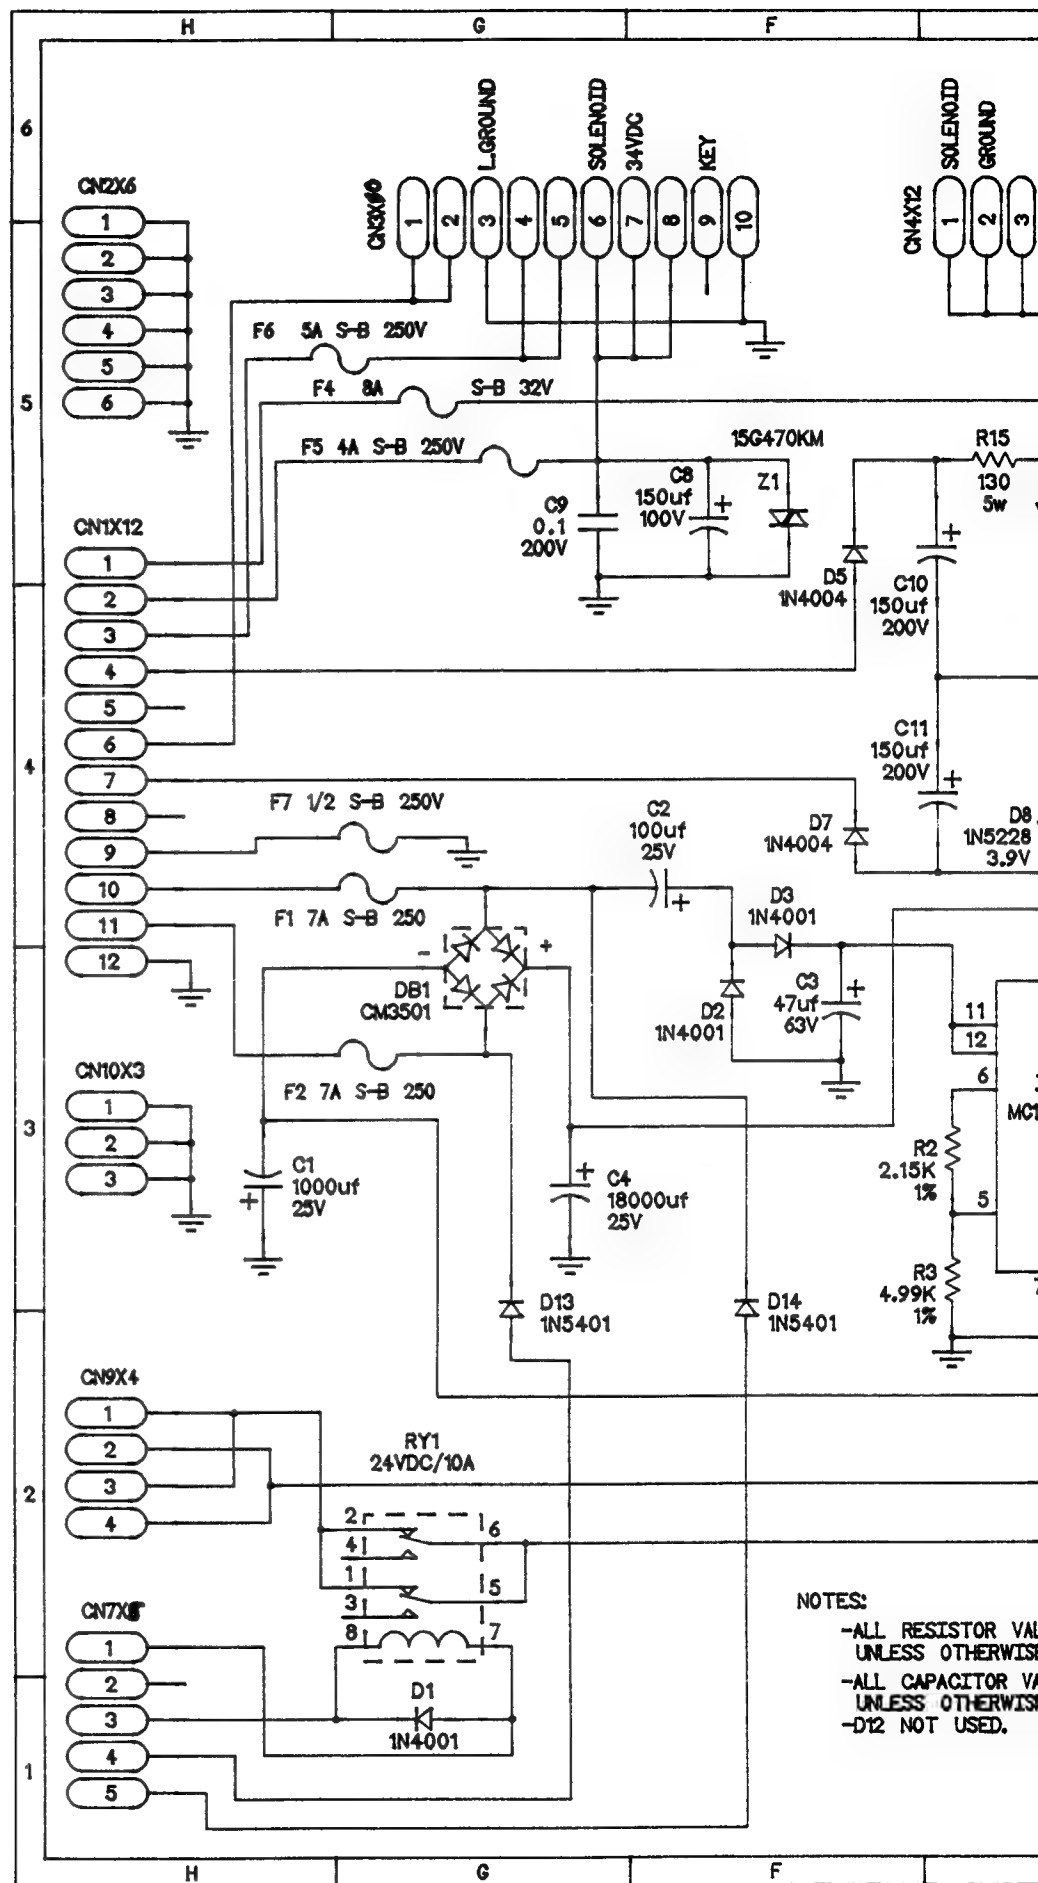

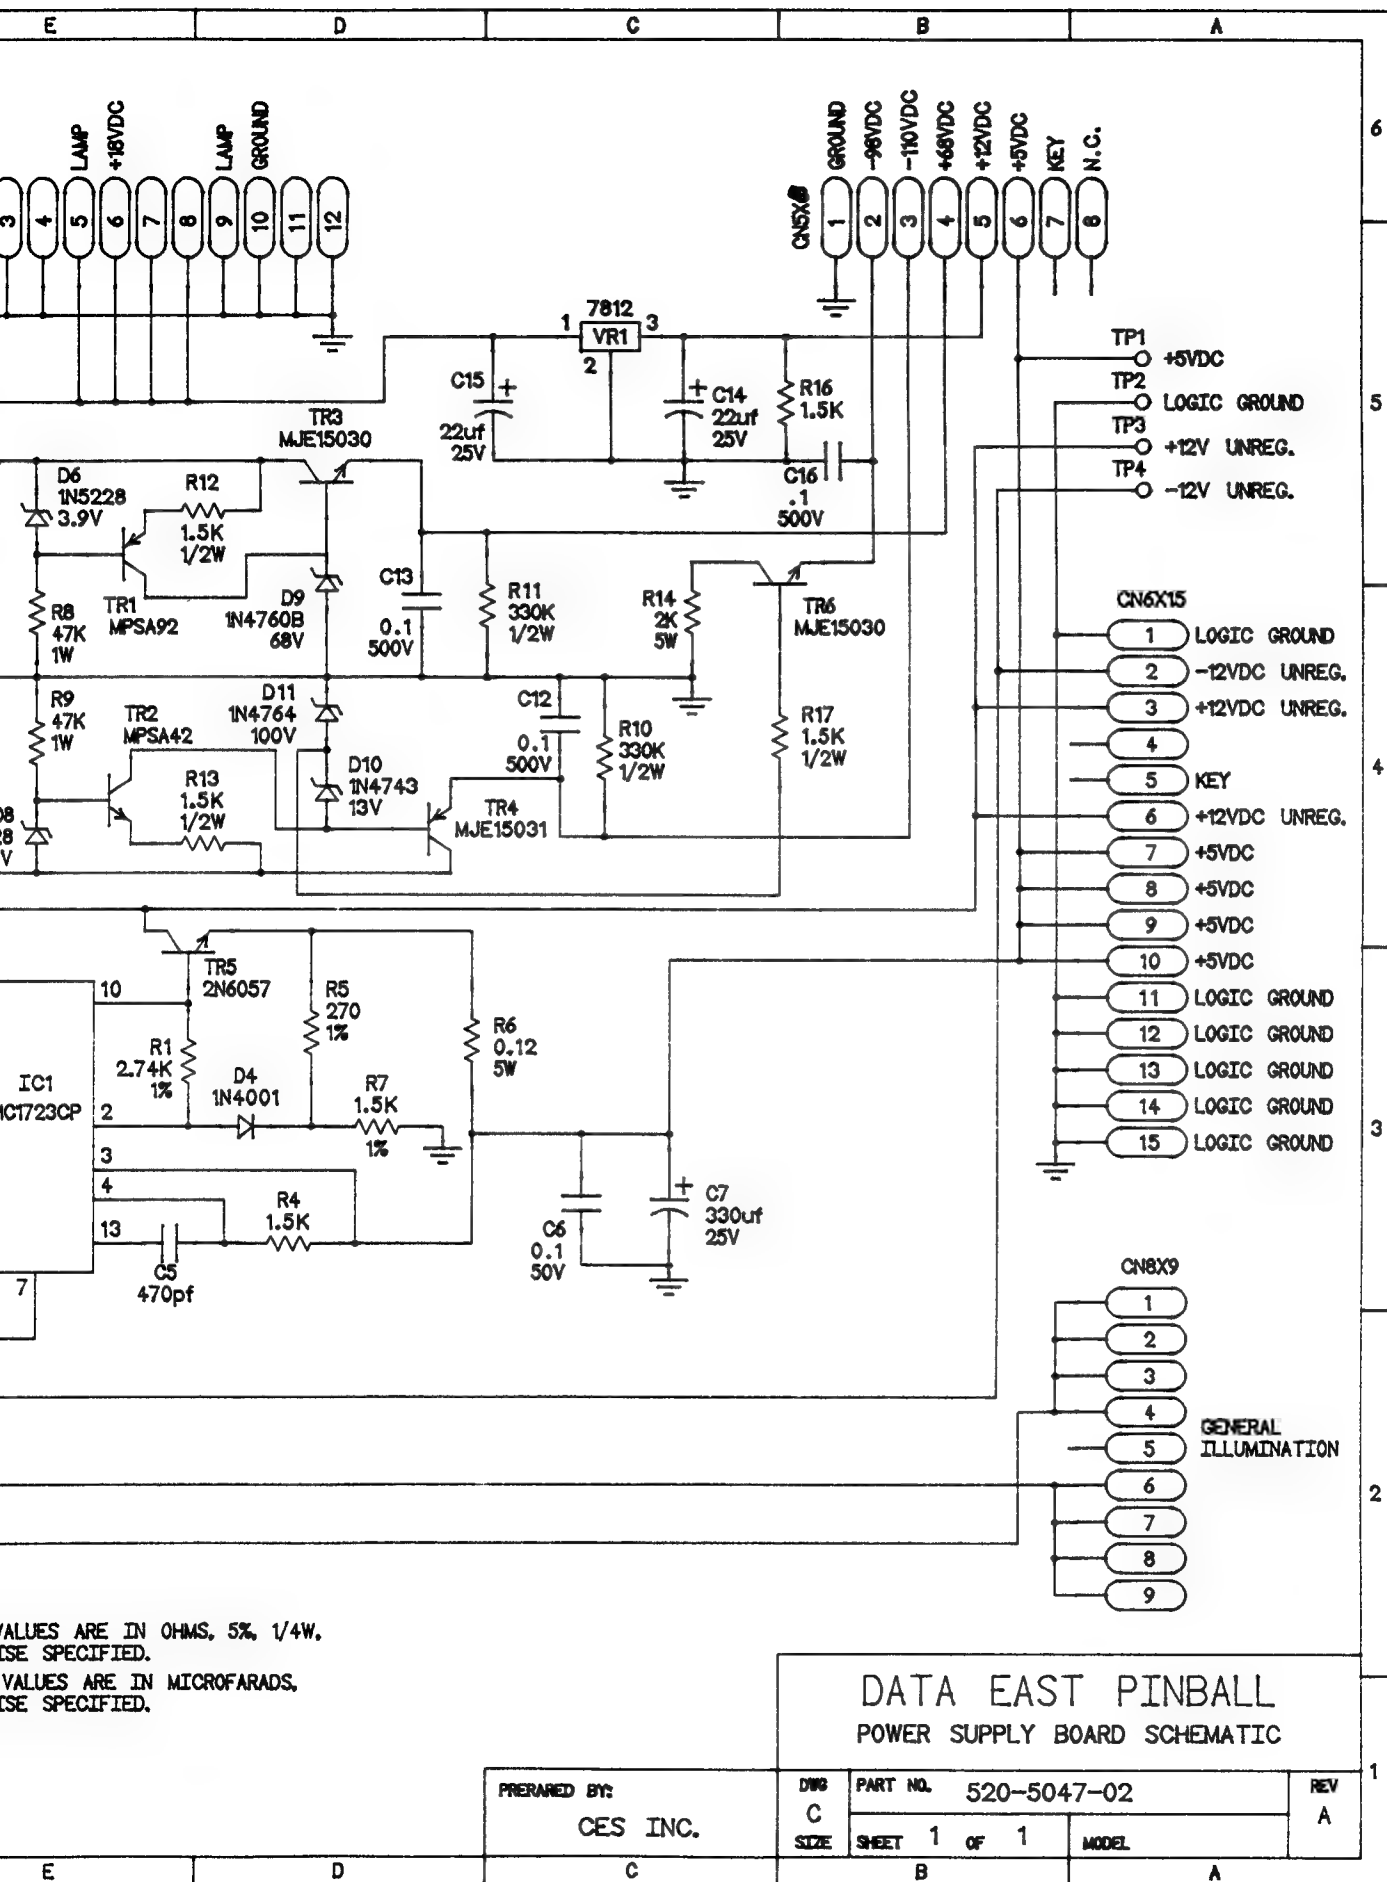





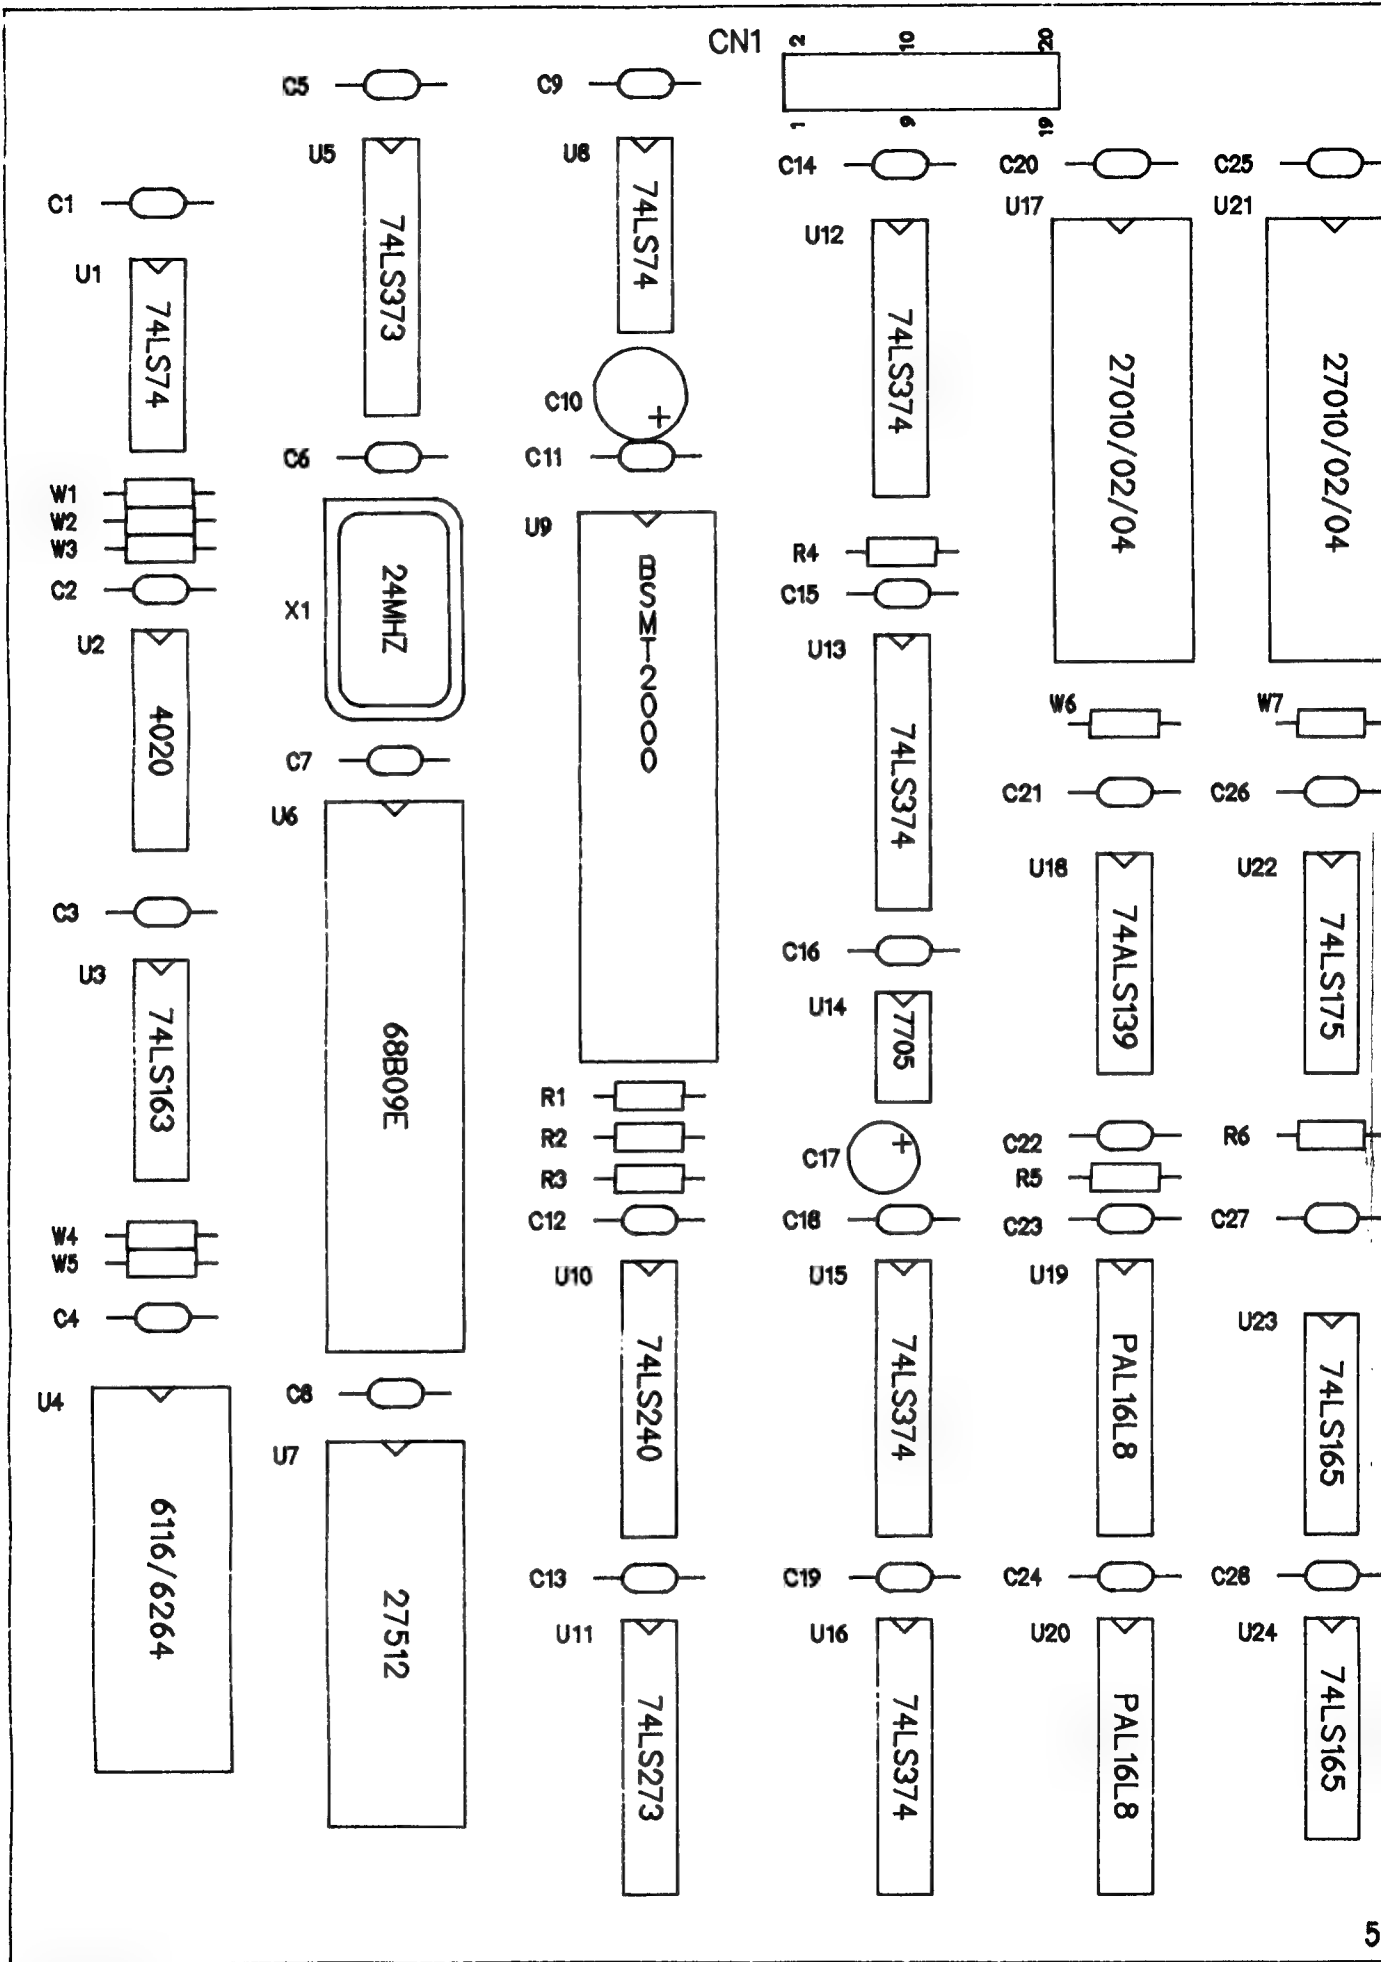


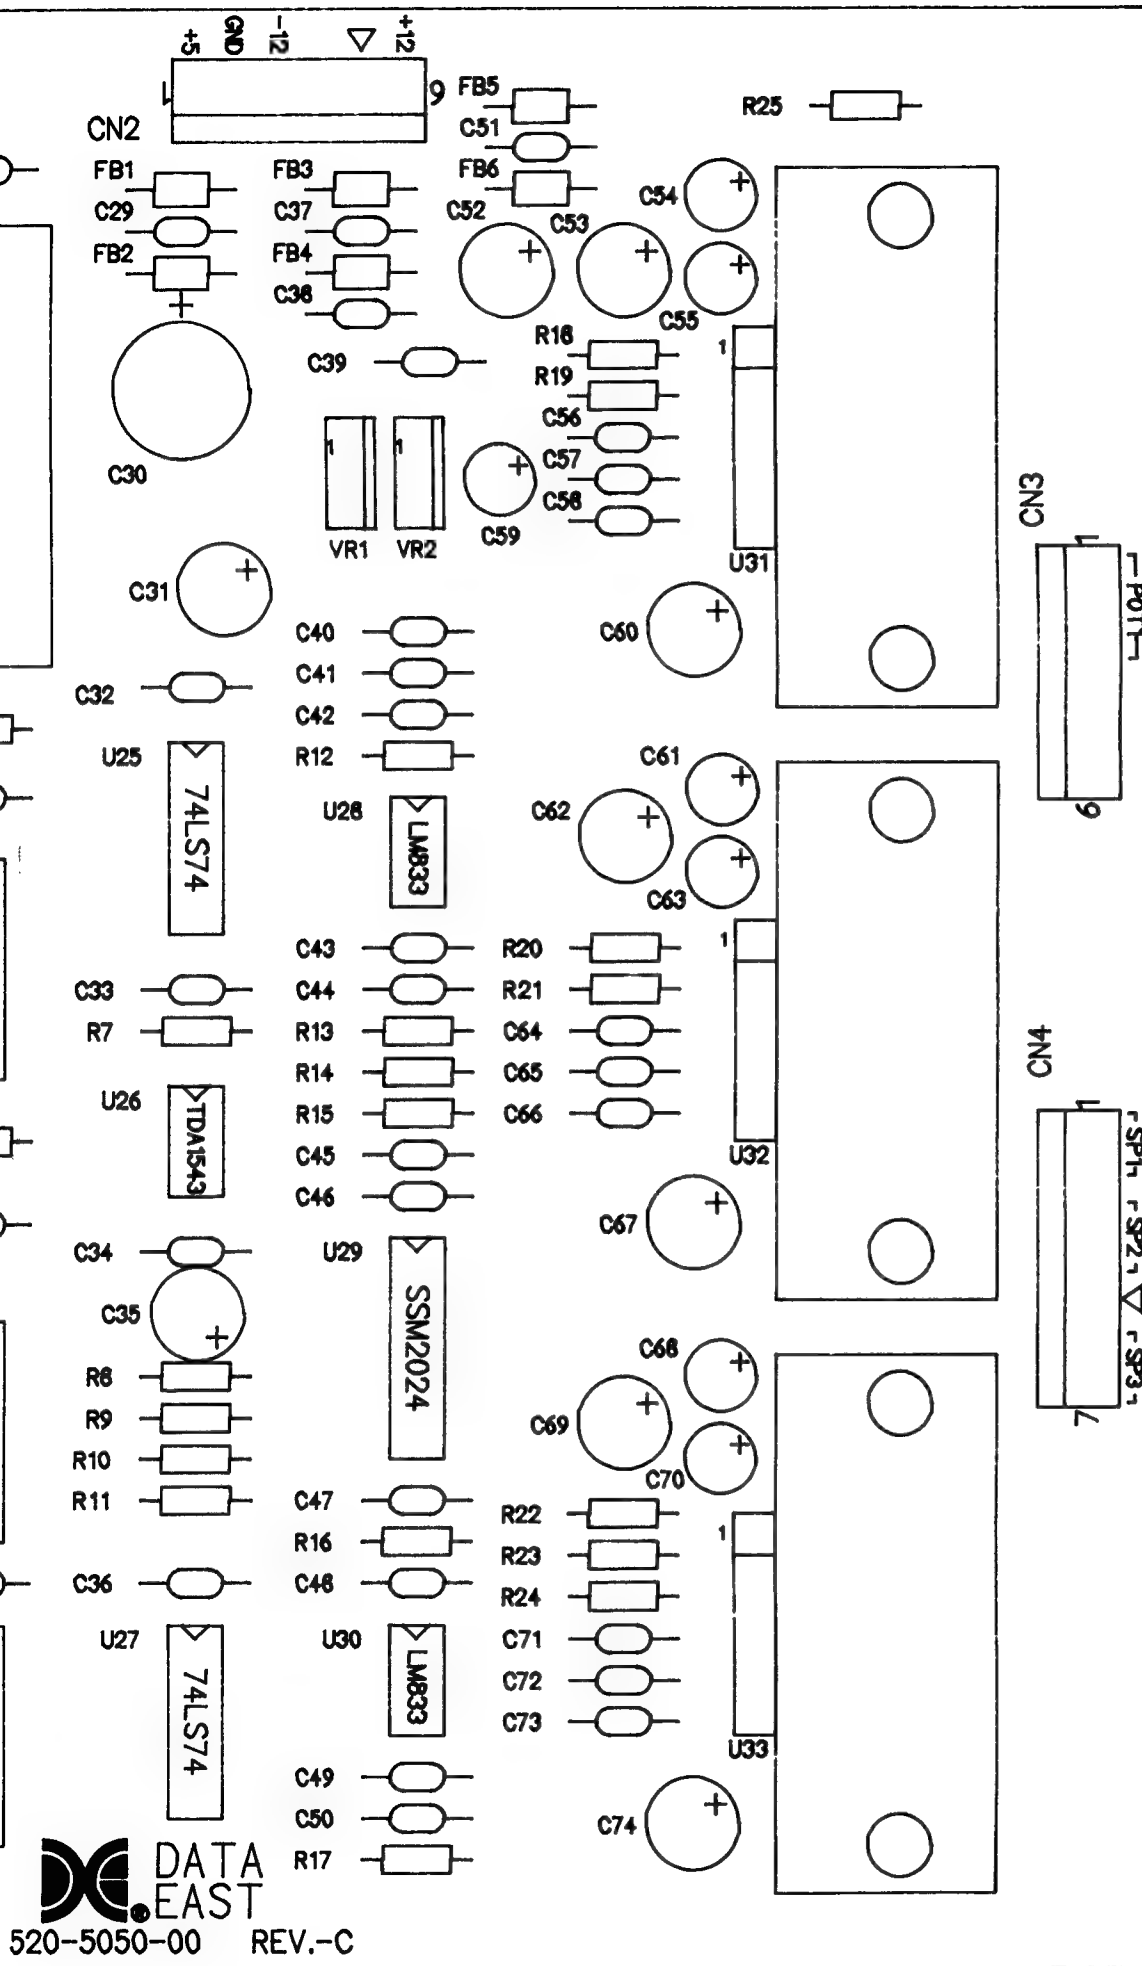



DATA  
EAST

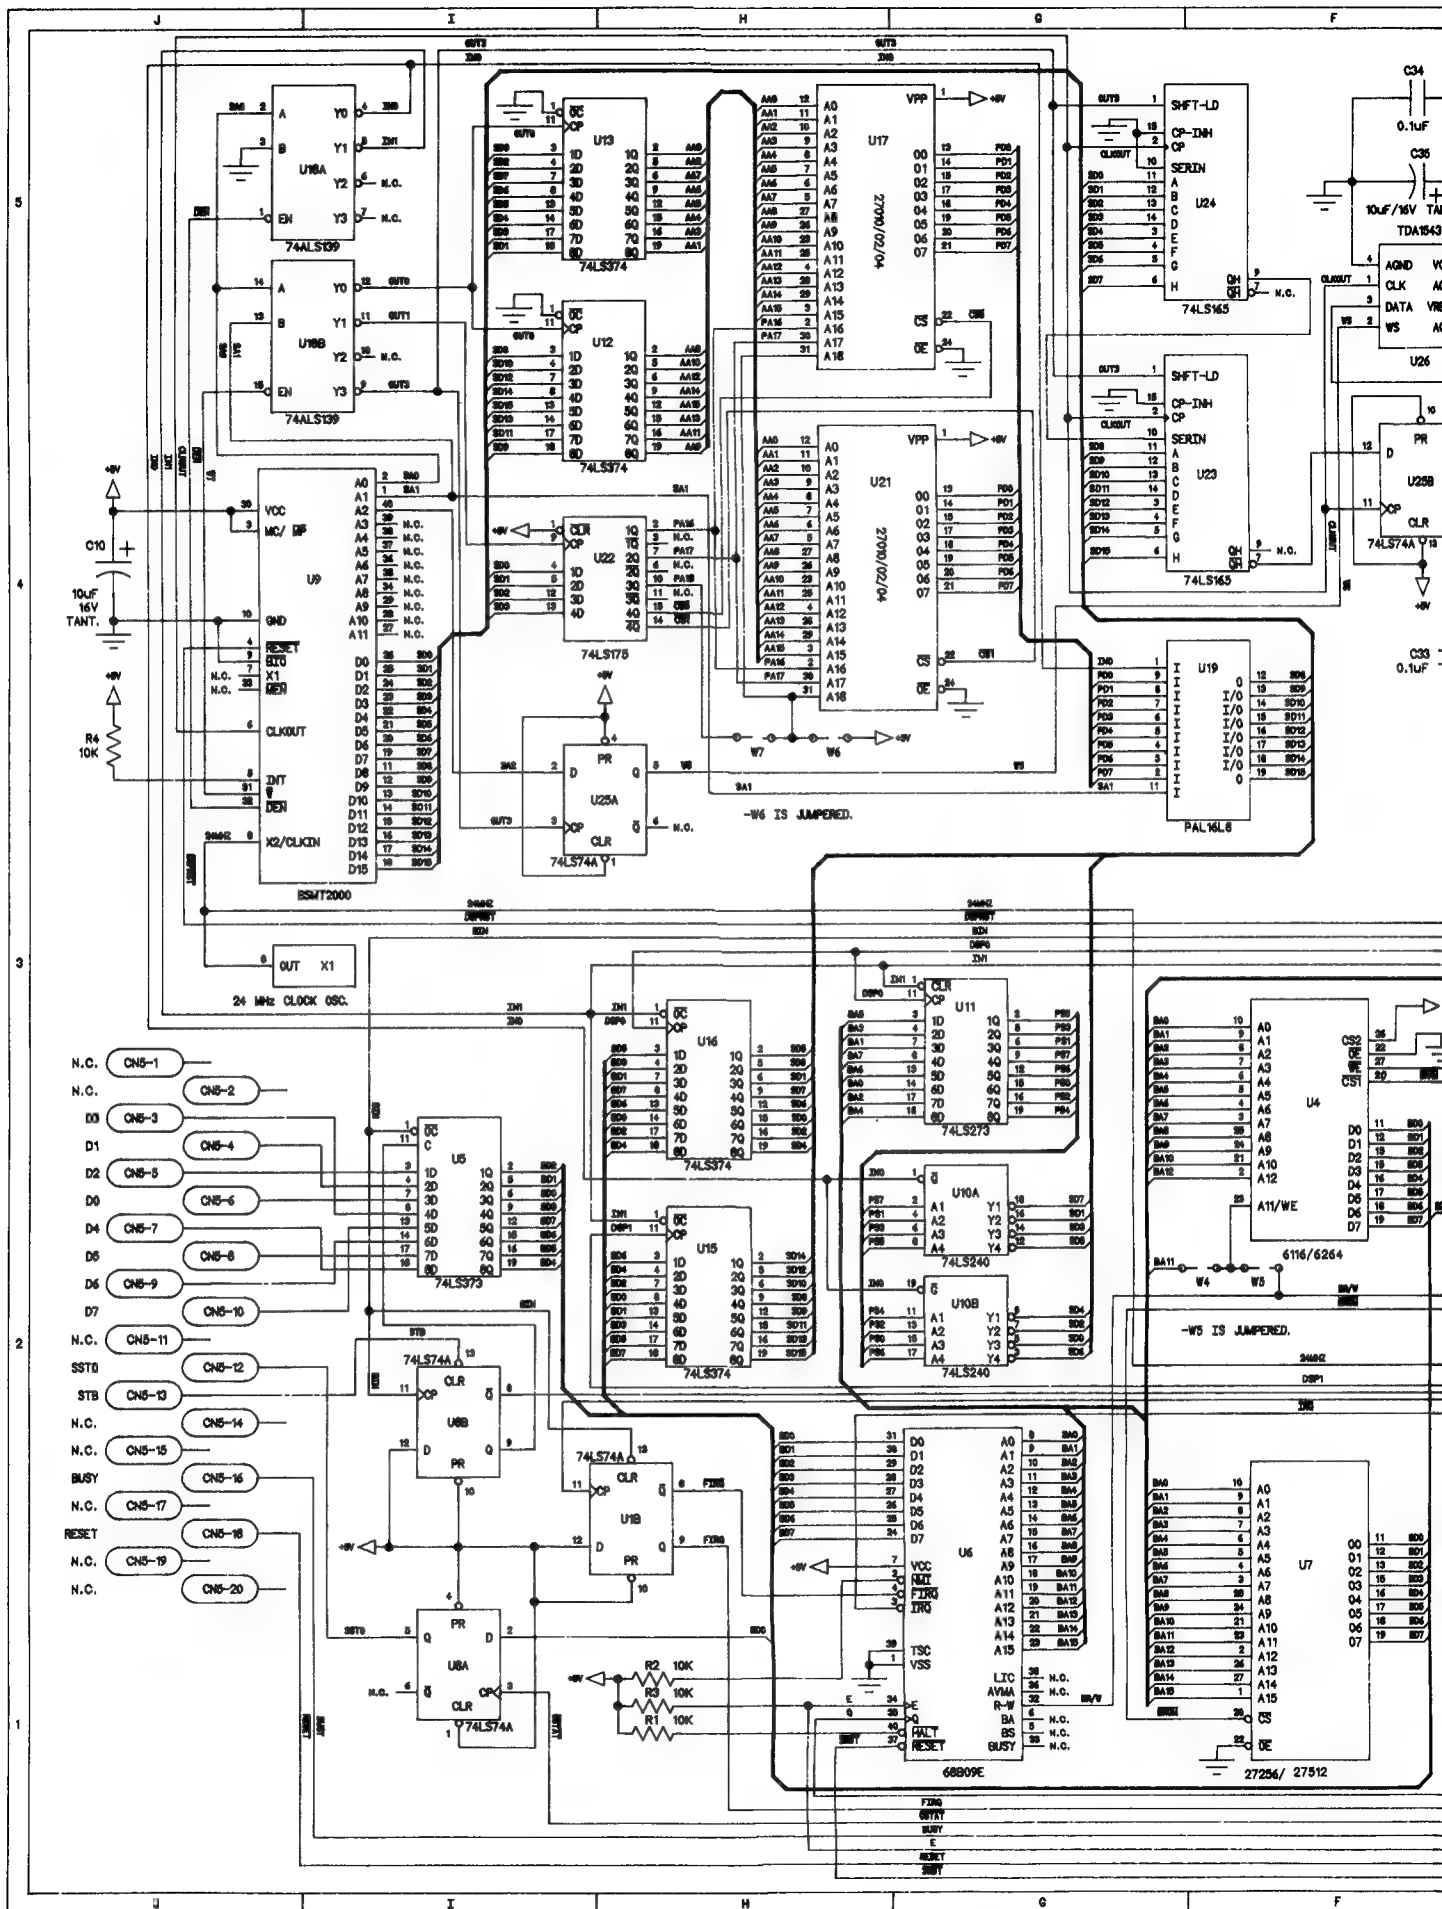


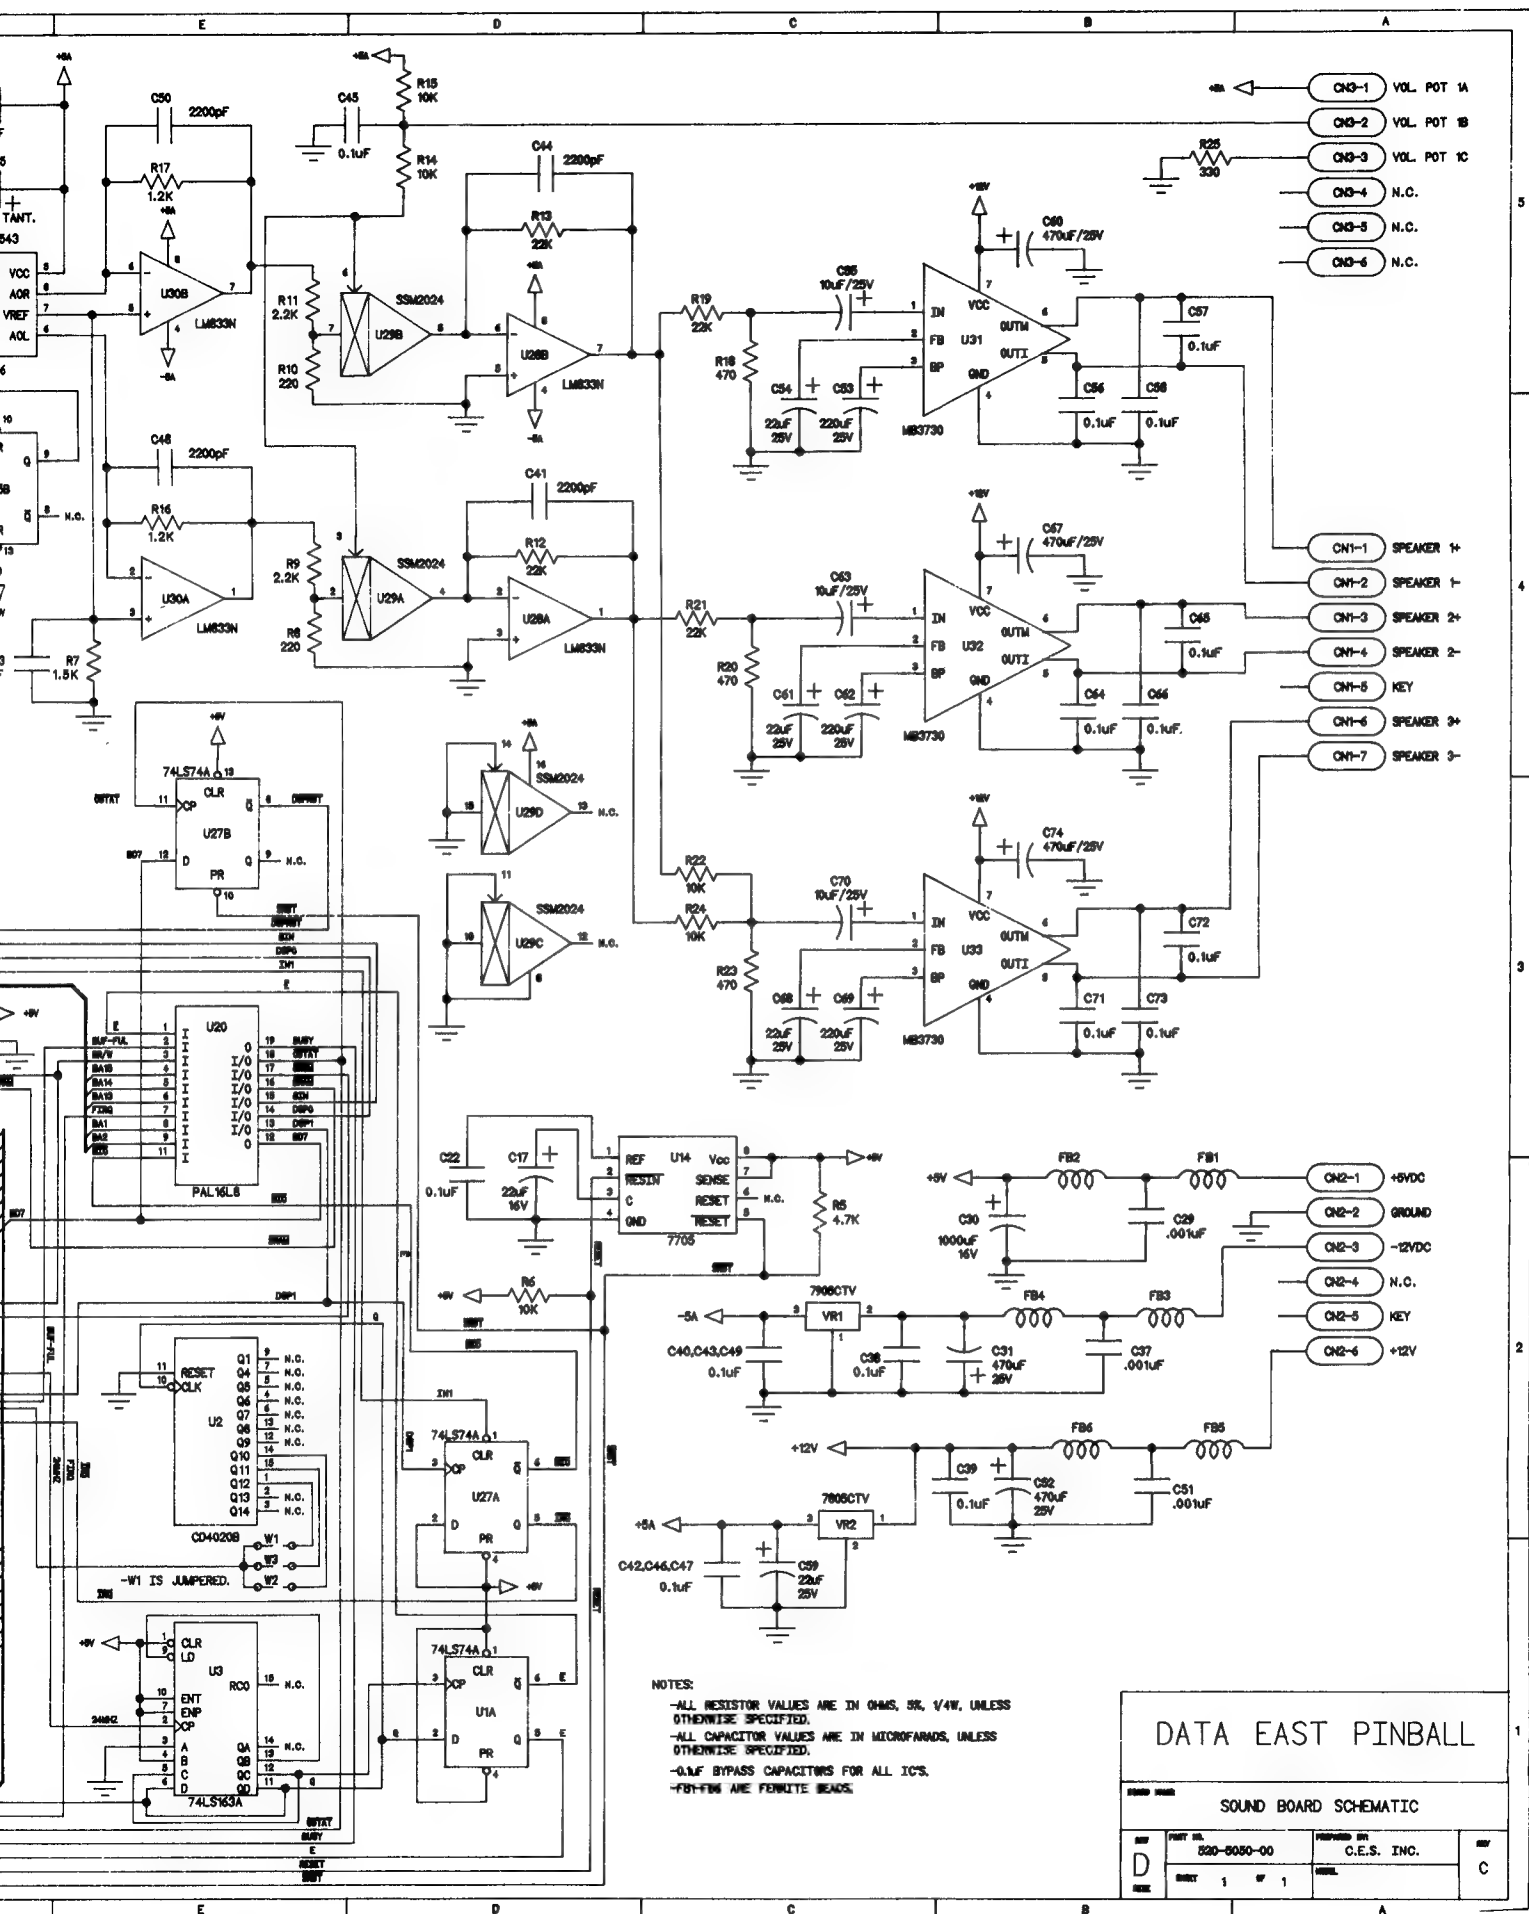

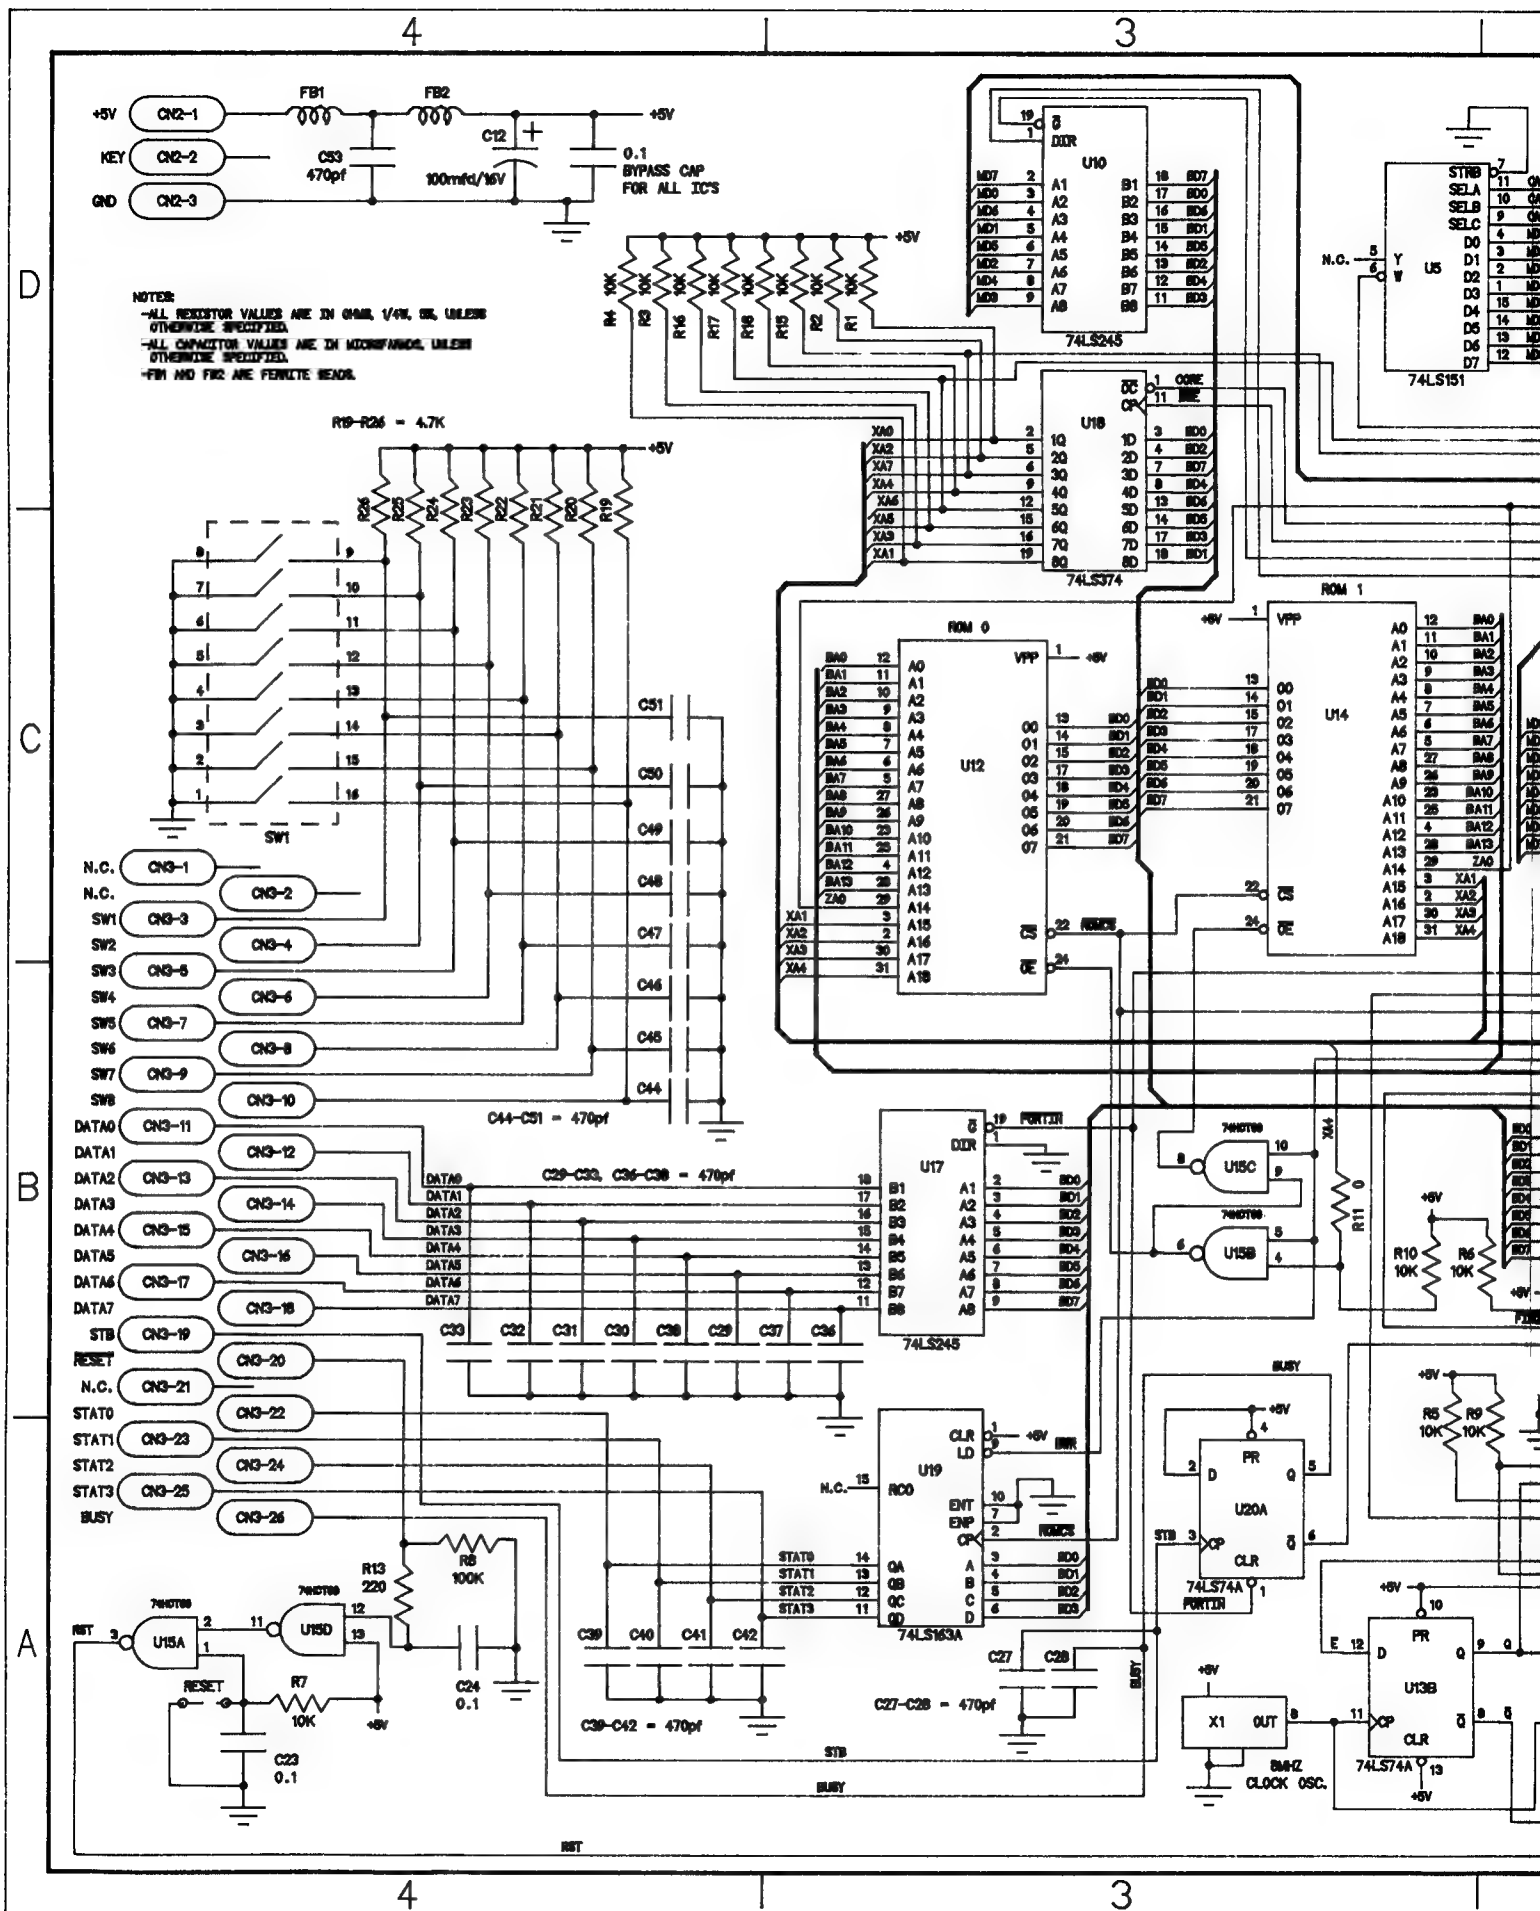

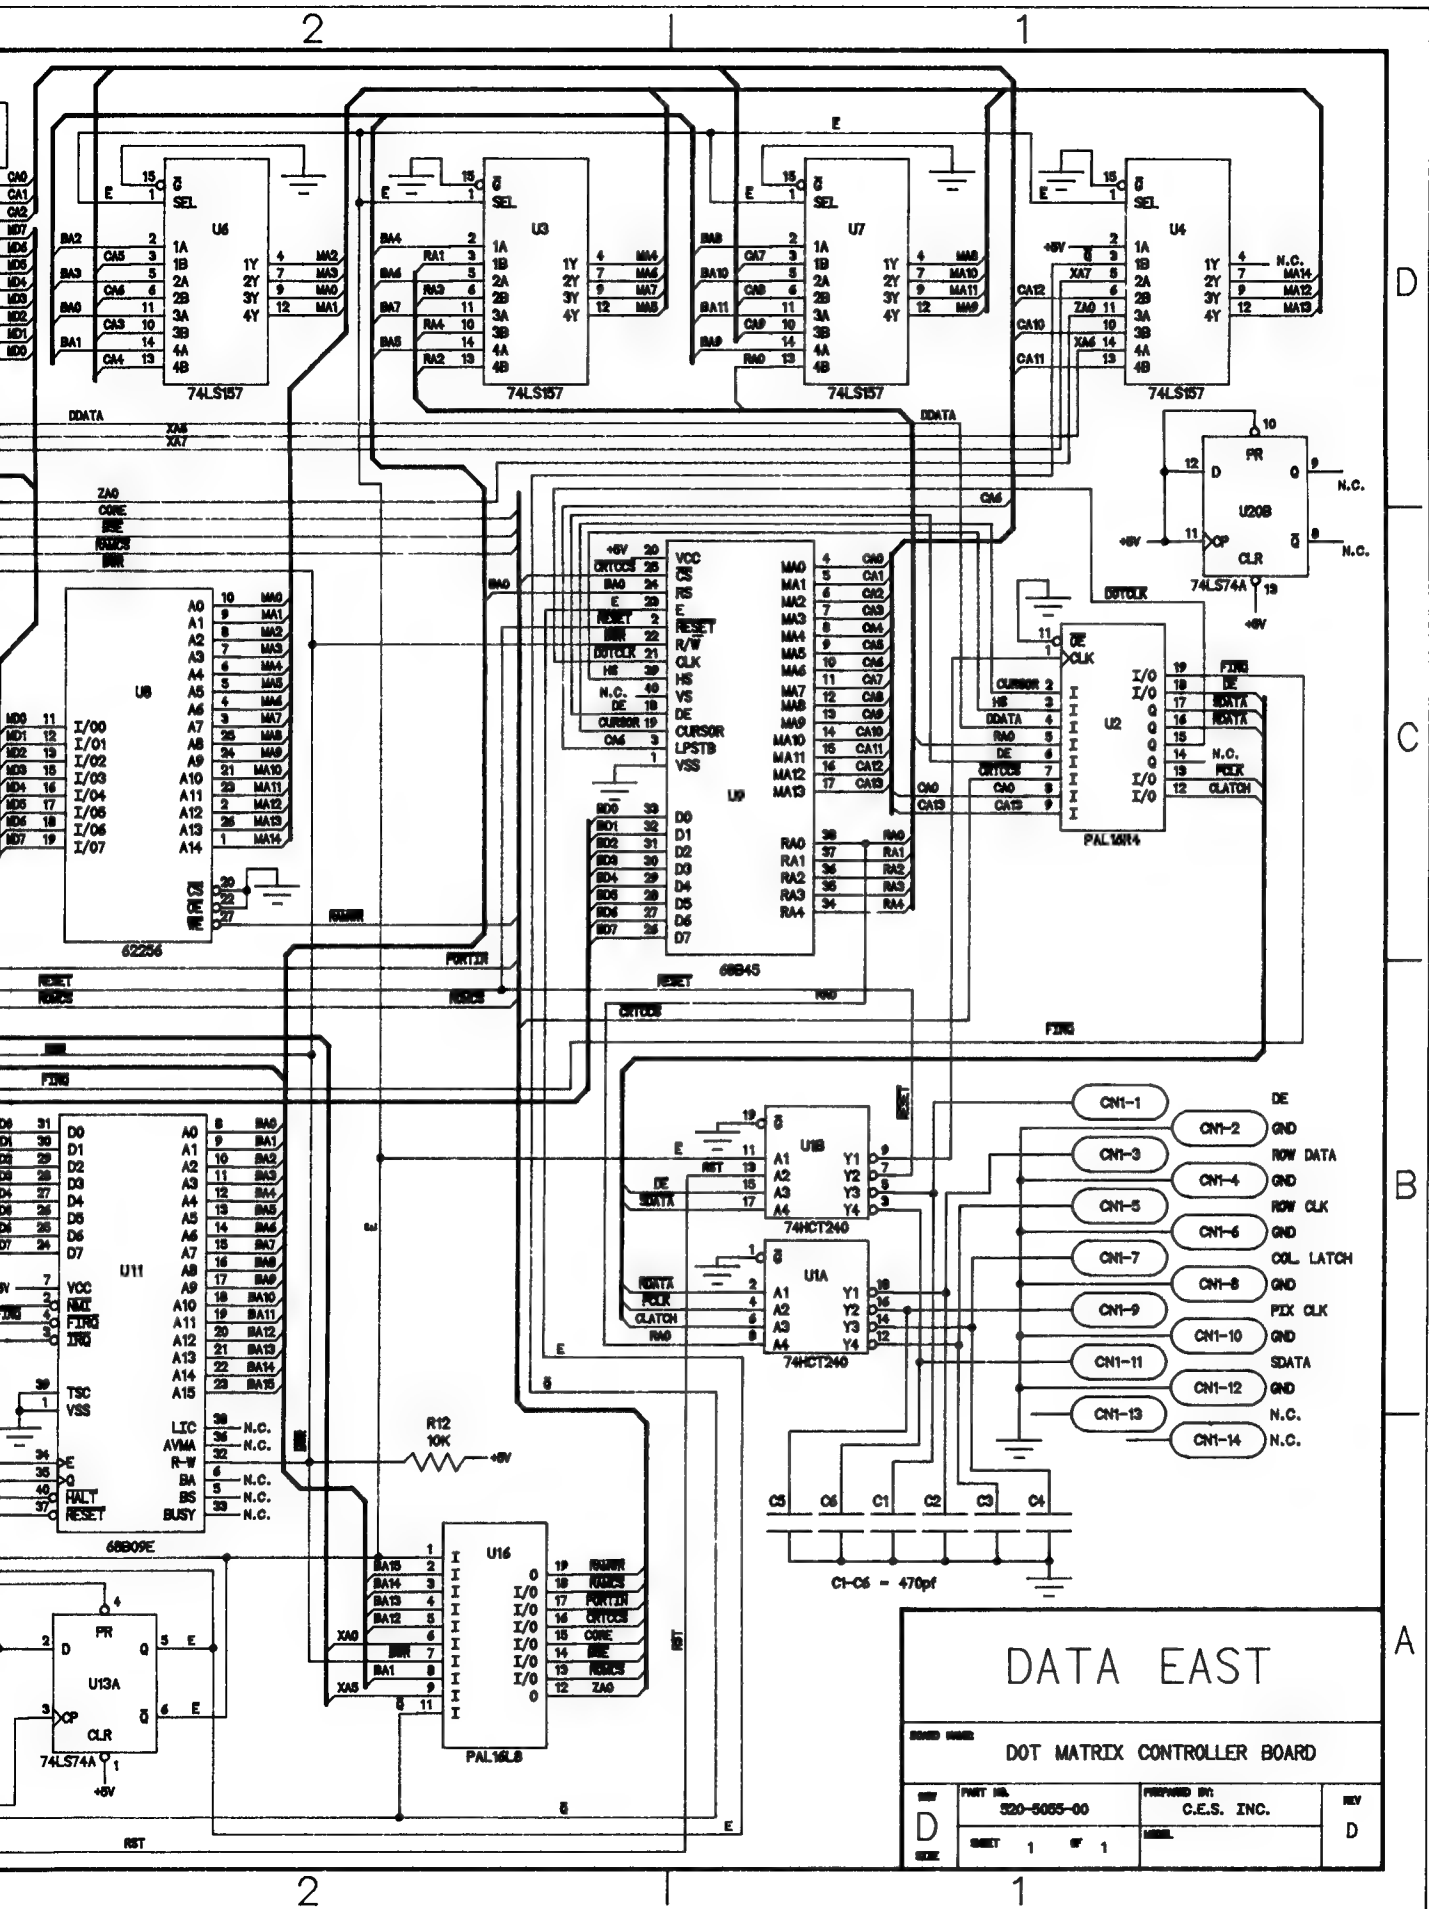

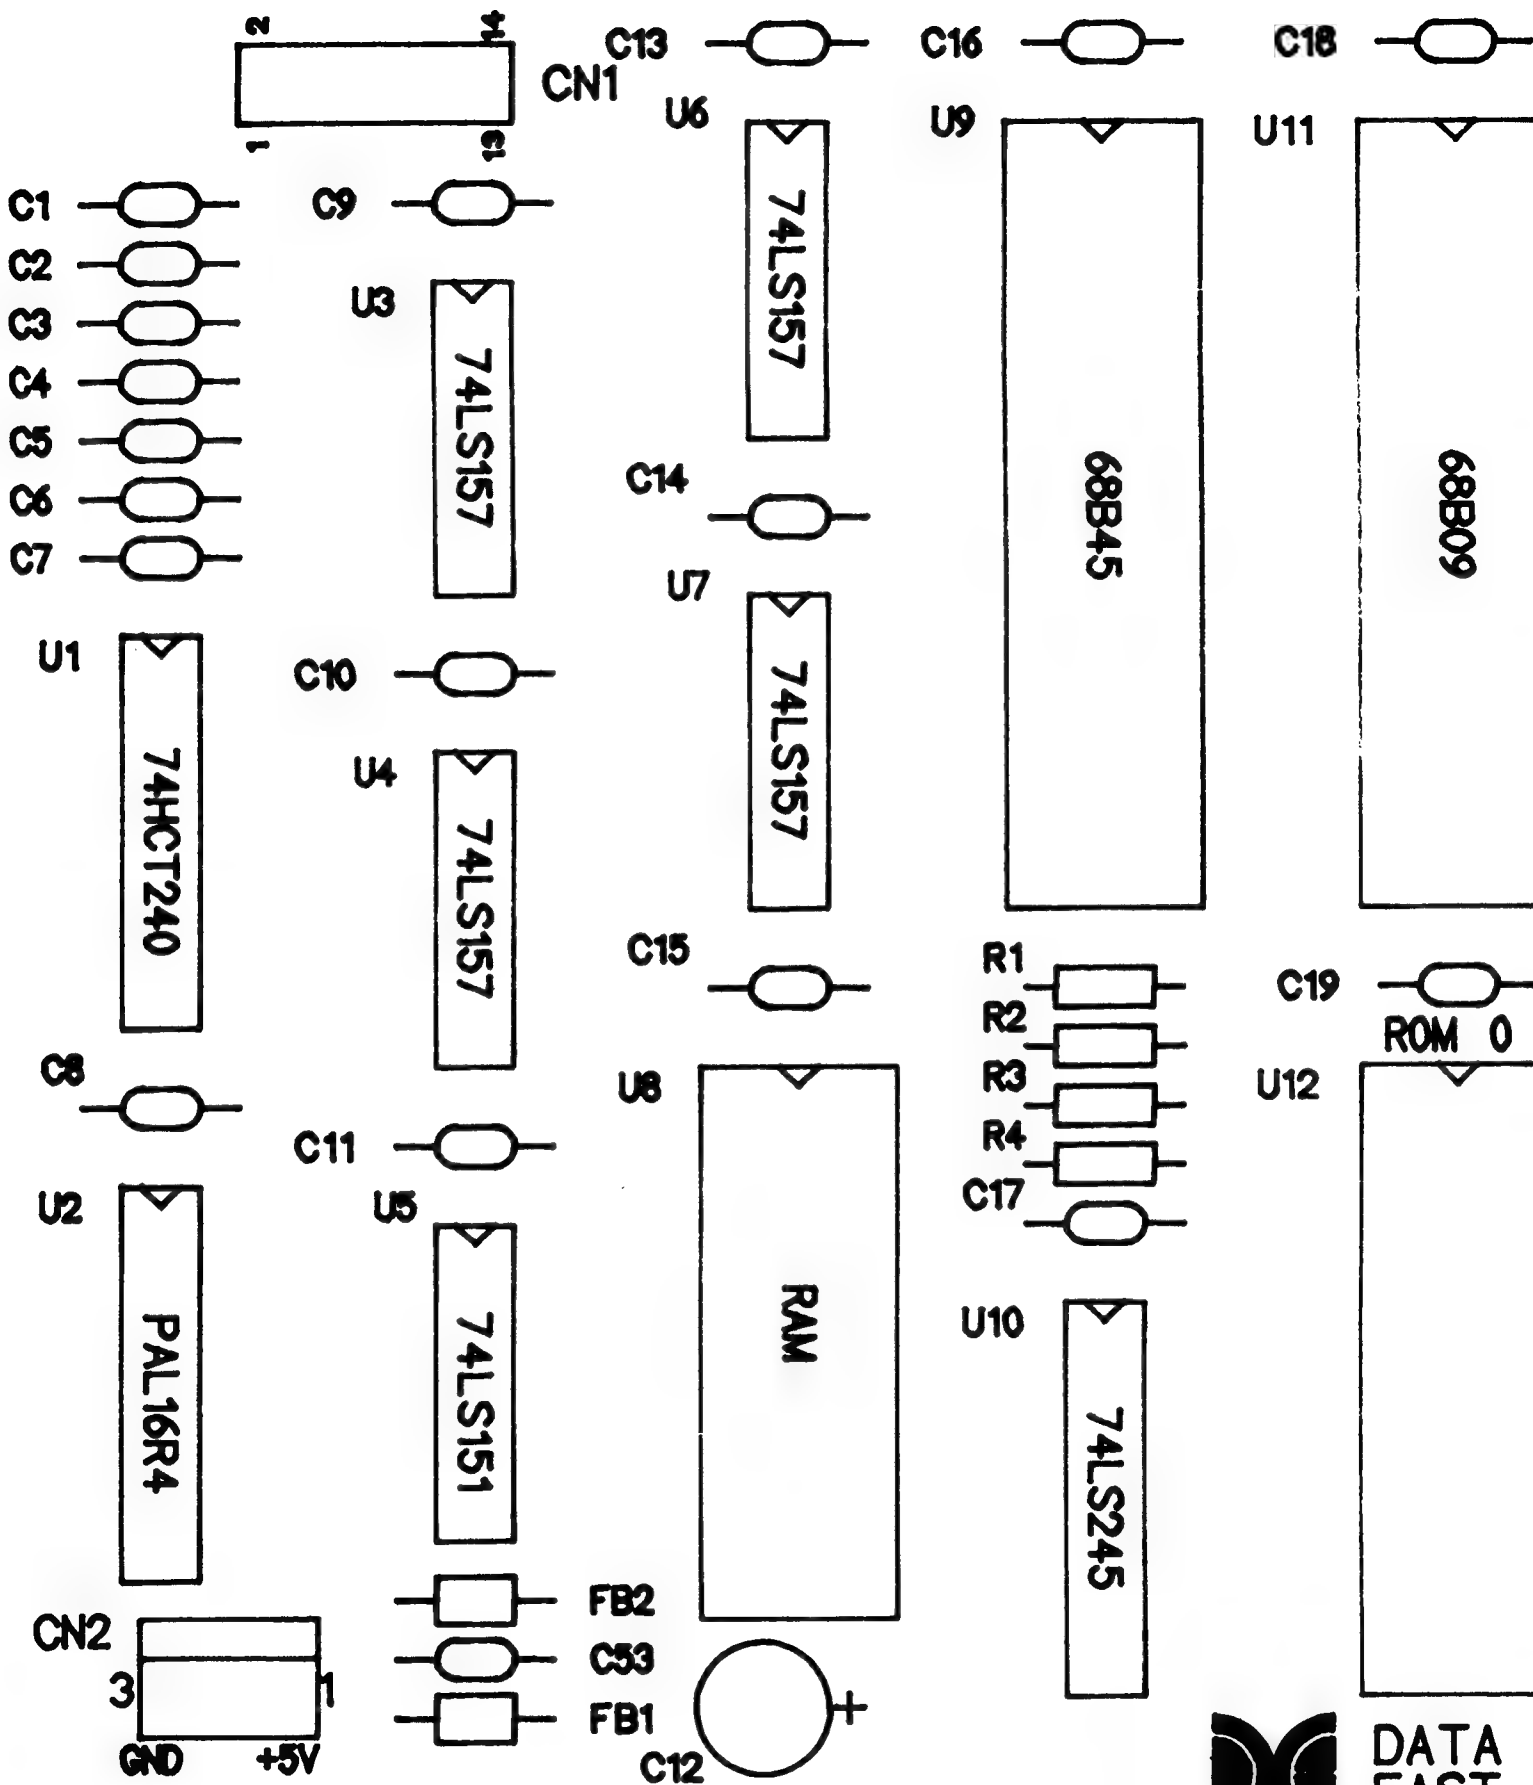


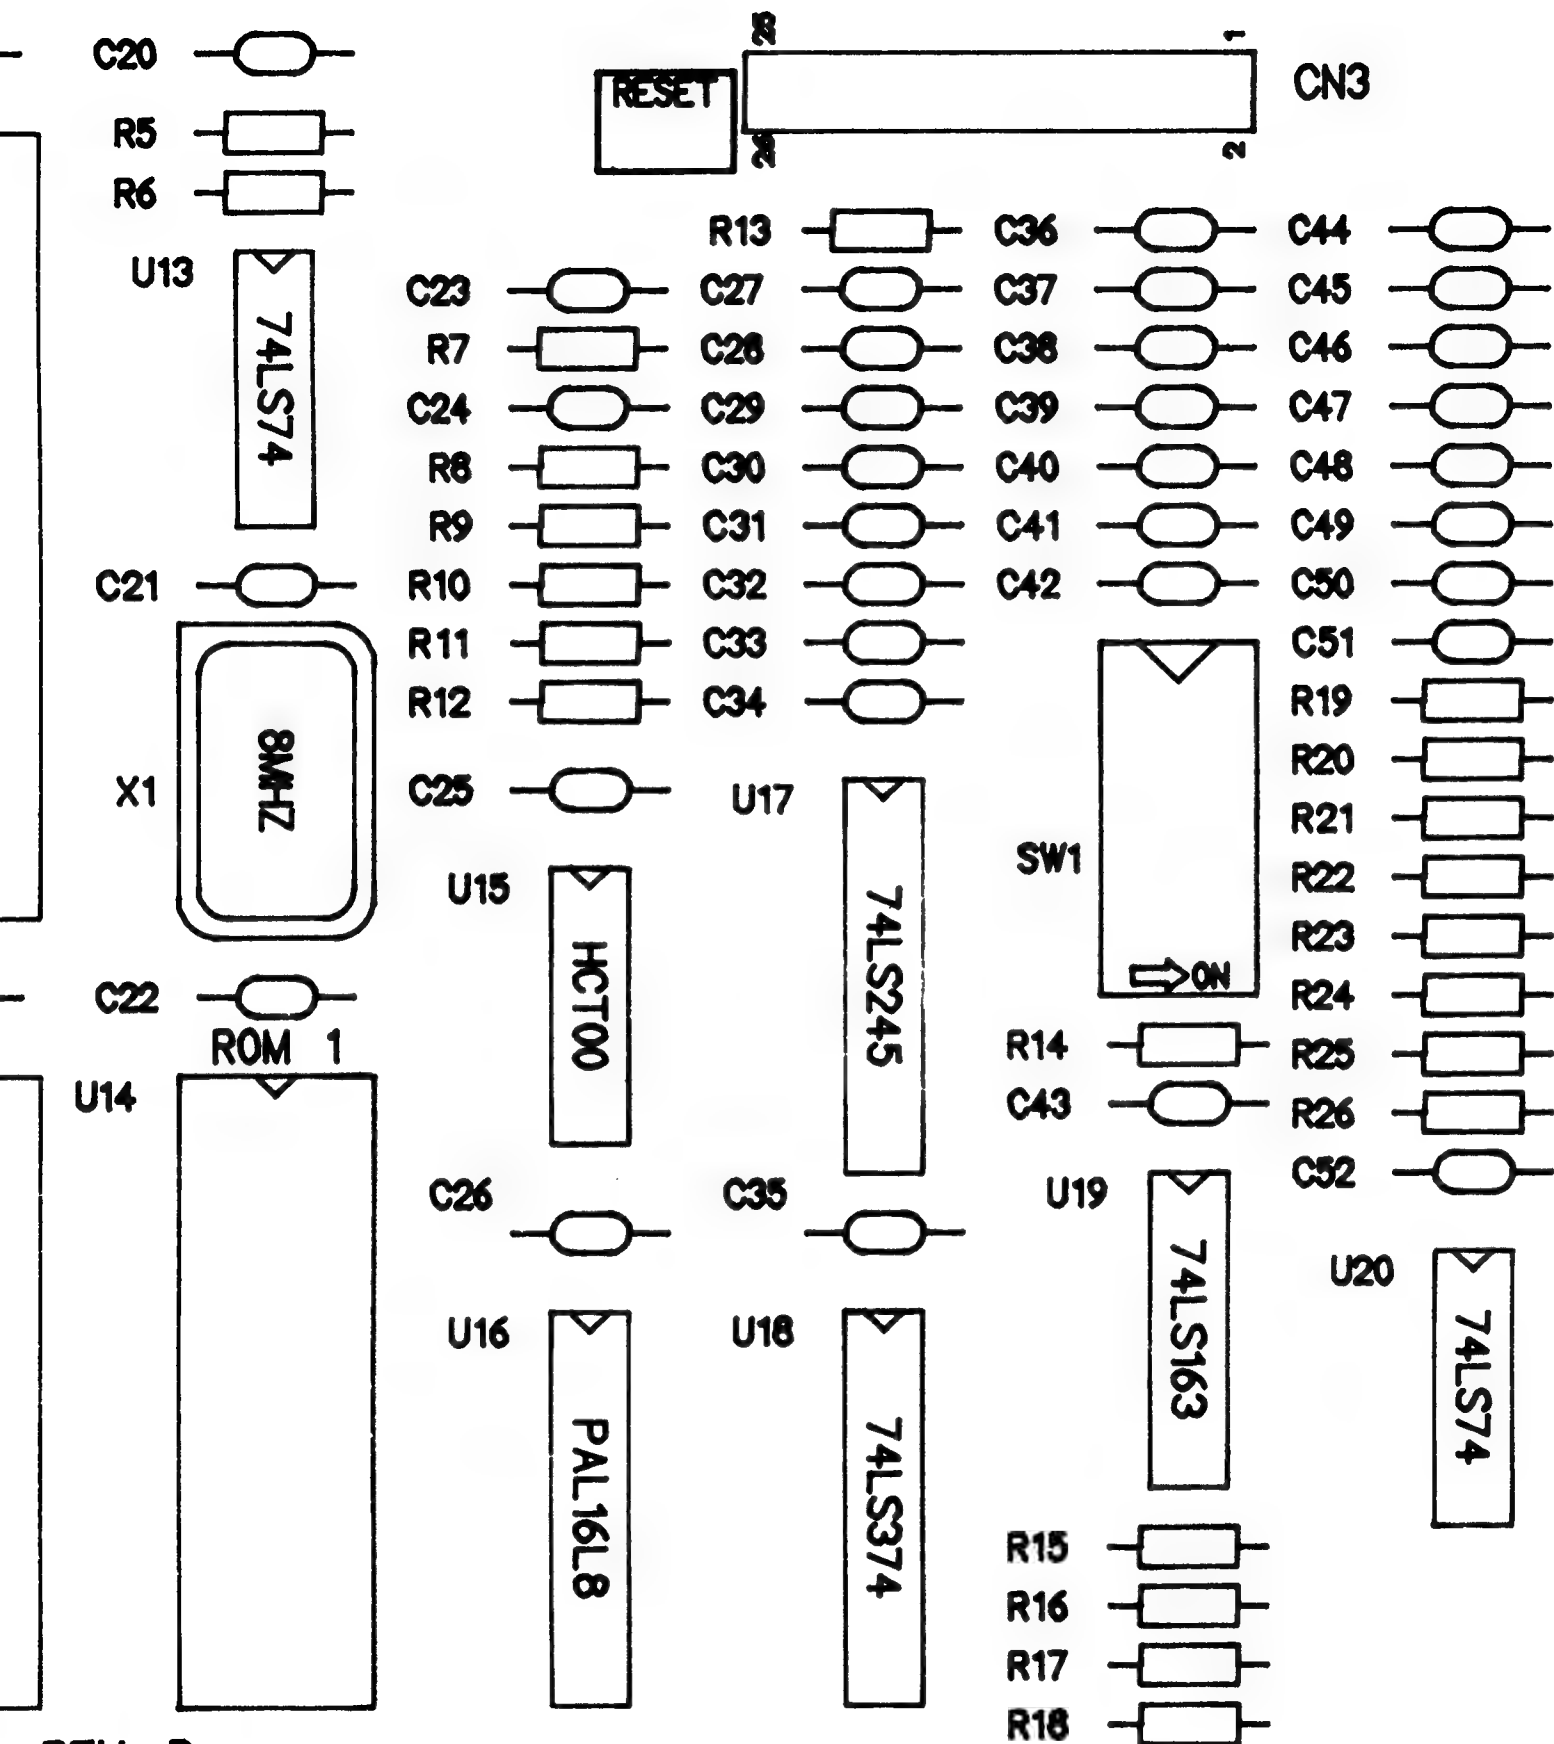

REV.-D  
520-5055-00



PART NO.	INTL CODE
281103-01	S

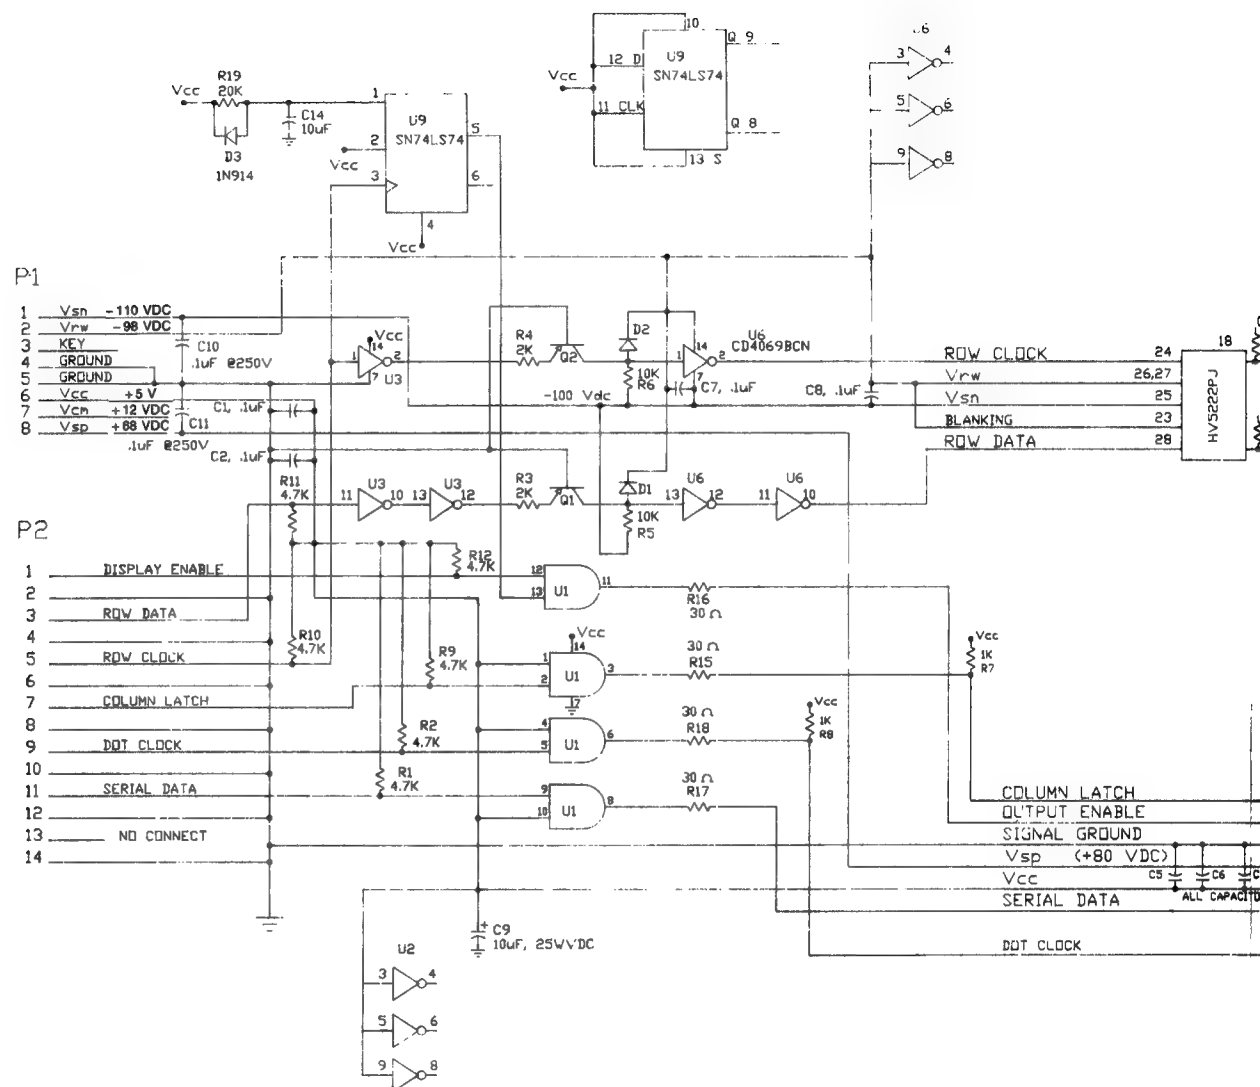

NOTES

4

FOLD

3

2

1

REVISIONS				
ZONE	SYM	DESCRIPTION	DATE	APPROVED

D

C




CATHODE CONNECTIONS

DALE PLASMA DISPLAY  
PD-128G032

ANODE CONNECTIONS


ANODE CONNECTIONS

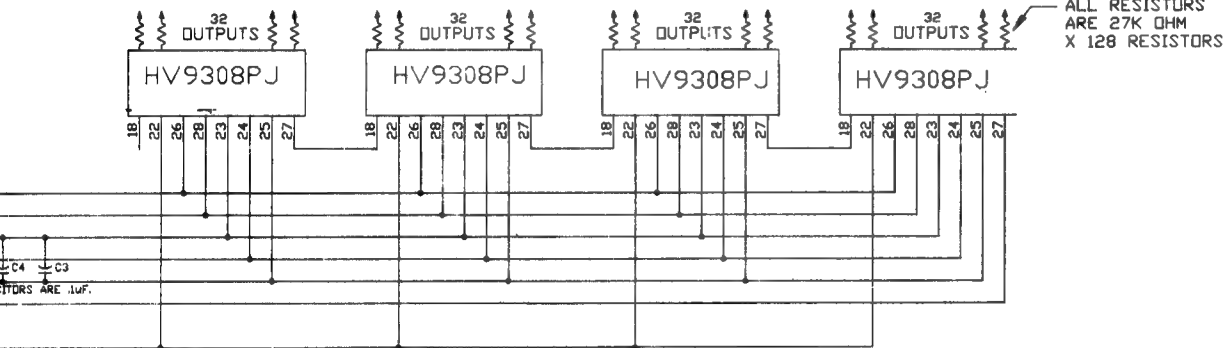
FOLD  
B

281103

CLASS 2


THESE DIMENSIONS ARE SPECIFICATIONS ARE THE PROPERTY OF DALE ELECTRONICS, INC. ARE ISSUED IN STRICT CONFIDENCE AND SHALL NOT BE REPRODUCED, COPIED, OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS WITHOUT PERMISSION.		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON FRACTIONS DECIMALS ANGLES METRIC 1/4 3/16 1/2 3/4 1 1 1/4 1 1/2 2 2 1/2 3 3 1/2 4 4 1/2 5 5 1/2 6 6 1/2 7 7 1/2 8 8 1/2 9 9 1/2 10 10 1/2 11 11 1/2 12 12 1/2 14 14 1/2 16 16 1/2 18 18 1/2 20 20 1/2 22 22 1/2 24 24 1/2 26 26 1/2 28 28 1/2 30 30 1/2 32 32 1/2 34 34 1/2 36 36 1/2 38 38 1/2 40 40 1/2 42 42 1/2 44 44 1/2 46 46 1/2 48 48 1/2 50 50 1/2 52 52 1/2 54 54 1/2 56 56 1/2 58 58 1/2 60 60 1/2 62 62 1/2 64 64 1/2 66 66 1/2 68 68 1/2 70 70 1/2 72 72 1/2 74 74 1/2 76 76 1/2 78 78 1/2 80 80 1/2 82 82 1/2 84 84 1/2 86 86 1/2 88 88 1/2 90 90 1/2 92 92 1/2 94 94 1/2 96 96 1/2 98 98 1/2 100 100 1/2 102 102 1/2 104 104 1/2 106 106 1/2 108 108 1/2 110 110 1/2 112 112 1/2 114 114 1/2 116 116 1/2 118 118 1/2 120 120 1/2 122 122 1/2 124 124 1/2 126 126 1/2 128 128 1/2 130 130 1/2 132 132 1/2 134 134 1/2 136 136 1/2 138 138 1/2 140 140 1/2 142 142 1/2 144 144 1/2 146 146 1/2 148 148 1/2 150 150 1/2 152 152 1/2 154 154 1/2 156 156 1/2 158 158 1/2 160 160 1/2 162 162 1/2 164 164 1/2 166 166 1/2 168 168 1/2 170 170 1/2 172 172 1/2 174 174 1/2 176 176 1/2 178 178 1/2 180 180 1/2 182 182 1/2 184 184 1/2 186 186 1/2 188 188 1/2 190 190 1/2 192 192 1/2 194 194 1/2 196 196 1/2 198 198 1/2 200 200 1/2 202 202 1/2 204 204 1/2 206 206 1/2 208 208 1/2 210 210 1/2 212 212 1/2 214 214 1/2 216 216 1/2 218 218 1/2 220 220 1/2 222 222 1/2 224 224 1/2 226 226 1/2 228 228 1/2 230 230 1/2 232 232 1/2 234 234 1/2 236 236 1/2 238 238 1/2 240 240 1/2 242 242 1/2 244 244 1/2 246 246 1/2 248 248 1/2 250 250 1/2 252 252 1/2 254 254 1/2 256 256 1/2 258 258 1/2 260 260 1/2 262 262 1/2 264 264 1/2 266 266 1/2 268 268 1/2 270 270 1/2 272 272 1/2 274 274 1/2 276 276 1/2 278 278 1/2 280 280 1/2 282 282 1/2 284 284 1/2 286 286 1/2 288 288 1/2 290 290 1/2 292 292 1/2 294 294 1/2 296 296 1/2 298 298 1/2 300 300 1/2 302 302 1/2 304 304 1/2 306 306 1/2 308 308 1/2 310 310 1/2 312 312 1/2 314 314 1/2 316 316 1/2 318 318 1/2 320 320 1/2 322 322 1/2 324 324 1/2 326 326 1/2 328 328 1/2 330 330 1/2 332 332 1/2 334 334 1/2 336 336 1/2 338 338 1/2 340 340 1/2 342 342 1/2 344 344 1/2 346 346 1/2 348 348 1/2 350 350 1/2 352 352 1/2 354 354 1/2 356 356 1/2 358 358 1/2 360 360 1/2 362 362 1/2 364 364 1/2 366 366 1/2 368 368 1/2 370 370 1/2 372 372 1/2 374 374 1/2 376 376 1/2 378 378 1/2 380 380 1/2 382 382 1/2 384 384 1/2 386 386 1/2 388 388 1/2 390 390 1/2 392 392 1/2 394 394 1/2 396 396 1/2 398 398 1/2 400 400 1/2 402 402 1/2 404 404 1/2 406 406 1/2 408 408 1/2 410 410 1/2 412 412 1/2 414 414 1/2 416 416 1/2 418 418 1/2 420 420 1/2 422 422 1/2 424 424 1/2 426 426 1/2 428 428 1/2 430 430 1/2 432 432 1/2 434 434 1/2 436 436 1/2 438 438 1/2 440 440 1/2 442 442 1/2 444 444 1/2 446 446 1/2 448 448 1/2 450 450 1/2 452 452 1/2 454 454 1/2 456 456 1/2 458 458 1/2 460 460 1/2 462 462 1/2 464 464 1/2 466 466 1/2 468 468 1/2 470 470 1/2 472 472 1/2 474 474 1/2 476 476 1/2 478 478 1/2 480 480 1/2 482 482 1/2 484 484 1/2 486 486 1/2 488 488 1/2 490 490 1/2 492 492 1/2 494 494 1/2 496 496 1/2 498 498 1/2 500 500 1/2 502 502 1/2 504 504 1/2 506 506 1/2 508 508 1/2 510 510 1/2 512 512 1/2 514 514 1/2 516 516 1/2 518 518 1/2 520 520 1/2 522 522 1/2 524 524 1/2 526 526 1/2 528 528 1/2 530 530 1/2 532 532 1/2 534 534 1/2 536 536 1/2 538 538 1/2 540 540 1/2 542 542 1/2 544 544 1/2 546 546 1/2 548 548 1/2 550 550 1/2 552 552 1/2 554 554 1/2 556 556 1/2 558 558 1/2 560 560 1/2 562 562 1/2 564 564 1/2 566 566 1/2 568 568 1/2 570 570 1/2 572 572 1/2 574 574 1/2 576 576 1/2 578 578 1/2 580 580 1/2 582 582 1/2 584 584 1/2 586 586 1/2 588 588 1/2 590 590 1/2 592 592 1/2 594 594 1/2 596 596 1/2 598 598 1/2 600 600 1/2 602 602 1/2 604 604 1/2 606 606 1/2 608 608 1/2 610 610 1/2 612 612 1/2 614 614 1/2 616 616 1/2 618 618 1/2 620 620 1/2 622 622 1/2 624 624 1/2 626 626 1/2 628 628 1/2 630 630 1/2 632 632 1/2 634 634 1/2 636 636 1/2 638 638 1/2 640 640 1/2 642 642 1/2 644 644 1/2 646 646 1/2 648 648 1/2 650 650 1/2 652 652 1/2 654 654 1/2 656 656 1/2 658 658 1/2 660 660 1/2 662 662 1/2 664 664 1/2 666 666 1/2 668 668 1/2 670 670 1/2 672 672 1/2 674 674 1/2 676 676 1/2 678 678 1/2 680 680 1/2 682 682 1/2 684 684 1/2 686 686 1/2 688 688 1/2 690 690 1/2 692 692 1/2 694 694 1/2 696 696 1/2 698 698 1/2 700 700 1/2 702 702 1/2 704 704 1/2 706 706 1/2 708 708 1/2 710 710 1/2 712 712 1/2 714 714 1/2 716 716 1/2 718 718 1/2 720 720 1/2 722 722 1/2 724 724 1/2 726 726 1/2 728 728 1/2 730 730 1/2 732 732 1/2 734 734 1/2 736 736 1/2 738 738 1/2 740 740 1/2 742 742 1/2 744 744 1/2 746 746 1/2 748 748 1/2 750 750 1/2 752 752 1/2 754 754 1/2 756 756 1/2 758 758 1/2 760 760 1/2 762 762 1/2 764 764 1/2 766 766 1/2 768 768 1/2 770 770 1/2 772 772 1/2 774 774 1/2 776 776 1/2 778 778 1/2 780 780 1/2 782 782 1/2 784 784 1/2 786 786 1/2 788 788 1/2 790 790 1/2 792 792 1/2 794 794 1/2 796 796 1/2 798 798 1/2 800 800 1/2 802 802 1/2 804 804 1/2 806 806 1/2 808 808 1/2 810 810 1/2 812 812 1/2 814 814 1/2 816 816 1/2 818 818 1/2 820 820 1/2 822 822 1/2 824 824 1/2 826 826 1/2 828 828 1/2 830 830 1/2 832 832 1/2 834 834 1/2 836 836 1/2 838 838 1/2 840 840 1/2 842 842 1/2 844 844 1/2 846 846 1/2 848 848 1/2 850 850 1/2 852 852 1/2 854 854 1/2 856 856 1/2 858 858 1/2 860 860 1/2 862 862 1/2 864 864 1/2 866 866 1/2 868 868 1/2 870 870 1/2 872 872 1/2 874 874 1/2 876 876 1/2 878 878 1/2 880 880 1/2 882 882 1/2 884 884 1/2 886 886 1/2 888 888 1/2 890 890 1/2 892 892 1/2 894 894 1/2 896 896 1/2 898 898 1/2 900 900 1/2 902 902 1/2 904 904 1/2 906 906 1/2 908 908 1/2 910 910 1/2 912 912 1/2 914 914 1/2 916 916 1/2 918 918 1/2 920 920 1/2 922 922 1/2 924 924 1/2 926 926 1/2 928 928 1/2 930 930 1/2 932 932 1/2 934 934 1/2 936 936 1/2 938 938 1/2 940 940 1/2 942 942 1/2 944 944 1/2 946 946 1/2 948 948 1/2 950 950 1/2 952 952 1/2 954 954 1/2 956 956 1/2 958 958 1/2 960 960 1/2 962 962 1/2 964 964 1/2 966 966 1/2 968 968 1/2 970 970 1/2 972 972 1/2 974 974 1/2 976 976 1/2 978 978 1/2 980 980 1/2 982 982 1/2 984 984 1/2 986 986 1/2 988 988 1/2 990 990 1/2 992 992 1/2 994 994 1/2 996 996 1/2 998 998 1/2 1000 1000 1/2 1002 1002 1/2 1004 1004 1/2 1006 1006 1/2 1008 1008 1/2 1010 1010 1/2 1012 1012 1/2 1014 1014 1/2 1016 1016 1/2 1018 1018 1/2 1020 1020 1/2 1022 1022 1/2 1024 1024 1/2 1026 1026 1/2 1028 1028 1/2 1030 1030 1/2 1032 1032 1/2 1034 1034 1/2 1036 1036 1/2 1038 1038 1/2 1040 1040 1/2 1042 1042 1/2 1044 1044 1/2 1046 1046 1/2 1048 1048 1/2 1050 1050 1/2 1052 1052 1/2 1054 1054 1/2 1056 1056 1/2 1058 1058 1/2 1060 1060 1/2 1062 1062 1/2 1064 1064 1/2 1066 1066 1/2 1068 1068 1/2 1070 1070 1/2 1072 1072 1/2 1074 1074 1/2 1076 1076 1/2 1078 1078 1/2 1080 1080 1/2 1082 1082 1/2 1084 1084 1/2 1086 1086 1/2 1088 1088 1/2 1090 1090 1/2 1092 1092 1/2 1094 1094 1/2 1096 1096 1/2 1098 1098 1/2 1100 1100 1/2 1102 1102 1/2 1104 1104 1/2 1106 1106 1/2 1108 1108 1/2 1110 1110 1/2 1112 1112 1/2 1114 1114 1/2 1116 1116 1/2 1118 1118 1/2 1120 1120 1/2 1122 1122 1/2 1124 1124 1/2 1126 1126 1/2 1128 1128 1/2 1130 1130 1/2 1132 1132 1/2 1134 1134 1/2 1136 1136 1/2 1138 1138 1/2 1140 1140 1/2 1142 1142 1/2 1144 1144 1/2 1146 1146 1/2 1148 1148 1/2 1150 1150 1/2 1152 1152 1/2 1154 1154 1/2 1156 1156 1/2 1158 1158 1/2 1160 1160 1/2 1162 1162 1/2 1164 1164 1/2 1166 1166 1/2 1168 1168 1/2 1170 1170 1/2 1172 1172 1/2 1174 1174 1/2 1176 1176 1/2 1178 1178 1/2 1180 1180 1/2 1182 1182 1/2 1184 1184 1/2 1186 1186 1/2 1188 1188 1/2 1190 1190 1/2 1192 1192 1/2 1194 1194 1/2 1196 1196 1/2 1198 1198 1/2 1200 1200 1/2 1202 1202 1/2 1204 1204 1/2 1206 1206 1/2 1208 1208 1/2 1210 1210 1/2 1212 1212 1/2 1214 1214 1/2 1216 1216 1/2 1218 1218 1/2 1220 1220 1/2 1222 1222 1/2 1224 1224 1/2 1226 1226 1/2 1228 1228 1/2 1230 1230 1/2 1232 1232 1/2 1234 1234 1/2 1236 1236 1/2 1238 1238 1/2 1240 1240 1/2 1242 1242 1/2 1244 1244 1/2 1246 1246 1/2 1248 1248 1/2 1250 1250 1/2 1252 1252 1/2 1254 1254 1/2 1256 1256 1/2 1258 1258 1/2 1260 1260 1/2 1262 1262 1/2 1264 1264 1/2 1266 1266 1/2 1268 1268 1/2 1270 1270 1/2 1272 1272 1/2 1274 1274 1/2 1276 1276 1/2 1278 1278 1/2 1280 1280 1/2 1282 1282 1/2 1284 1284 1/2 1286 1286 1/2 1288 1288 1/2 1290 1290 1/2 1292 1292 1/2 1294 1294 1/2 1296 1296 1/2 1298 1298 1/2 1300 1300 1/2 1302 1302 1/2 1304 1304 1/2 1306 1306 1/2 1308 1308 1/2 1310 1310 1/2 1312 1312 1/2 1314 1314 1/2 1316 1316 1/2 1318 1318 1/2 1320 1320 1/2 1322 1322 1/2 1324 1324 1/2 1326 1326 1/2 1328 1328 1/2 1330 1330 1/2 1332 1332 1/2 1334 1334 1/2 1336 1336 1/2 1338 1338 1/2 1340 1340 1/2 1342 1342 1/2 1344 1344 1/2 1346 1346 1/2 1348 1348 1/2 1350 1350 1/2 1352 1352 1/2 1354 1354 1/2 1356 1356 1/2 1358 1358 1/2 1360 1360 1/2 1362 1362 1/2 1364 1364 1/2 1366 1366 1/2 1368 1368 1/2 1370 1370 1/2 1372 1372 1/2 1374 1374 1/2 1376 1376 1/2 1378 1378 1/2 1380 1380 1/2 1382 1382 1/2 1384 1384 1/2 1386 1386 1/2 1388 1388 1/2 1390 1390 1/2 1392 1392 1/2 1394 1394 1/2 1396 1396 1/2 1398 1398 1/2 1400 1400 1/2 1402 1402 1/2 1404 1404 1/2 1406 1406 1/2 1408 1408 1/2 1410 1410 1/2 1412 1412 1/2 1414 1414 1/2 1416 1416 1/2 1418 1418 1/2 1420 1420 1/2 1422 1422 1/2 1424 1424 1/2 1426 1426 1/2 1428 1428 1/2 1430 1430 1/2 1432 1432 1/2 1434 1434 1/2 1436 1436 1/2 1438 1438 1/2 1440 1440 1/2 1442 1442 1/2 1444 1444 1/2 1446 1446 1/2 1448 1448 1/2 1450 1450 1/2 1452 1452 1/2 1454 1454 1/2 1456 1456 1/2 1458 1458 1/2 1460 1460 1/2 1462 1462 1/2 1464 1464 1/2 1466 1466 1/2 1468 1468 1/2 1470 1470 1/2 1472 1472 1/2 1474 1474 1/2 1476 1476 1/2 1478 1478 1/2 1480 1480 1/2 1482 1482 1/2 1484 1484 1/2 1486 1486 1/2 1488 1488 1/2 1490 1490 1/2 1492 1492 1/2 1494 1494 1/2 1496 1496 1/2 1498 1498 1/2 1500 1500 1/2 1502 1502 1/2 1504 1504 1/2 1506 1506 1/2 1508 1508 1/2 1510 1510 1/2 1512 1512 1/2 1514 1514 1/2 1516 1516 1/2 1518 1518 1/2 1520 1520 1/2 1522 1522 1/2 1524 1524 1/2 1526 1526 1/2 1528 1528 1/2 1530 1530 1/2 1532 1532 1/2 1534 1534 1/2 1536 1536 1/2 1538 1538 1/2 1540 1540 1/2 1542 1542 1/2 1544 1544 1/2 1546 1546 1/2 1548 1548 1/2 1550 1550 1/2 1552 1552 1/2 1554 1554 1/2 1556 1556 1/2 1558 1558 1/2 1560 1560 1/2 1562 1562 1/2 1564 1564 1/2 1566 1566 1/2 1568 1568 1/2 1570 1570 1/2 1572 1572 1/2 1574 1574 1/2 1576 1576 1/2 1578 1578 1/2 1580 1580 1/2 1582 1582 1/2 1584 1584 1/2 1586 1586 1/2 1588 1588 1/2 1590 1590 1/2 1592 1592 1/2 1594 1594 1/2 1596 1596 1/2 1598 1598 1/2 1600 1600 1/2 1602 1602 1/2 1604 1604 1/2 1606 1606 1/2 1608 1608 1/2 1610 1610 1/2 1612 1612 1/2 1614 1614 1/2 1616 1616 1/2 1618 1618 1/2 1620 1620 1/2 1622 1622 1/2 1624 1624 1/2 1626 1626 1/2 1628 1628 1/2 1630 1630 1/2 1632 1632 1/2 1634 1634 1/2 1636 1636 1/2 1638 1638 1/2 1640 1640 1/2 1642 1642 1/2 1644 1644 1/2 1646 1646 1/2 1648 1648 1/2 1650 1650 1/2 1652 1652 1/2 1654 1654 1/2 1656 1656 1/2 1658 1658 1/2 1660 1660 1/2 1662 1662 1/2 1664 1664 1/2 1666 1666 1/2 1668 1668 1/2 1670 1670 1/2 1672 1672 1/2 1674 1674 1/2 1676 1676 1/2 1678 1678 1/2 1680 1680 1/2 1682 1682 1/2 1684 1684 1/2 1686 1686 1/2 1688 1688 1/2 1690 1690 1/2 1692 1692 1/2 1694 1694 1/2 1696 1696 1/2 1698 1698 1/2 1700 1700 1/2 1702 1702 1/2 1704 1704 1/2 1706 1706 1/2 1708 1708 1/2 1710 1710 1/2 1712 1712 1/2 1714 1714 1/2 1716 1716 1/2 1718 1718 1/2 1720 1720 1/2 1722 1722 1/2 1724 1724 1/2 1726 1726 1/2 1728 1728 1/2 1730 1730 1/2 1732 1732 1/2 1734 1734 1/2 1736 1736 1/2 1738 1738 1/2 1740 1740 1/2 1742 1742 1/2 1744 1744 1/2 1746 1746 1/2 1748 1748 1/2 1750 1750 1/2 1752 1752 1/2 1754 1754 1/2 1756 1756 1/2 1758 1758 1/2 1760 1760 1/2 1762 1762 1/2 1764 1764 1/2 1766 1766 1/2 1768 1768 1/2 1770 1770 1/2 1772 1772 1/2 1774 1774 1/2 1776 1776 1/2 1778 1778 1/2 1780 1780 1/2 1782 1782 1/2 1784 1784 1/2 1786
---	--	---

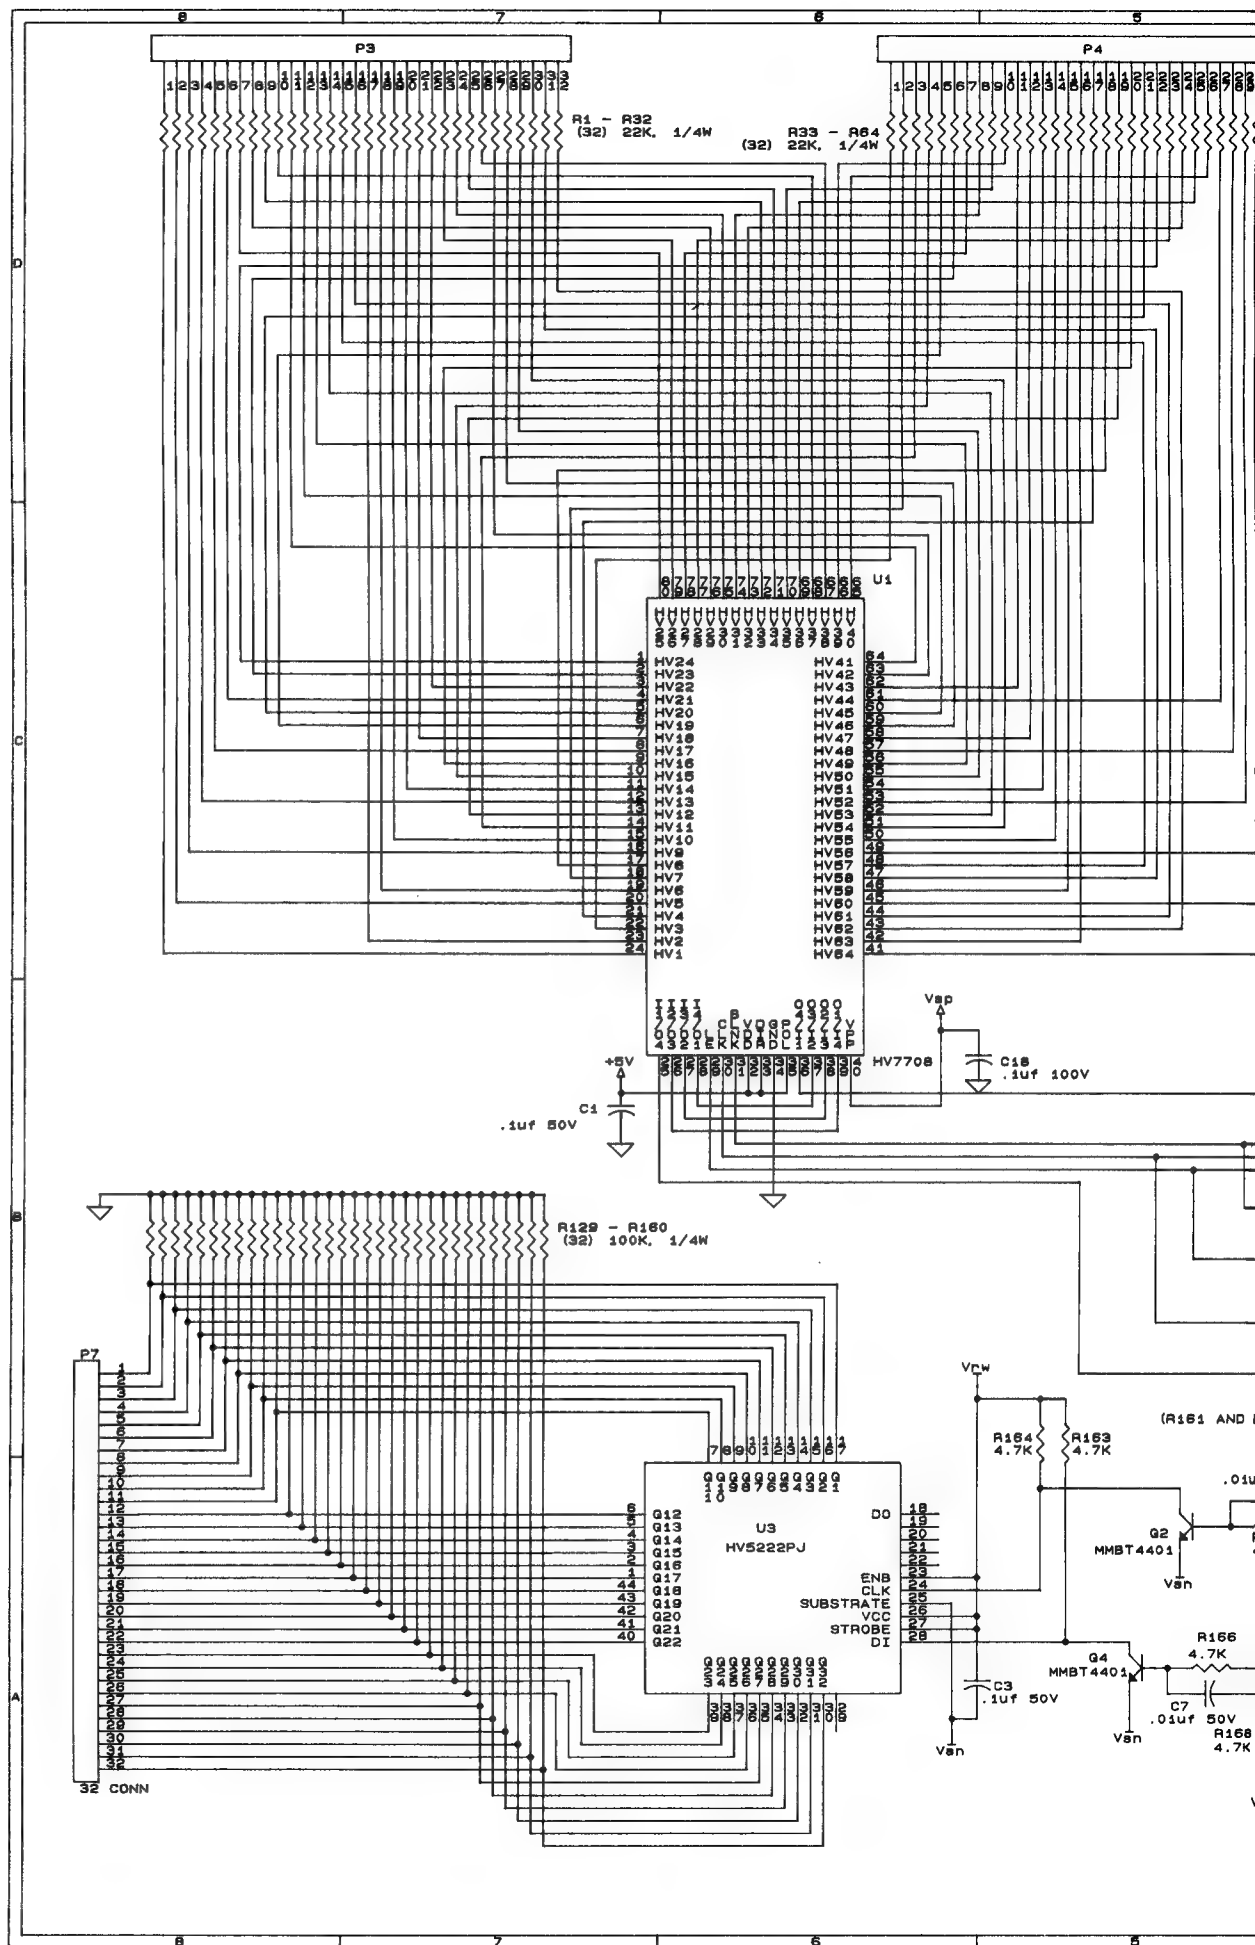

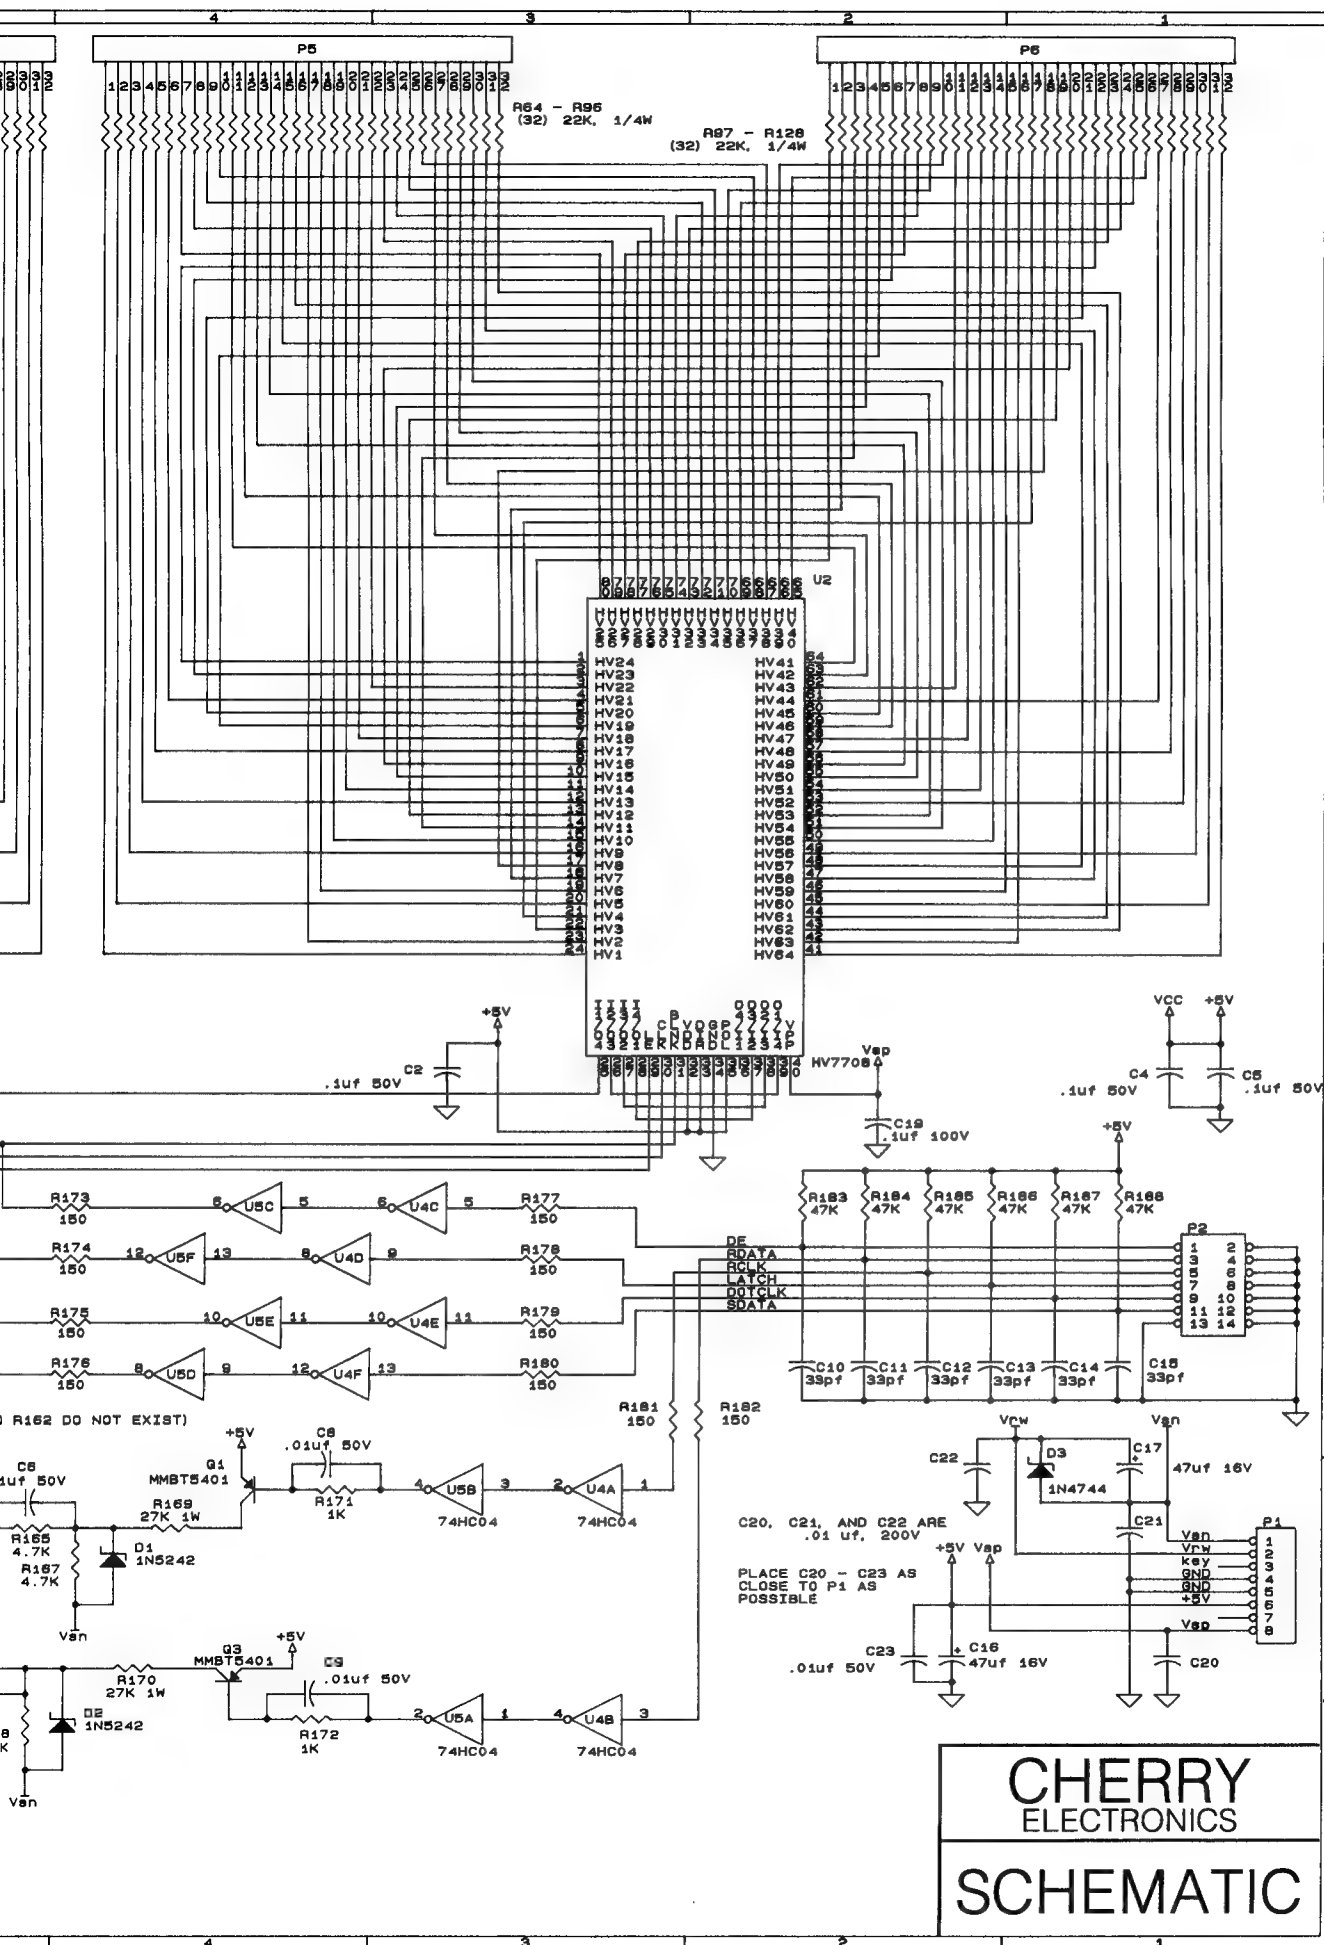

# DISPLAY GP-03

P2  
INPUT

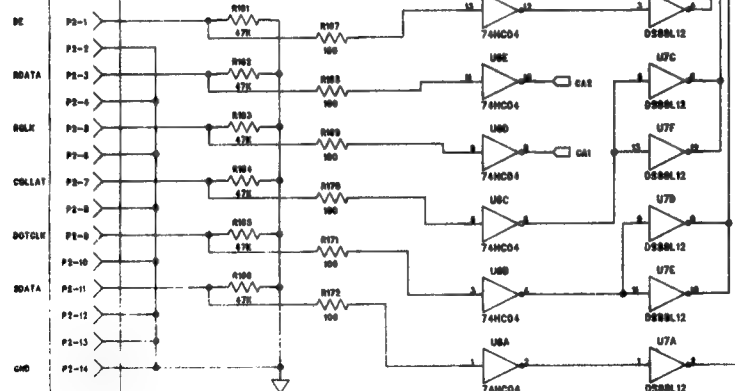

2. RESISTOR VALUES ARE IN OHMS, 1/8 WATT, 5%.
  1. CAPACITOR VOLTAGES ARE 50V, 20%.
- NOTES: UNLESS OTHERWISE SPECIFIED.

COL[0n32]

COL[0n32]

COL[0n32]

COL[0n32]

COL[0n32]

COL[0n32]

COL[0n32]

COL[0n32]

COL[0n32]

COL[0n32]

COL[0n32]

COL[0n32]

COL[0n32]

COL[0n32]

COL[0n32]


COL[0n32]


COL[0n32]


BYPASS CAPS LOCATED NEAR IC'S


REF	DES	QND
U1 - U4		23
U5		7
U6		7
U7		7
U8		7

GND	VCC	VRW	VSN	VCM	VSR
23				25	24
		24	23		
7	14				
7				14	
		8	5		

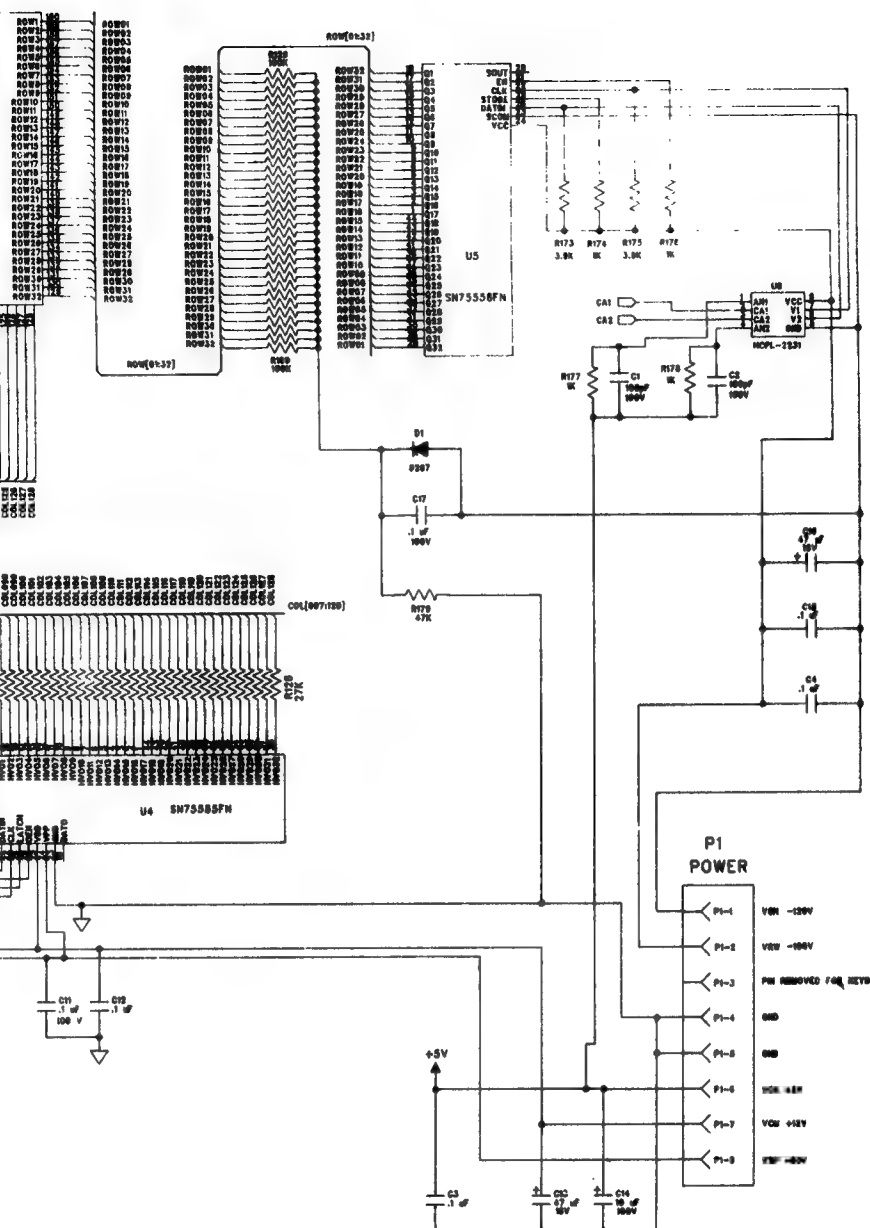



PADS LOGIC VER. 2.03 FILE: DM32129.SCH		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES - SEE 2.005 X1.250 ANGLES 2		CONTR NO.		 1081 S. EAST STREET ANAHEIM, CALIFORNIA 92806	
		MAIL <input type="checkbox"/> PHONE <input type="checkbox"/>		DRAWN BY <b>RAY DEESE</b>		DATE 10-16-91	
				CHECK BY		DATE	
				APPR BY		DATE	
				DO NOT SCALE PRINT		SCHEMATIC	
6D-0820428-01		THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF BARCOCK AND IS THEREFORE SUBJECT TO THE CONDITIONS THAT THE INFORMATION (A) IS BEING loaned IN CONFIDENCE, (B) NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART AND (C) NOT BE USED OR INCORPORATED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF BARCOCK.				CODE IDENT: 1510-0106	
NEXT ASSY USED ON						REV A	
APPLICATION						SCALE SIZE D SHEET 1 OF 1	




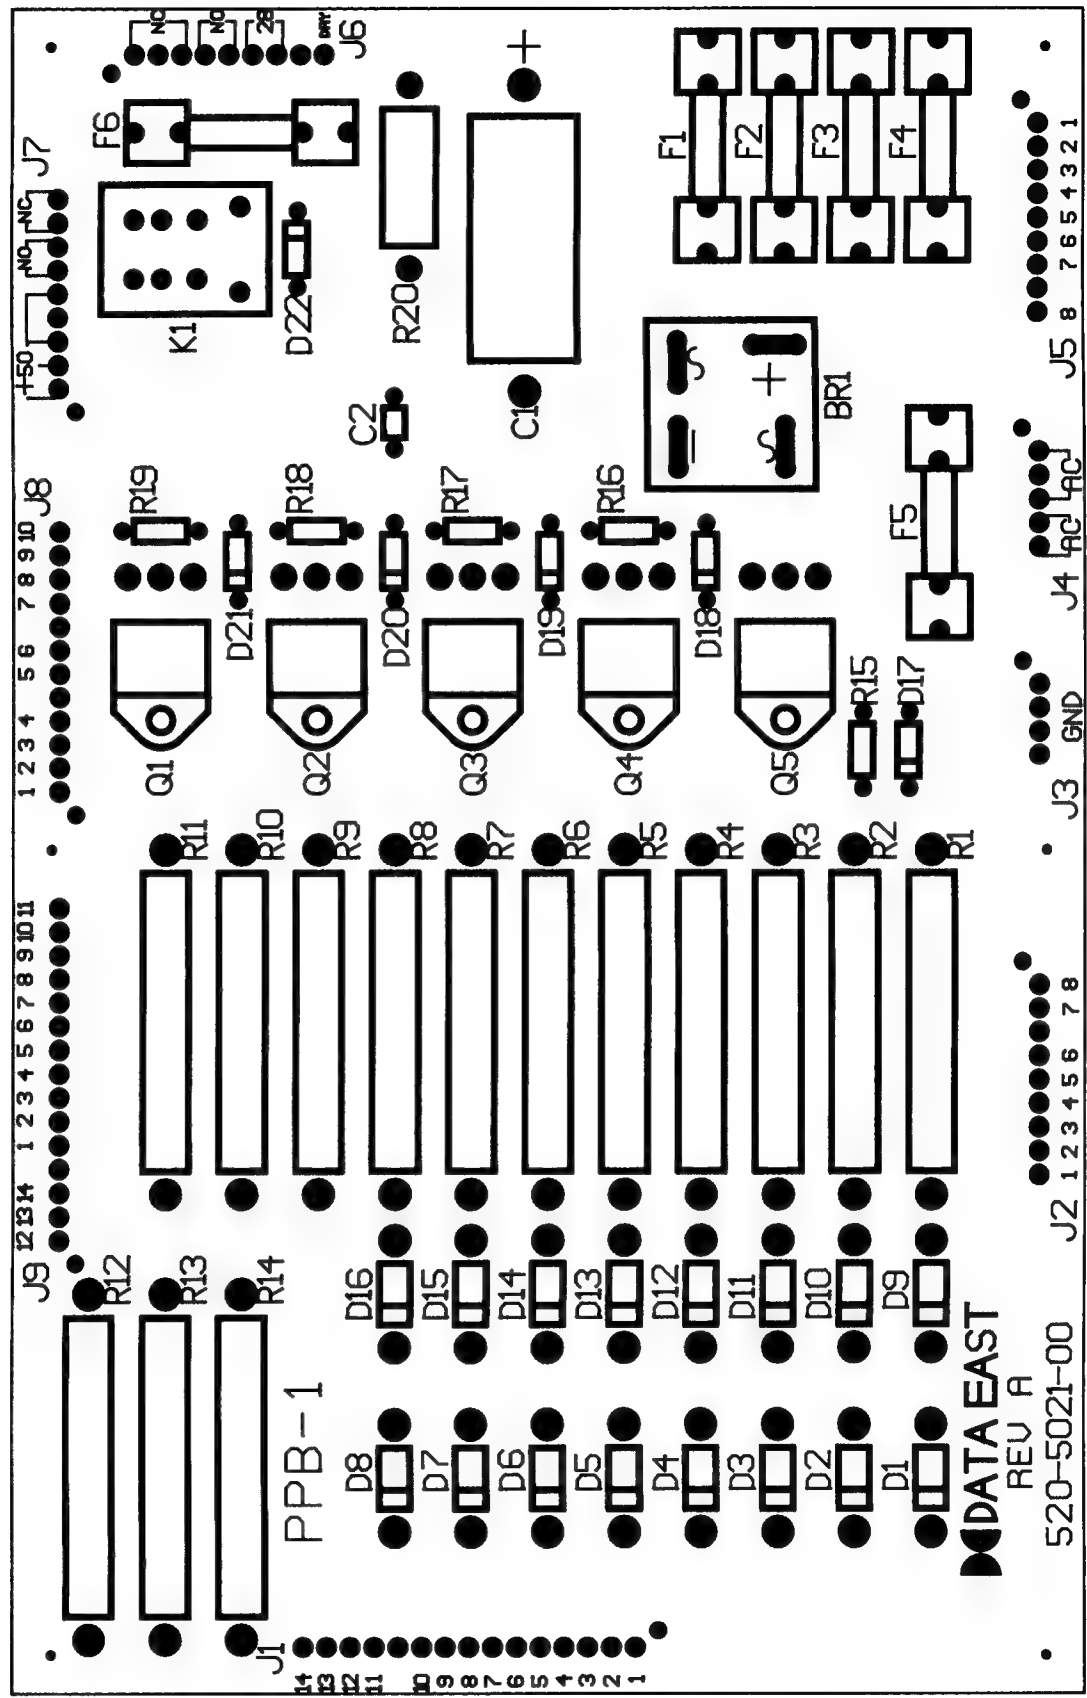


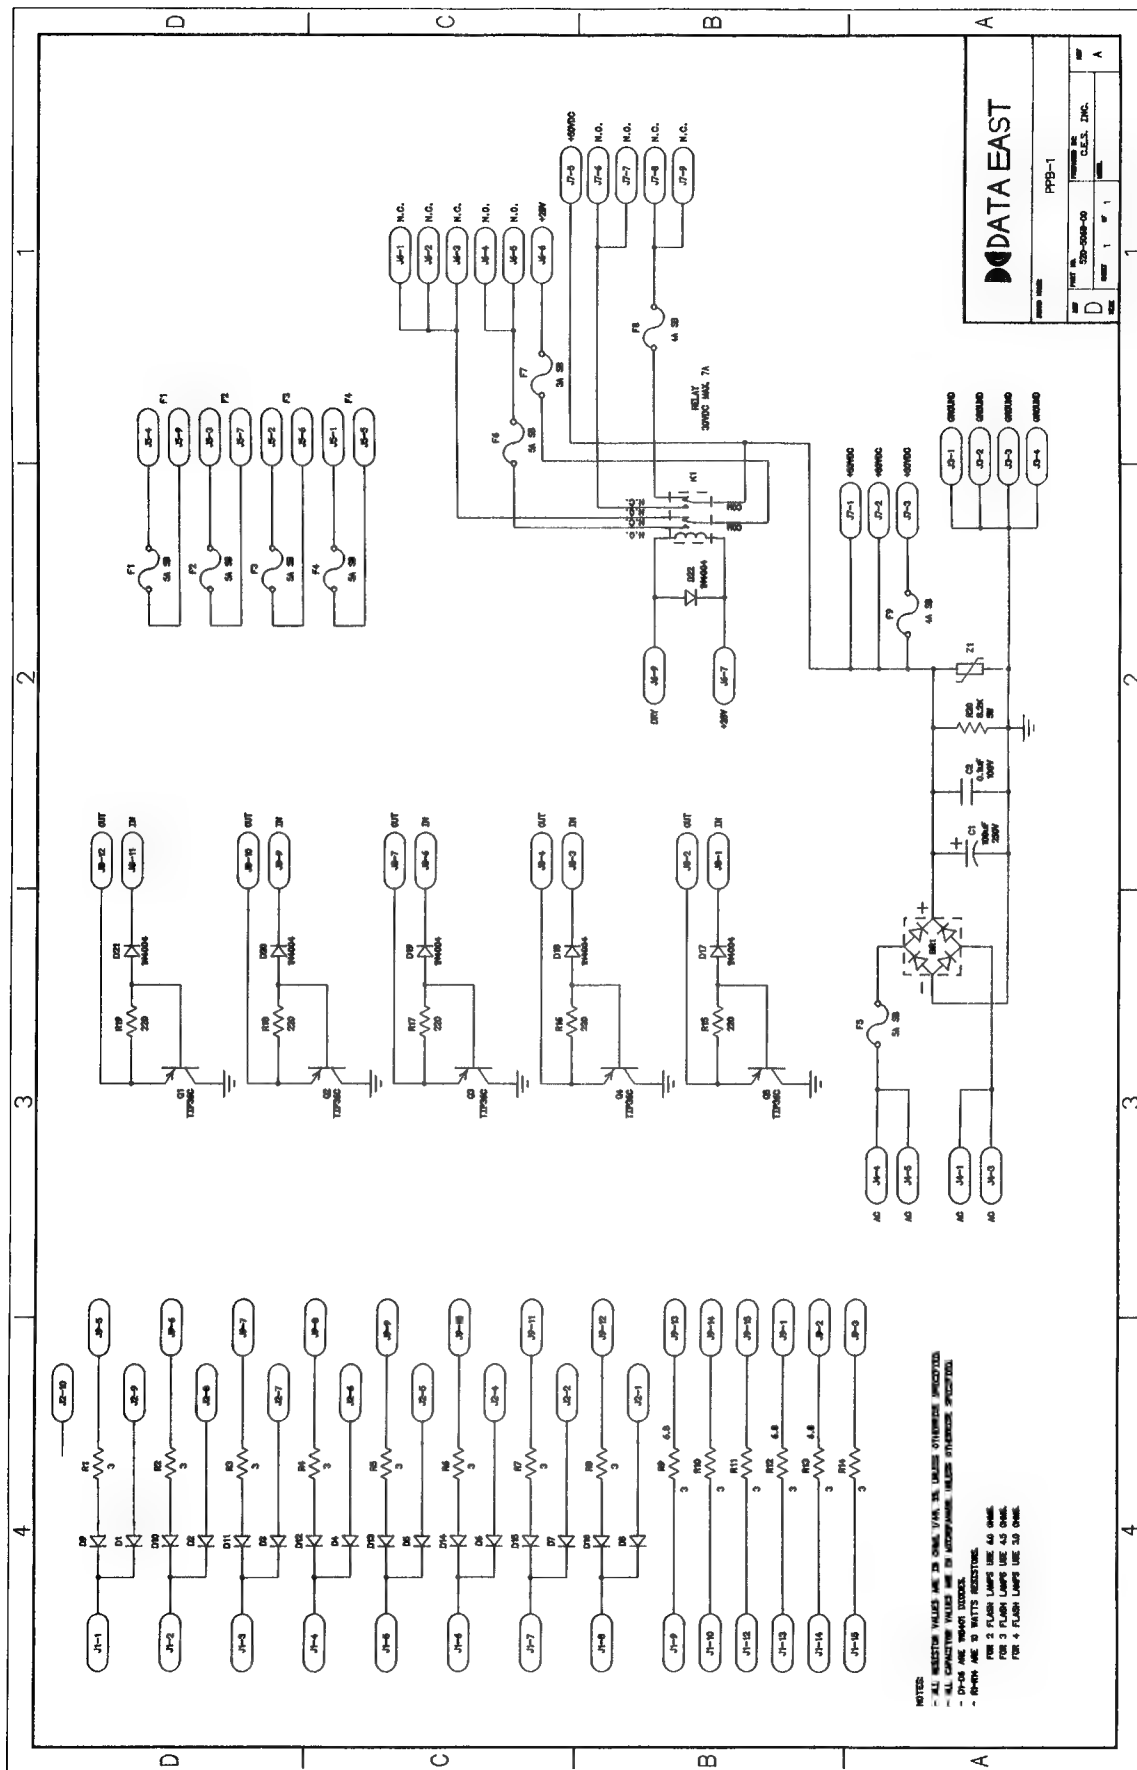



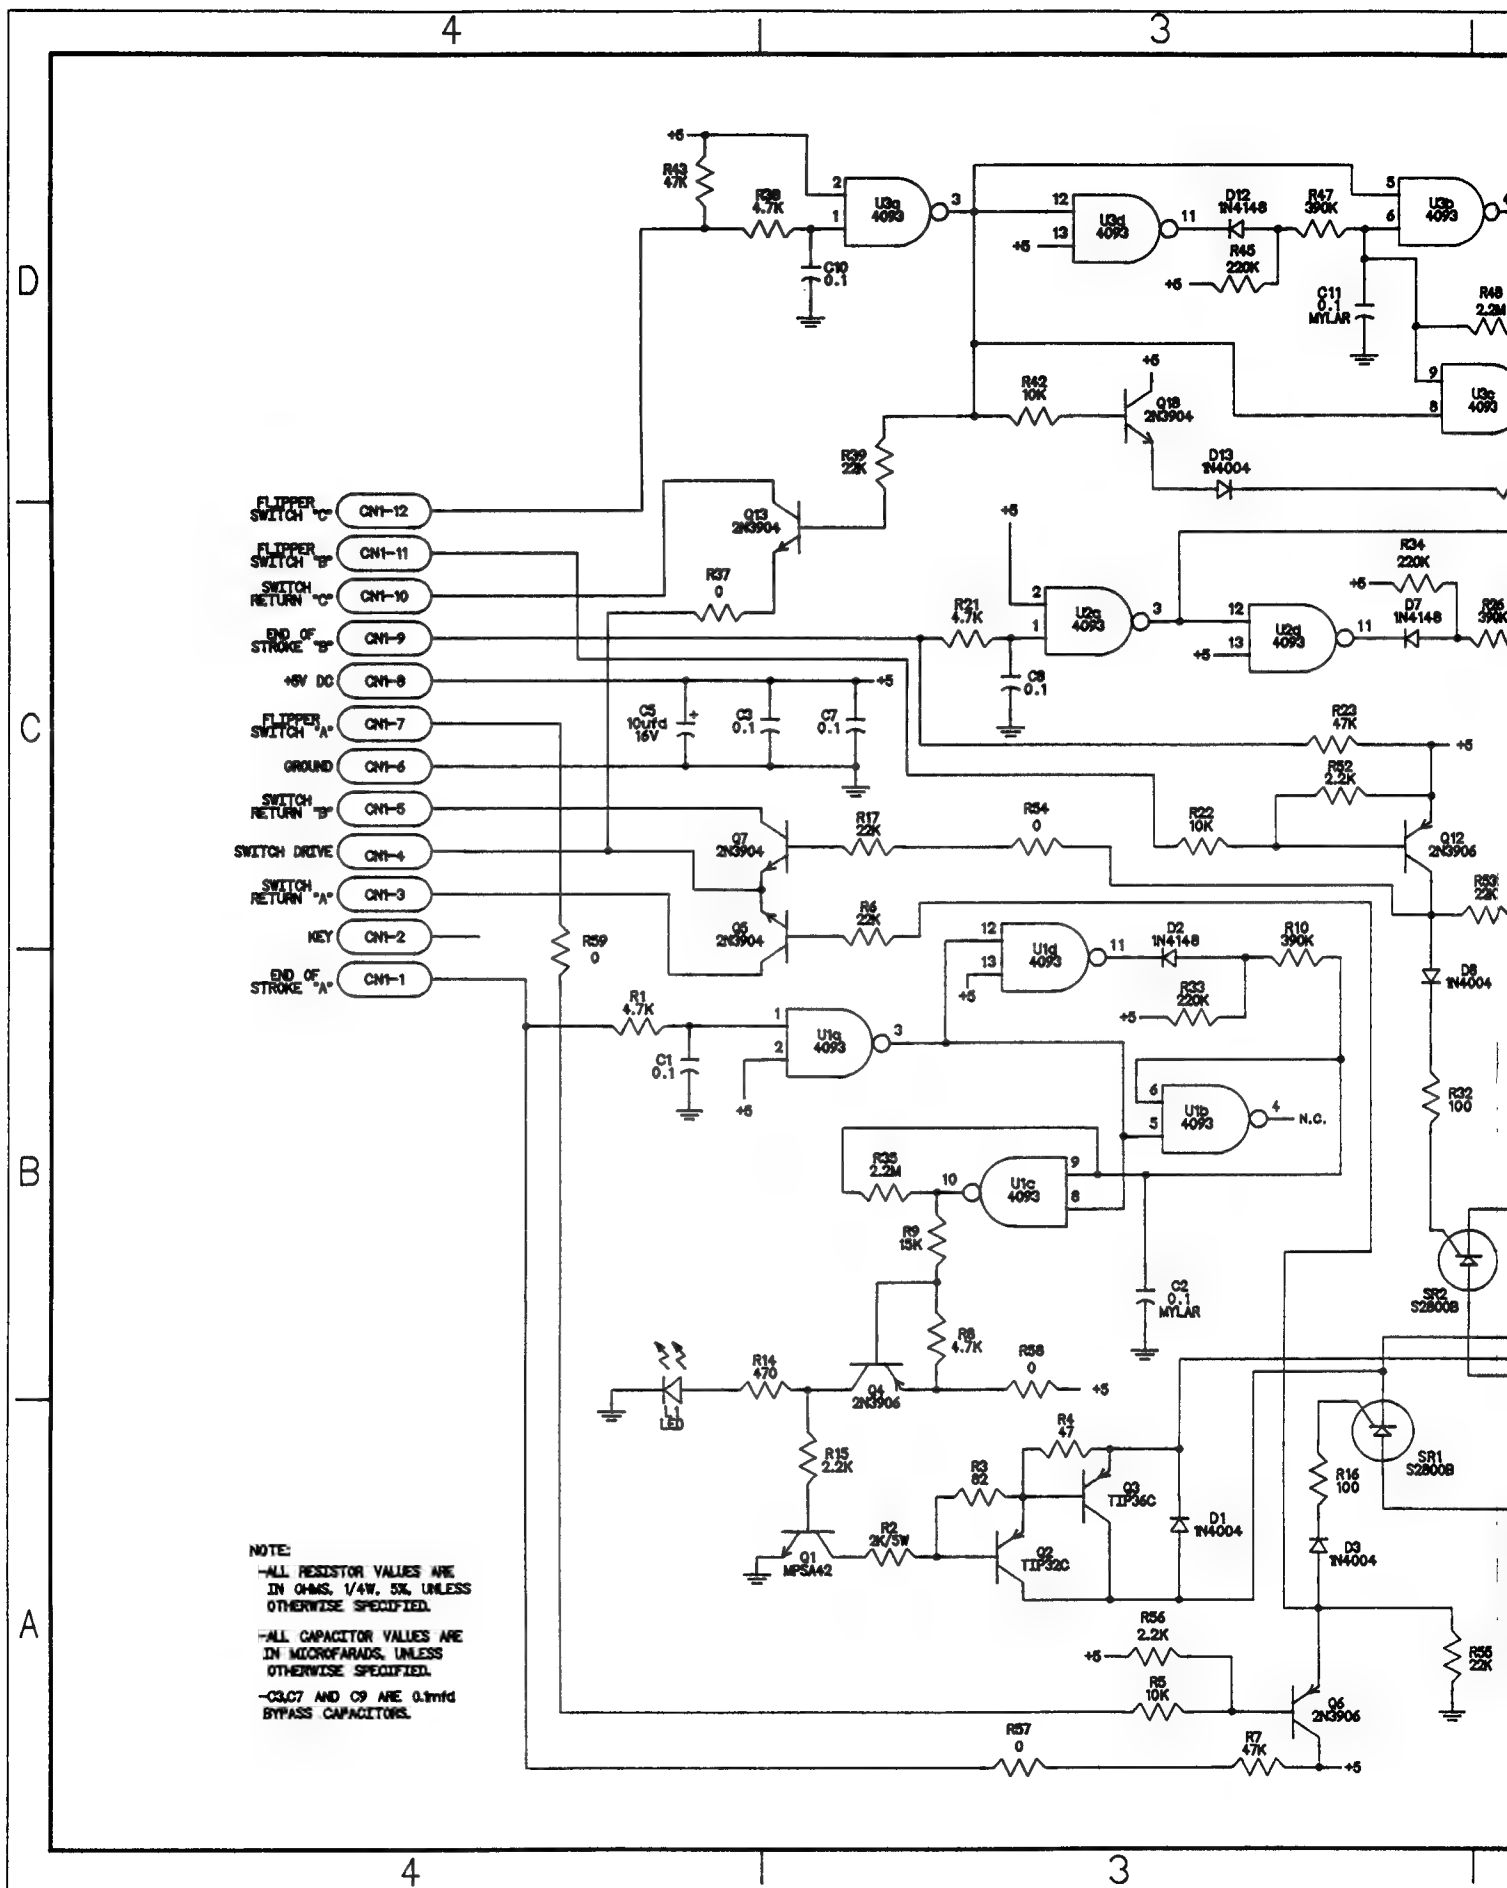

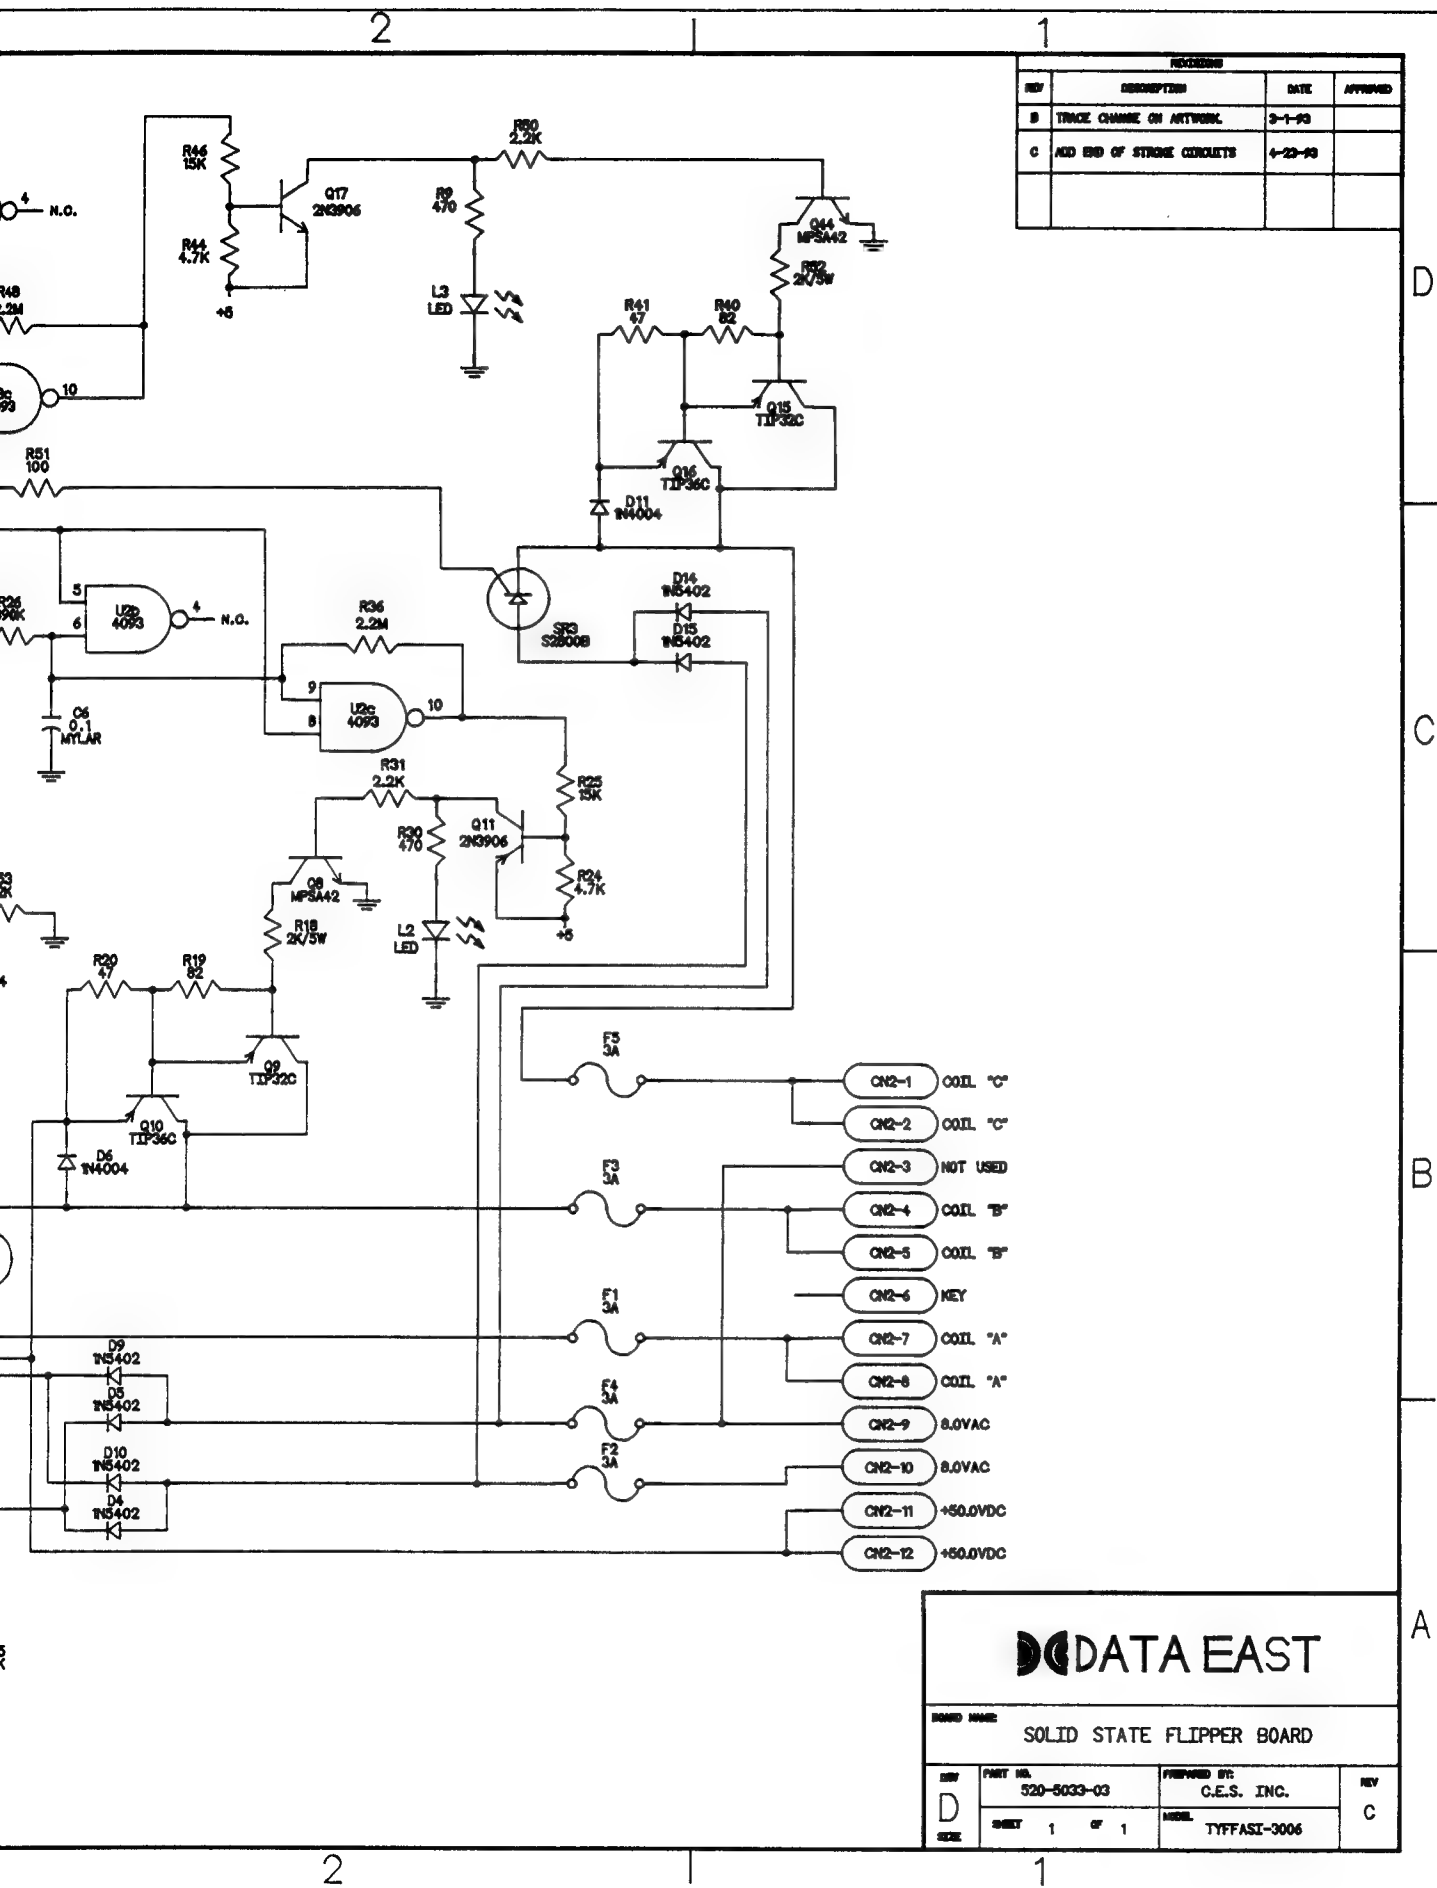

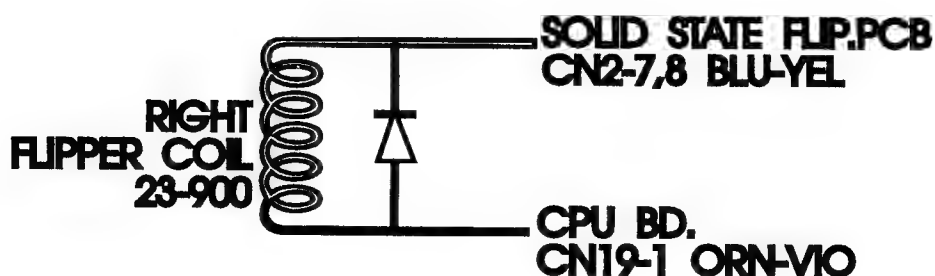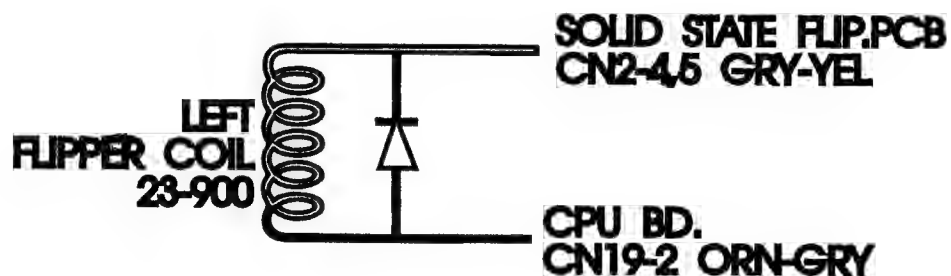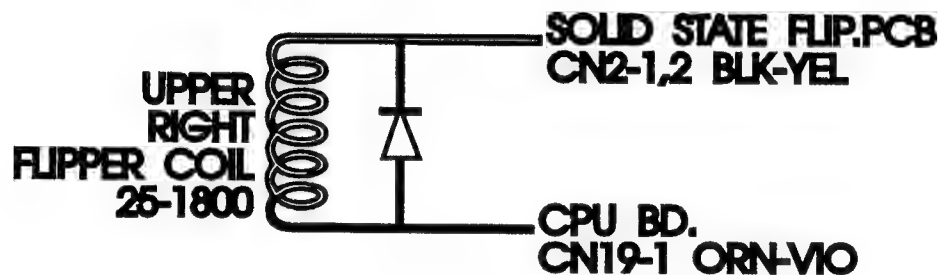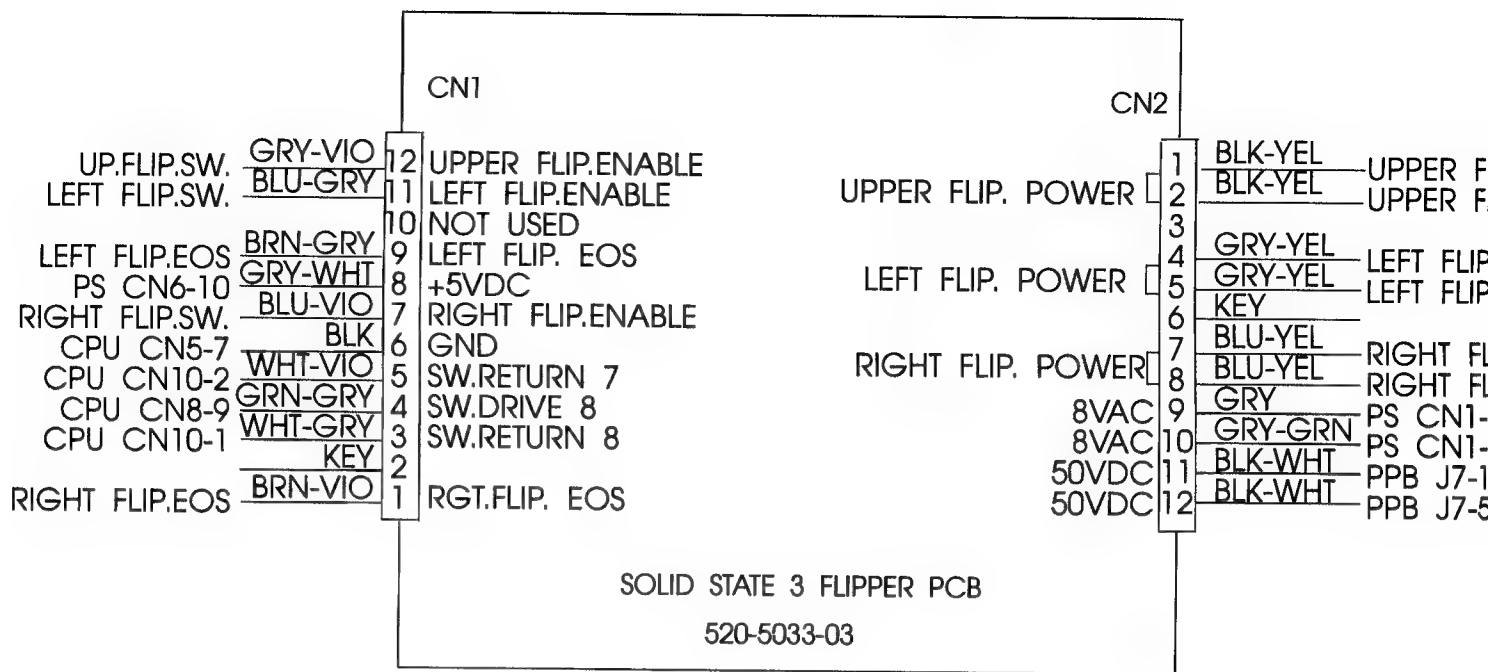


# Solid State Flippers PCB Wiring Diagram

## Connector CN 1

	Pin#	Goes to	Wire Color	It is
	----	-----	-----	-----
FLIP.COIL	1	Rgt. Flipper EOS	BRN-GRY	Rgt. Flip End of Stroke
FLIP.COIL	2			Key
IP.COIL	3	CPU CN 10-1	WHT-GRY	Sw. Ret 8
IP.COIL	4	CPU CN 8-9	GRN-GRY	Sw. Drive 8
FLIP.COIL	5	CPU CN 10-2	WHT-VIO	Sw. Ret 7
FLIP.COIL	6	Rgt. Flipper Sw.	BLU-VIO	Rgt.Flip.Enable
1-11	7	CPU CN 5-9	BLK	Gnd
1-10	8	PS CN 6-10	GRY-WHT	+5VDC
1	9	Left Flipper EOS	BRN-GRY	Left Flip. End of Stroke
5	10			
	11	Lft.Flipper Sw.	BLU-GRY	Lft. Flip Enable
	12	Upper Rgt.FlpSw.	GRY-VIO	Upper Rgt. Flip Enable

## Connector CN 2

Pin #	Goes To	Wire Color	It Is
-----	-----	-----	-----
1	Upper Rgt Flip Coil	BLK-YEL	Upper Rgt Flip. Power
2	Upper Rgt Flip Coil	BLK-YEL	Upper Rgt Flip. Power
3			Not Used
4	Lft. Flip Coil	GRY-YEL	Lft Flip Power
5	Lft. Flip Coil	GRY-YEL	Lft Flip Power
6			Key
7	Rgt Flip Coil	BLU-YEL	Rght. Flip Power
8	Rgt Flip Coil	BLU-YEL	Rght. Flip Power
9	PS CN 1-11	GRY	9VAC
10	PS CN 1-10	GRY-GRN	9VAC
11	PPB J7-1	BLK-WHT	50VDC
12	PPB J7-5	BLK-WHT	50VDC

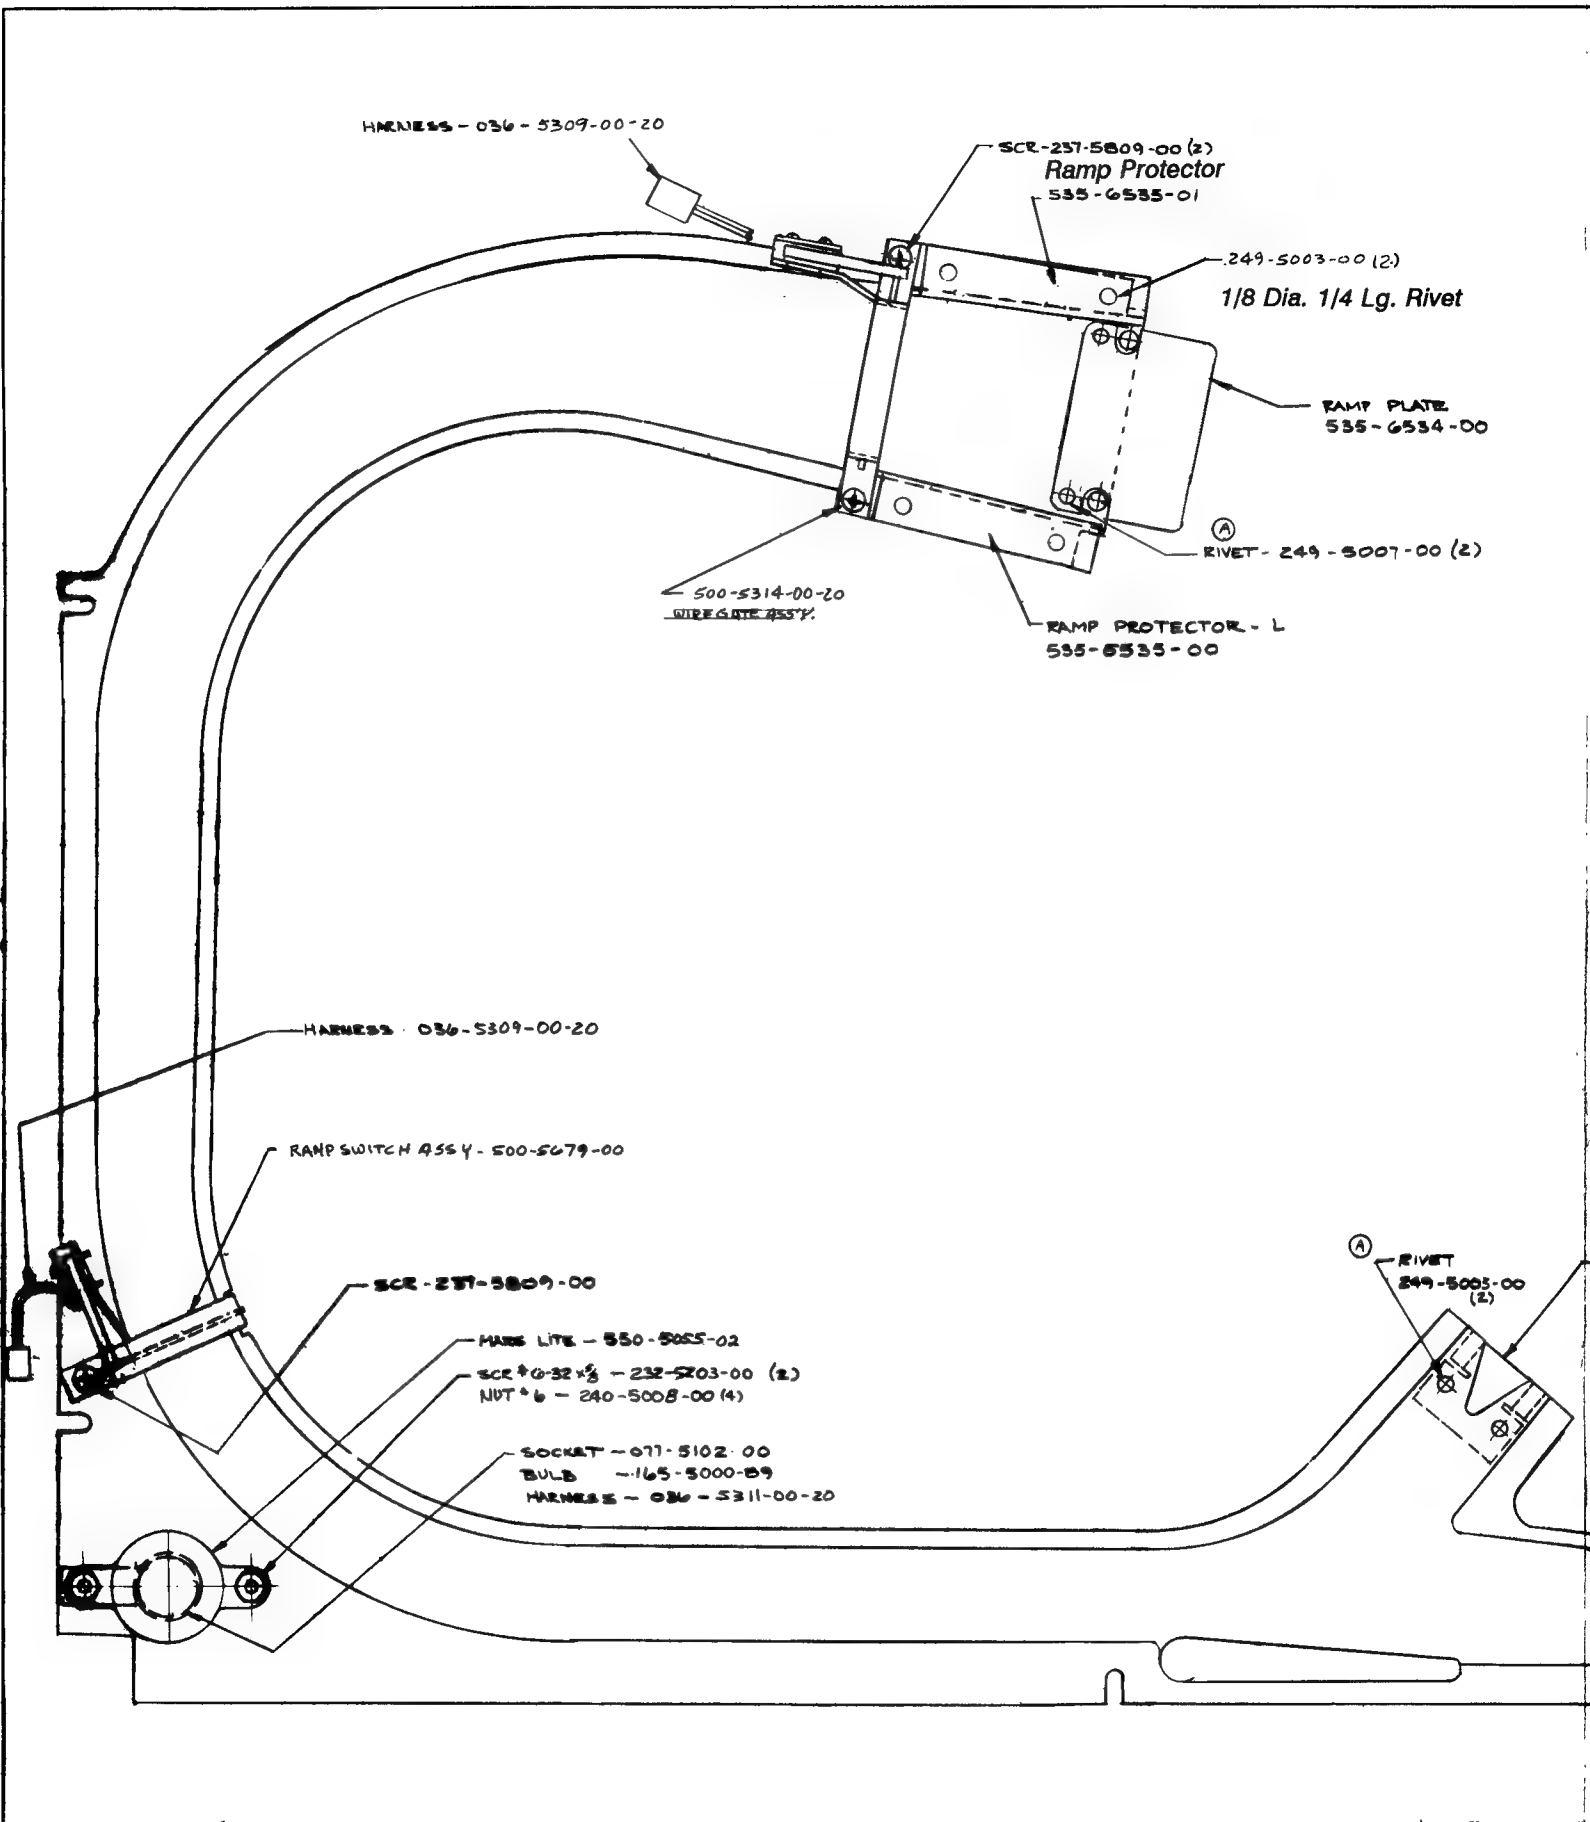

REV	DESCRIPTION	DATE	BY
A	249-5003-00 WAS 249-5001-00 249-5007-00 WAS 249-5001-00 550-5055-02 WAS 550-5055-01	3-29-93	ED.C.

RAMP BRKT  
555-6533-00

PLASTIC RAMP  
545-5155-00

END BRKT-RAMP  
535-6537-00

RIVET  
249-5003-00 (2)



TOLERANCE UNLESS  
OTHERWISE SPECIFIED


DIM. X.X ± .05 X.XXX ± .005  
X.XX ± .015 X.XXXX ±

ANGULAR  
IN. ± .01  
DEG. ± 1°

REQ. 1.	PART NAME	QTY. 1	DATE 2-9-93	TITLE
REV.		QTY.	SCALE 1:1	RAMP ASSY JUR. PARK
ALT.				PART NO.
PR.				500-5669-00

DATA EAST PINBALL, INC.  
1880 JANICE AVE., MELROSE PARK, IL. 60180

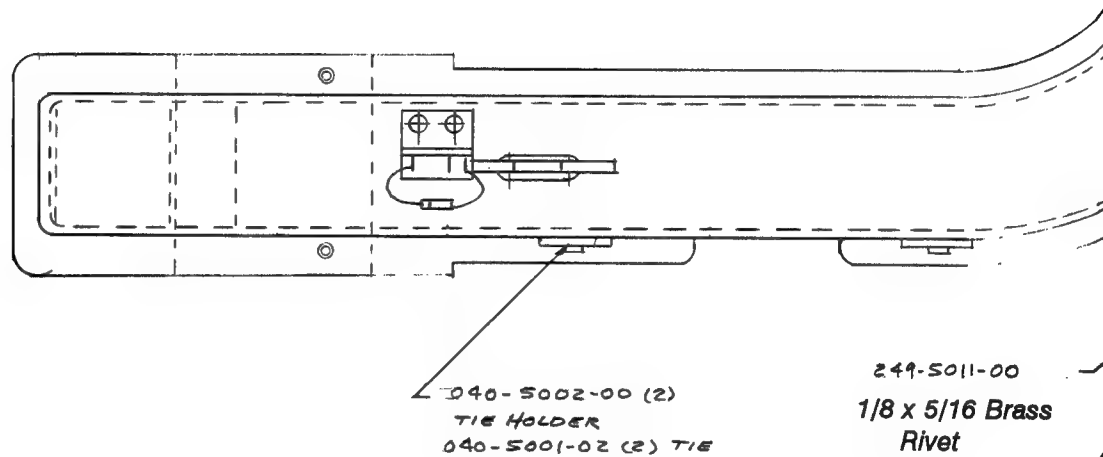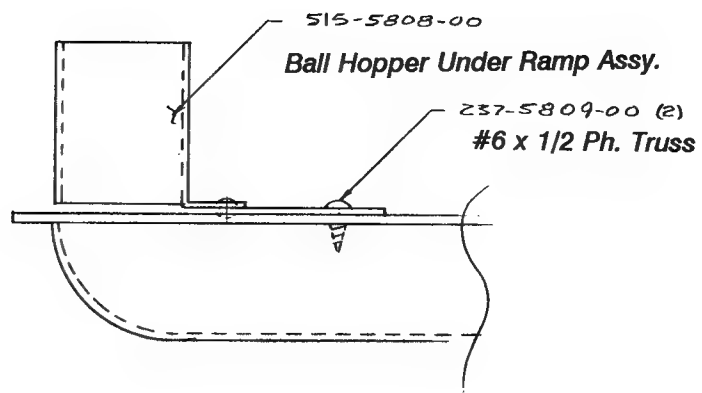


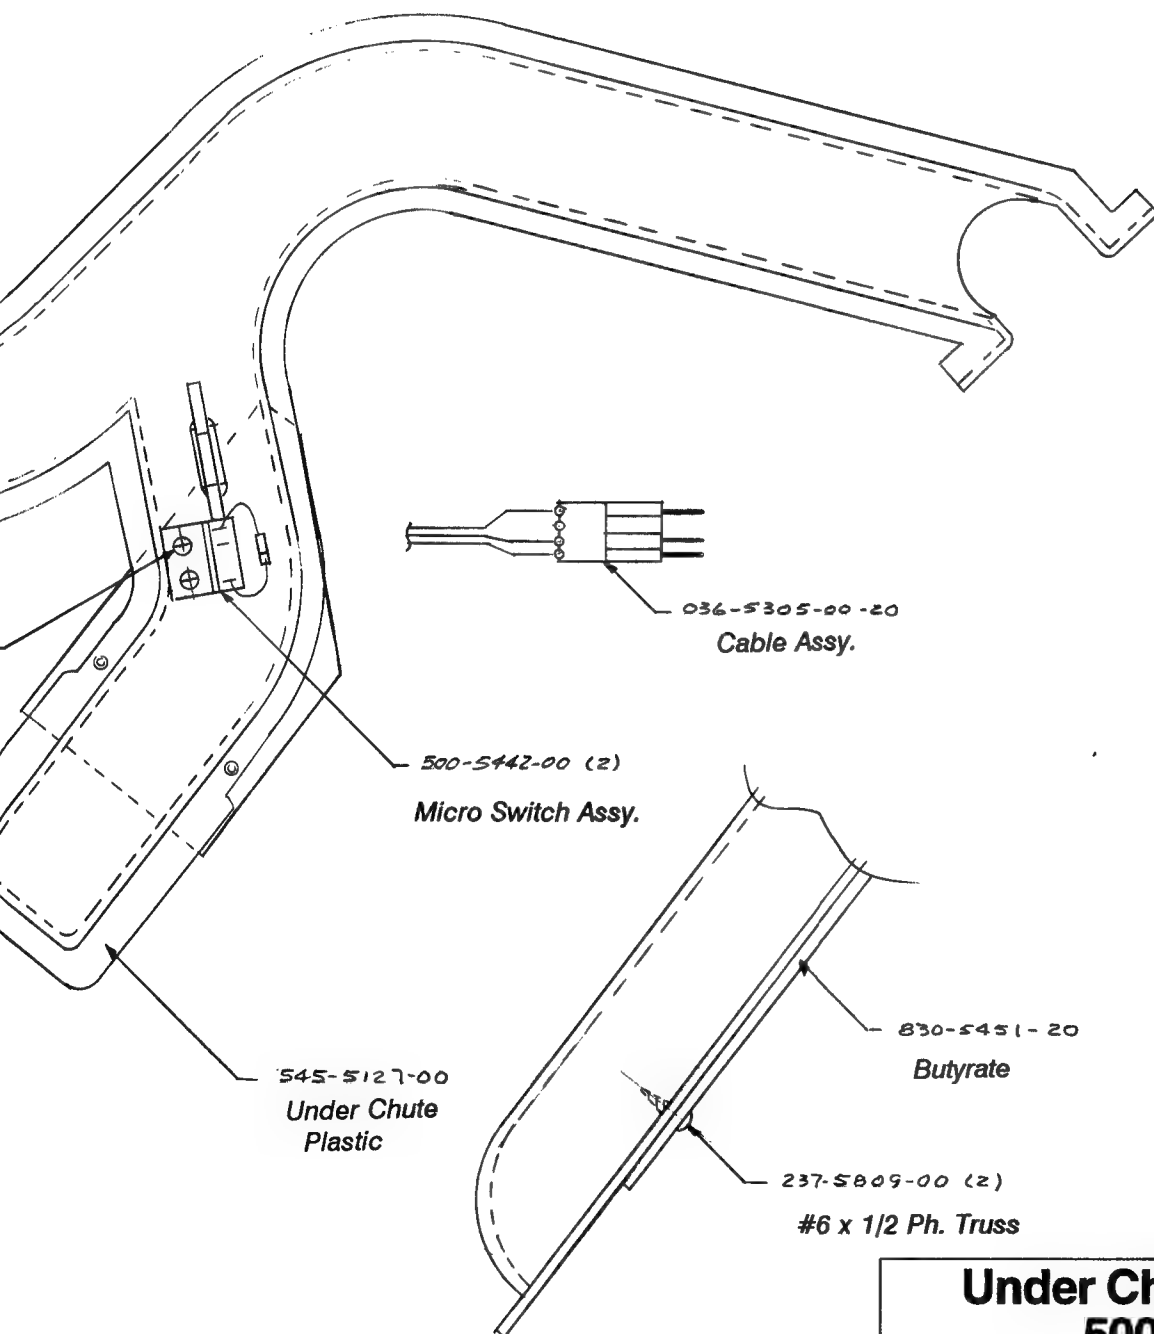

## Under Chute Assembly 500-5668-00





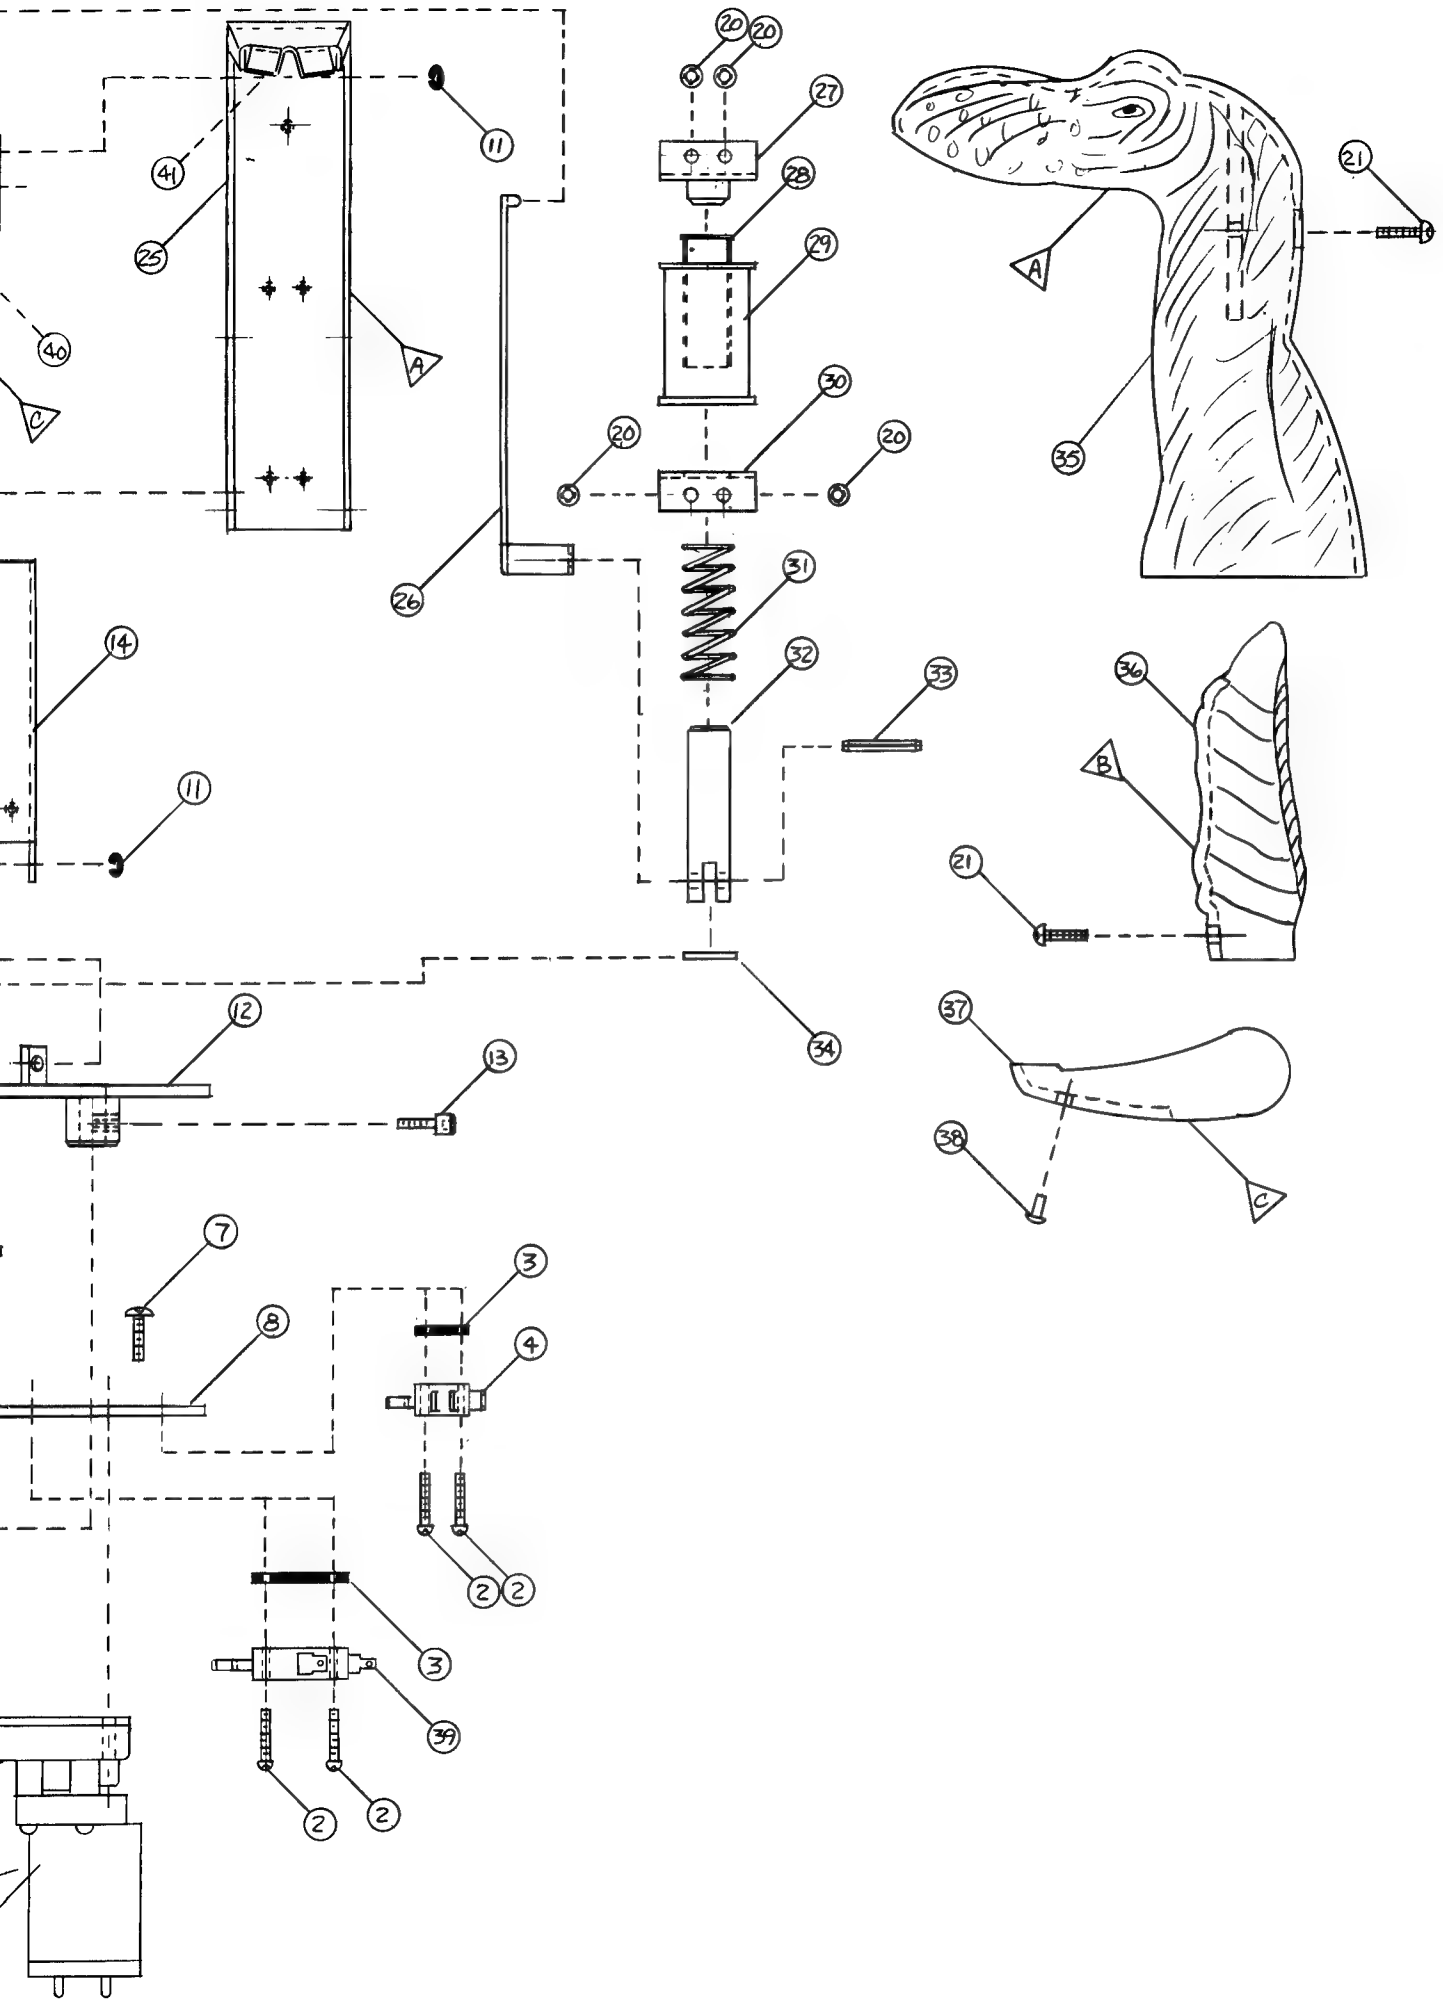

ITEM	PART NO.	DESCRIPTION	QTY
17	515-5817-00	LOCK BALL BRKT ASSY	1
18	515-5815-00	LOCK BALL CAM ASSY	1
19	530-5250-00	PLUNGER, Ø7/16 X 2 1/4 LG	1
20	535-6649-00	LINK, LOCK BALL	1
21	266-5036-00	SPRING	1
22	545-5400-00	SPACER	1
23	090-5034-00	COIL, 25-1240	1
24	515-5088-00	CORE STOP ASSY	1
25	535-6658-00	COIL RETAINING BRKT	1
26	545-5031-00	COIL SLEEVE	1
27	242-5022-00	WASHER, BRASS	2
28	270-5002-00	E-RING, .25 SHAFT	2
29	237-5898-00	#6-32 HWH TC X .38 LG	4
30	237-5606-00	#8-32 PPH X 1" LG	1
31	036-5301-01	WIRING HARNESS	1

31

535-6606-00  
DEFLECTOR

1


10 11

5


14

6 BAL

16	266-5020-00	SPRING	1
15	535-5203-01	COIL RETAINING BRKT	1
14	036-5301-00	WIRE HARNESS	1
13	232-5300-00	#8-32 PPHW/SEM X .25 LG	8
12	237-5832-00	#4-40 PPH X .62 LG	2
11	244-5001-00	#2 SPLIT LW	12
10	237-5806-00	#2-56 PPH X .5 LG	12
9	090-5001-00	COIL, 23-800	1
8	545-5105-00	RUBBER BUMPER	1
7	545-5076-00	COIL SLEEVE	1
6	515-5000-02	PLUNGER ASSY	1
5	180-5119-00	SWITCH, SUBMINIATURE	12
4	180-5118-00	SWITCH, MINIATURE	1
3	535-6623-00	SWITCH MTG BRKT	1
2	535-6622-00	COIL MTG BRKT	1
1	535-6621-00	OUTHOLE MTG BRKT	1
ITEM	PART NO.	DESCRIPTION	QTY

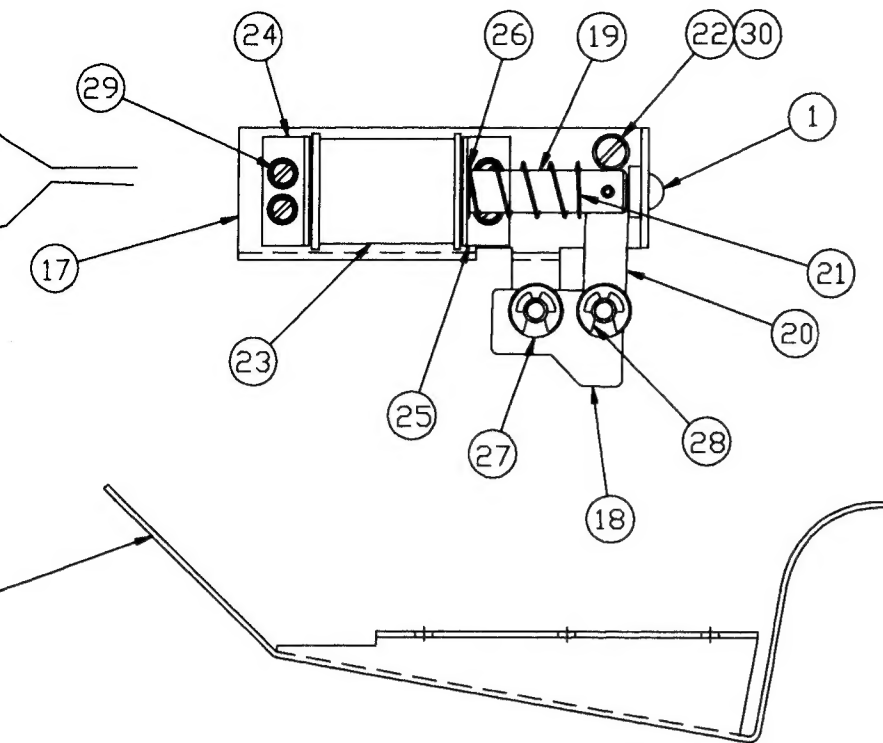

LOCK BALL ASSEMBLY  
500-5684-00  
(ITEMS 17 THRU 31)

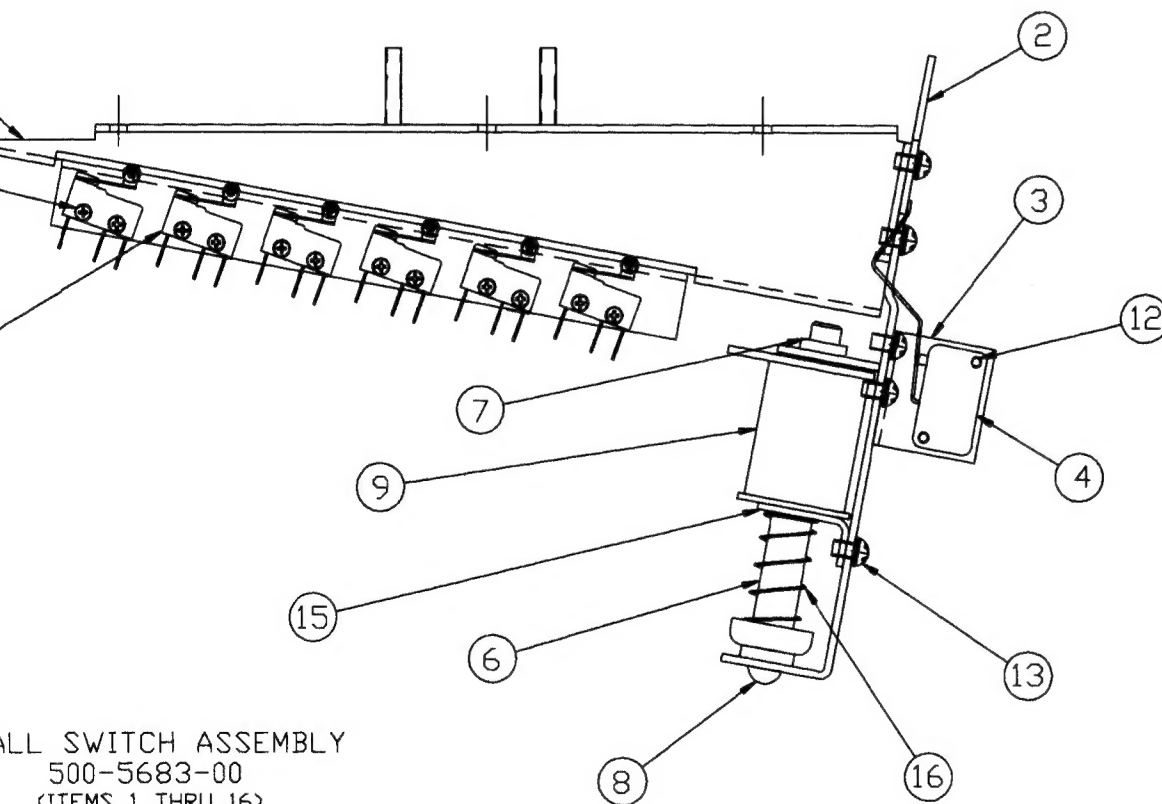

6 BALL SWITCH ASSEMBLY  
500-5683-00  
(ITEMS 1 THRU 16)


TOLERANCE UNLESS  
OTHERWISE NOTED


DIMENSION  
XX ± .005  
XXX ± .010  
XXXX ± .015  
FRACTIONAL ± 1/64  
ANGULAR ± 1/8°

REQ.	NEXT ASSY.	DWN. N.R.VURZ	DATE 4-16-93	TITLE 6 BALL OUT HOLE TROUGH ASSEMBLY
MAT.		CHKD	SCALE 1:1	PART NO.
H.T.				
FIN.				

DATA EAST PINBALL, INC.  
1990 JANICE AVE., MELROSE PARK, IL. 60160

TROFFASY

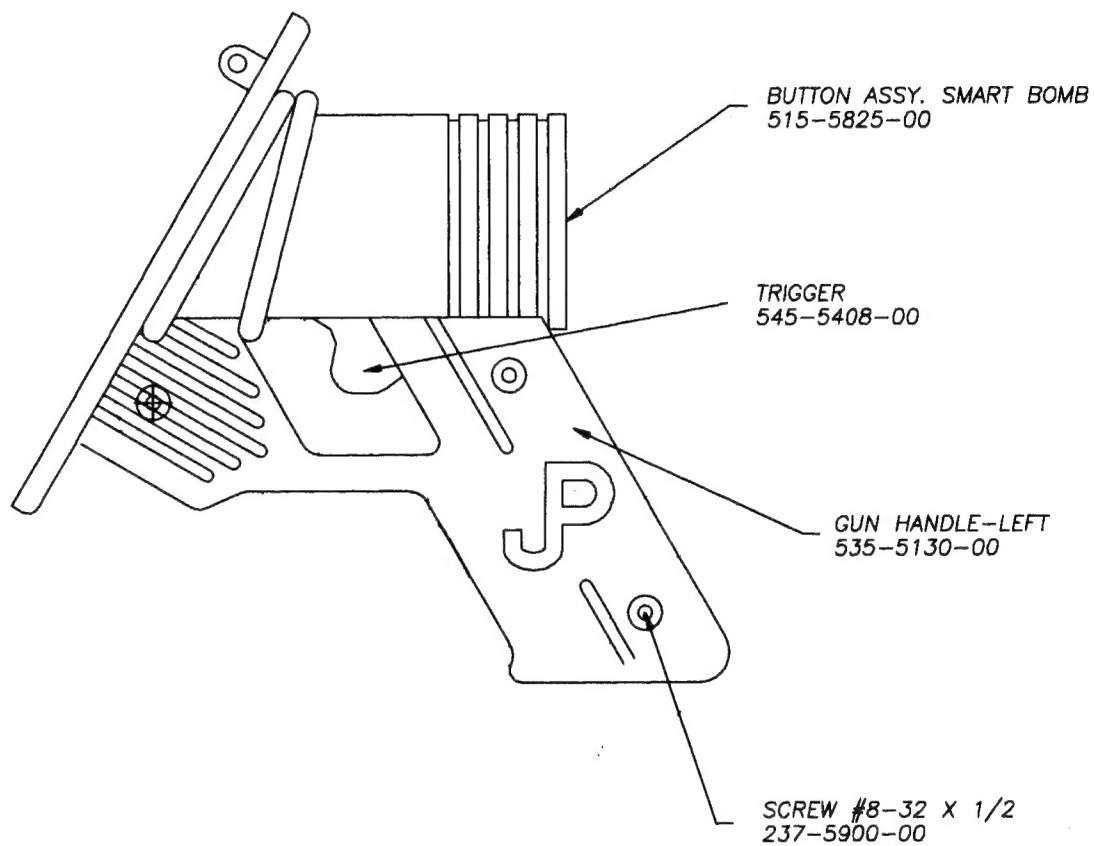

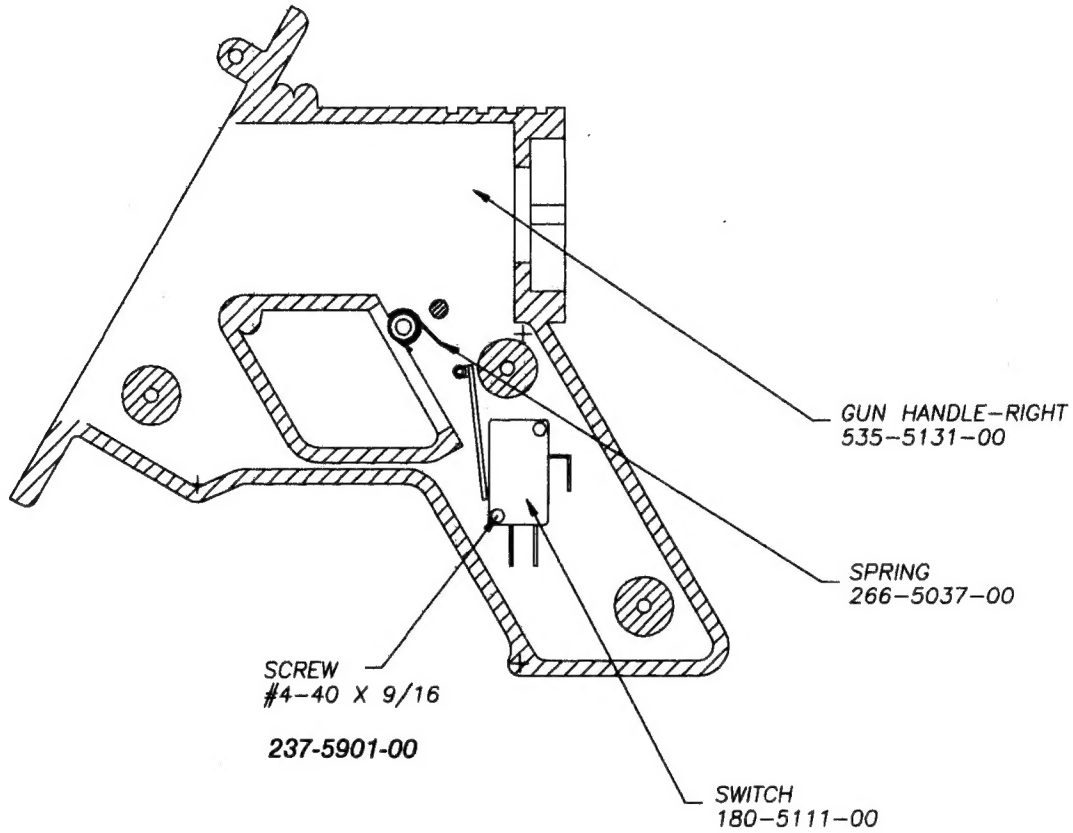

TOLERANCE UNLESS  
 OTHERWISE NOTED  
 DIMENSIONS  
 1:1 & .001  
 2:1 & .002  
 3:1 & .003  
 4:1 & .004  
 5:1 & .005  
 6:1 & .006  
 7:1 & .007  
 8:1 & .008  
 9:1 & .009  
 10:1 & .010  
 12:1 & .012  
 15:1 & .015  
 20:1 & .020  
 25:1 & .025  
 30:1 & .030  
 40:1 & .040  
 50:1 & .050  
 60:1 & .060  
 70:1 & .070  
 80:1 & .080  
 90:1 & .090  
 100:1 & .100  
 120:1 & .120  
 150:1 & .150  
 200:1 & .200  
 250:1 & .250  
 300:1 & .300  
 400:1 & .400  
 500:1 & .500  
 600:1 & .600  
 700:1 & .700  
 800:1 & .800  
 900:1 & .900  
 1000:1 & 1.000

REQ. 1	NEXT ASSY.	DWN. TWS	DATE 4.20.93	TITLE
MAT.		CHK'D	SCALE 1:1	J/P GUN ASS'Y.
H.T.				
FIN.				
DATA EAST PINBALL, INC. 1990 JANICE AVE., MELROSE PARK, IL. 60160				PART NO. 500-5673-00

## **DATA EAST LIMITED WARRANTY**

Data East USA, Inc., ("Seller") warrants only to the initial purchaser of its products that the items listed below are free from defects in material and workmanship under normal use and service for the warranty period specified:

### **PRINTED CIRCUIT BOARDS (GAME LOGIC) 60 DAYS**

No other parts of Seller's product are warranted.

Warranty periods are effective from the initial date of shipment from Seller to its authorized distributors.

Seller's sole liability shall be, at its option, to repair or replace products which are returned to Seller during the warranty periods specified, provided:

1. Seller is notified promptly upon discovery by purchaser that stated products are defective.
2. Such products are properly packaged and then returned freight prepaid, to Seller's plant.

This warranty does not apply to any parts damaged during shipment and/or due to improper handling, or due to improper installation or usage, or alteration. In no event shall the Seller be liable for any anticipated profits, loss of profits, loss of use, accidental or consequential damages or any other losses incurred by the customer in connection with the purchase of a Data East USA, product.

## **WARRANTY DISCLAIMER**

EXCEPT AS SPECIFICALLY PROVIDED IN A WRITTEN CONTRACT BETWEEN SELLER AND PURCHASER, THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

**WARNING**--This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.